

! PLEASE READ THESE INSTRUCTIONS  
BEFORE OPERATION !

# AQUATIC AV®

products with a watertight reputation

## AQ-RF-6UBT WATERPROOF REMOTE CONTROL

### Contents

Please check first that the package contains all of the items below. If something is missing, contact the store where you purchased the product.

- Remote Control RF Handset (AQ-RF-6UBT-T)
- RF Receiver (AQ-RF-6UBT-R)
- Charging Cable

### Charging the Remote Control

The remote has a built-in Polymer Lithium rechargeable battery and comes with a charging cable. Connect one end of the charging cable to the charging connection on remote control and connect the USB end of the charging cable to any USB charger (5V DC) for charging.

Make sure the remote has been charged before used.

### Synchronizing the Remote Control

The remote should already be paired from the factory, but if you need to synchronize the remote, follow the steps below.

1. Connect the receiver dongle to the female DIN connector of the Aquatic AV stereo before the stereo is powered ON.
2. Turn the power to the stereo ON and hold the remote control close to the stereo.
3. Press and hold MODE on remote control until the LCD shows “Pairing in Progress” and then release the button.
4. The remote’s LCD should display “Paired” within 2 seconds to verify pairing has been successful. If it fails to pair, the LCD will display “Retry again”. If this happens, wait 5 seconds and repeat the above procedures.


**i** *If the pairing process is not successful, try again to put your remote close to the remote receiver.*

**i** *Depending on the frequency of usage, the remote may drain its battery. Please charge the remote before use. If the LCD shows nothing, the battery has been drained and will need charging.*

### Remote Control Operation

The AQ-RF-6UBT Remote Control is supported by all Aquatic AV '6-series' stereos however USB and FM radio will only be available if your stereo supports these functions.

For more information please refer to your stereo's user manual.

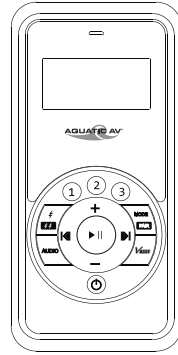

Buttons		AUX Mode	Bluetooth Mode	USB Mode	FM Radio
Power		Press once: Toggle Operational mode to Standby or vice versa			
Mode/ Pair		Press once: Change the mode (audio source) Press and hold: Pair remote with stereo			
Volume Up		Press once: Volume up Press and hold: Fast volume up			
Volume Down		Press once: Volume down Press and hold: Fast volume down			
Fast Forward		Press once: No function Press and hold: No function	Press once: Next track Press and hold: Fast forward		Press once: +0.05kHz Press and hold: Scan up
Fast Rewind		Press once: no function Press and hold: no function	Press once: Previous track Press and hold: Fast rewind		Press once: -0.05kHz Press and hold: Scan down
Play/ Pause		Press once: Toggle Mute Press and hold: no function	Press once: Play/Pause Press and hold: No function		Press once: Toggle Mute Press and hold: no function
1		Press once: no function/activate Pop EQ mode* Press and hold: no function		Press once: Folder up Press and hold: no function	Press once: Preset 1 Press and hold: Save to preset 1
2		Press once: no function/activate Rock EQ mode* Press and hold: no function		Press once: Folder up Press and hold: Random playback	Press once: Preset 2 Press and hold: Save to preset 2
3		Press once: no function/activate Classical EQ mode* Press and hold: no function		Press once: Folder down Press and hold: no function	Press once: Preset 3 Press and hold: Save to preset 3
EXT Trigger		Press once: External Trigger 1 Press and hold: External Trigger 2			
Audio		Press once: Enter Audio menu Press and hold: Save and exit Audio menu			
VBass		Press once: Toggle Virtual Bass On or Off Press and hold: no function			

**i** If your music player is connected via the AUX input you will be unable to control track or receive track information.

**i** To prevent battery life the LCD will shut off after 5 seconds if no other button is pressed. To turn back on press any button once.

**i** DSP (Pop, Rock and Classical) will be turned off when bass and treble are set.

**i** When in Bluetooth mode, Repeat and Random playback must be enabled on your device for correct operation.

**i** \*Applies to Aquatic AV stereo models AQ-BC-6BT and AQ-DM-6BT.

**i** The Audio menu must be exited before using all other modes.