

AURORA

Installation guide
Outdoor Sauna: Mira S with CLT

To follow the Mira S CLT installation process by video,
please SCAN HERE:



Table of contents:

Phase 1	Preparation	4
Phase 2	Foundation	17
Phase 3	Flooring	22
Phase 4	Walls	29
Phase 5	Roofing	43
Phase 6	Exterior walls	51
Phase 7	Finishing the interior walls	67
Phase 8	Interior	69
Phase 9	Front glass	80
Phase 10	Finishing the exterior walls	94
Phase 11	Finishing the roof	102

Phase 1:


Preparation



I



Please inspect the packages for any signs of damage before signing for your delivery. Be sure to take pictures of even the slightest damage, and make a note on the delivery receipt as well.

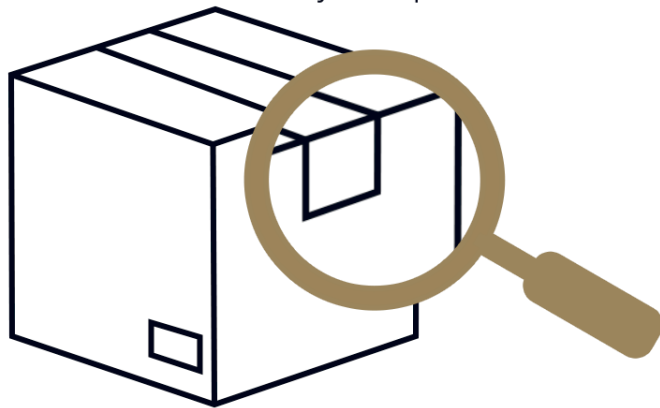

AURROOM

II



Flooring

F-EPDM - EPDM floor (1 pc)

F1 - Floor 1 (1 pc)

F2 - Floor 2 (1 pc)

BB1-BB3 - Base beams (3 pcs)

DTC - Drain cover (2 pcs)



If anything is missing or damaged, please contact your local Auroom reseller.

Walls

- CL1** - Ceiling 1 (1 pc)
- CL2** - Ceiling 2 (1 pc)
- AIW1** - Interior wall panel A1 (1 pc)
- AIW2** - Interior wall panel A2 (1 pc)
- BIW1** - Interior wall panel B1 (1 pc)
- BIW2** - Interior wall panel B2 (1 pc)
- CIW1** - Interior wall panel C1 (1 pc)
- CIW2** - Interior wall panel C2 (1 pc)
- CP1** - External corner frame CP1 (1 pc)
- CP2** - External corner frame CP2 (1 pc)
- BSB1-BSB3** - Bottom side boards (3 pcs)



If anything is missing or damaged, please contact your local Auroom reseller.

Roofing

R-EPDM - EPDM roof (1 pc)


RO1/RO2 - Roof OSB boards (2 pcs)

RSB1-RSB4 - Roof sloping beams (4 pcs)

REB1-REB3 - Roof edge beams (3 pcs)

RDE - Roof drip edge (1 pc)


RF1-RF3 - Roof flashings (3 pcs)

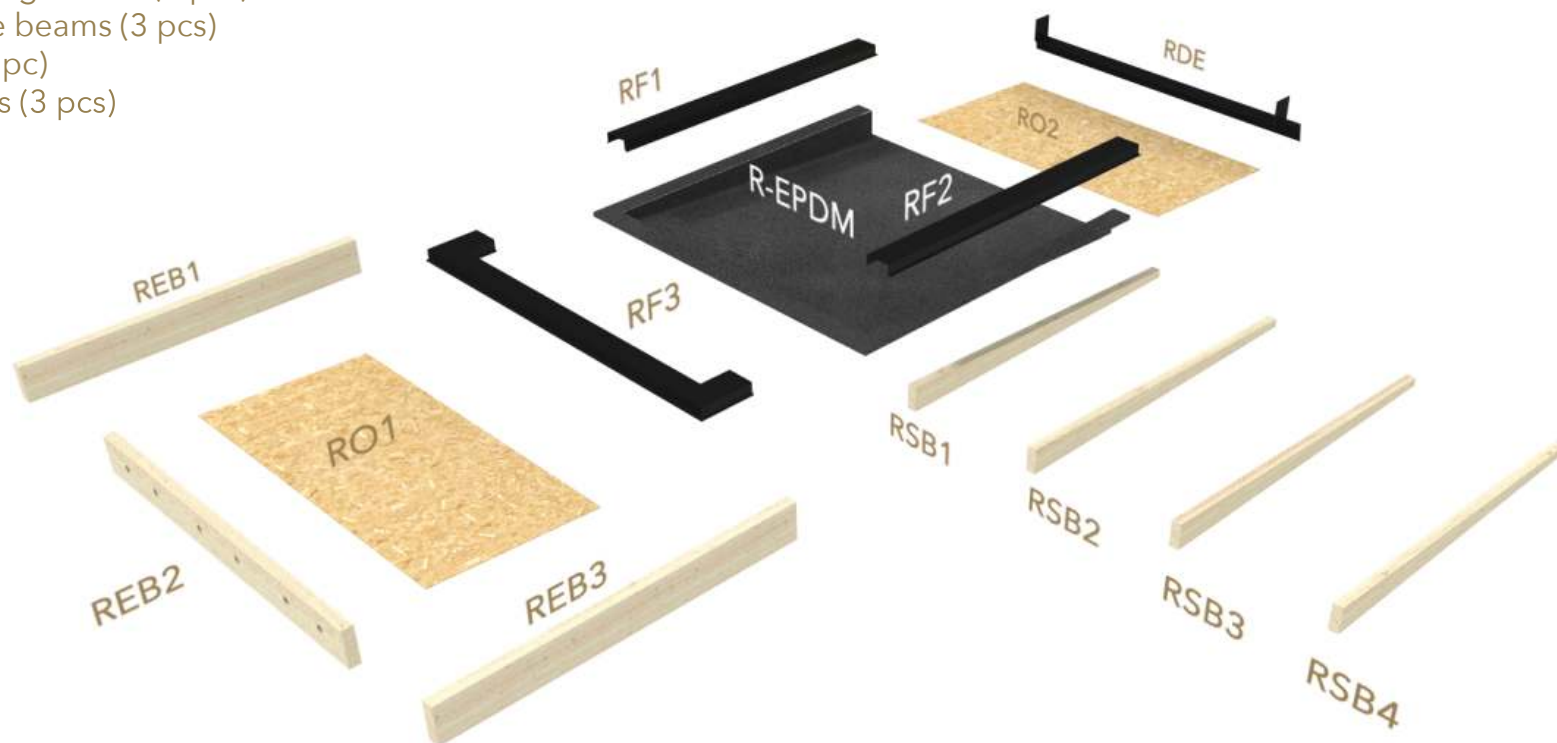

If anything is missing or damaged, please contact your local Auroom reseller.

Exterior walls


- CM1** - External corner moulding CM1 (1 pc)
- CM2** - External corner moulding CM2 (1 pc)
- CM3** - External corner moulding CM3 (1 pc)
- CM4** - External corner moulding CM4 (1 pc)
- AEW1** - Exterior wall panel A1 (1 pc)
- BEW1** - Exterior wall panel B1 (1 pc)
- CEW1** - Exterior wall panel C1 (1 pc)
- AEW2** - Exterior wall panel A2 (1 pc)
- BEW2** - Exterior wall panel B2 (1 pc)
- CEW2** - Exterior wall panel C2 (1 pc)
- AEW3** - Exterior wall panel A3 (1 pc)
- BEW3** - Exterior wall panel B3 (1 pc)
- CEW3** - Exterior wall panel C3 (1 pc)
- DLWS** - Lower panel element D (1 pc)
- DUWS** - Upper panel element D (1 pc)
- DLP** - Left panel element D (1 pc)
- DRP** - Right panel element D (1 pc)
- RBB** - Rear wall bottom board (1 pc)
- RTB** - Rear wall top board (1 pc)
- SBB1/SBB2** - Side wall bottom boards (2 pcs)
- STB1/STB2** - Side wall top boards (2 pcs)
- FSB1-FSB6** - Front wall small loose boards (6 pcs)

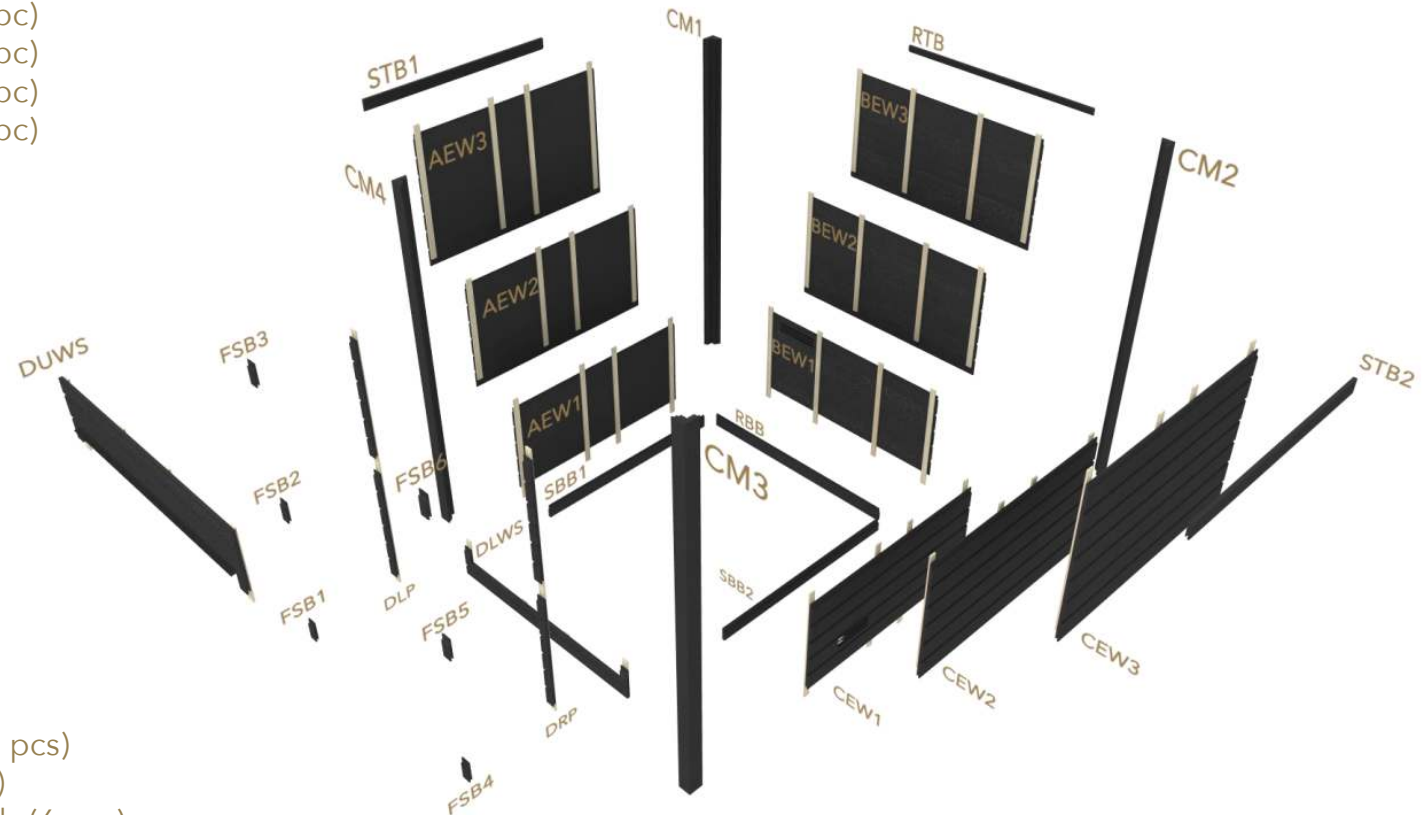

If anything is missing or damaged, please contact your local Auroom reseller.

Interior

- HG** - Heater guard (1 pc)
- HGH1/HGH2** - Heater guard holders (2 pcs)
- US1/US2** - Upper bench supports (2 pcs)
- LS1** - Lower bench supports (1 pcs)
- FG1-FG4** - Floor grates (4 pcs)
- BF1** - Bench frame 1 (1 pc)
- BF2** - Bench frame 2 (1 pc)
- BG1** - Bench grid 1 (1 pc)
- BG2** - Bench grid 2 (1 pc)
- BS1-BS2** - Bench skirt (1 pc)
- BR** - Backrest (1 pc)
- BRS1-BRS2** - Backrest supports (2 pcs)

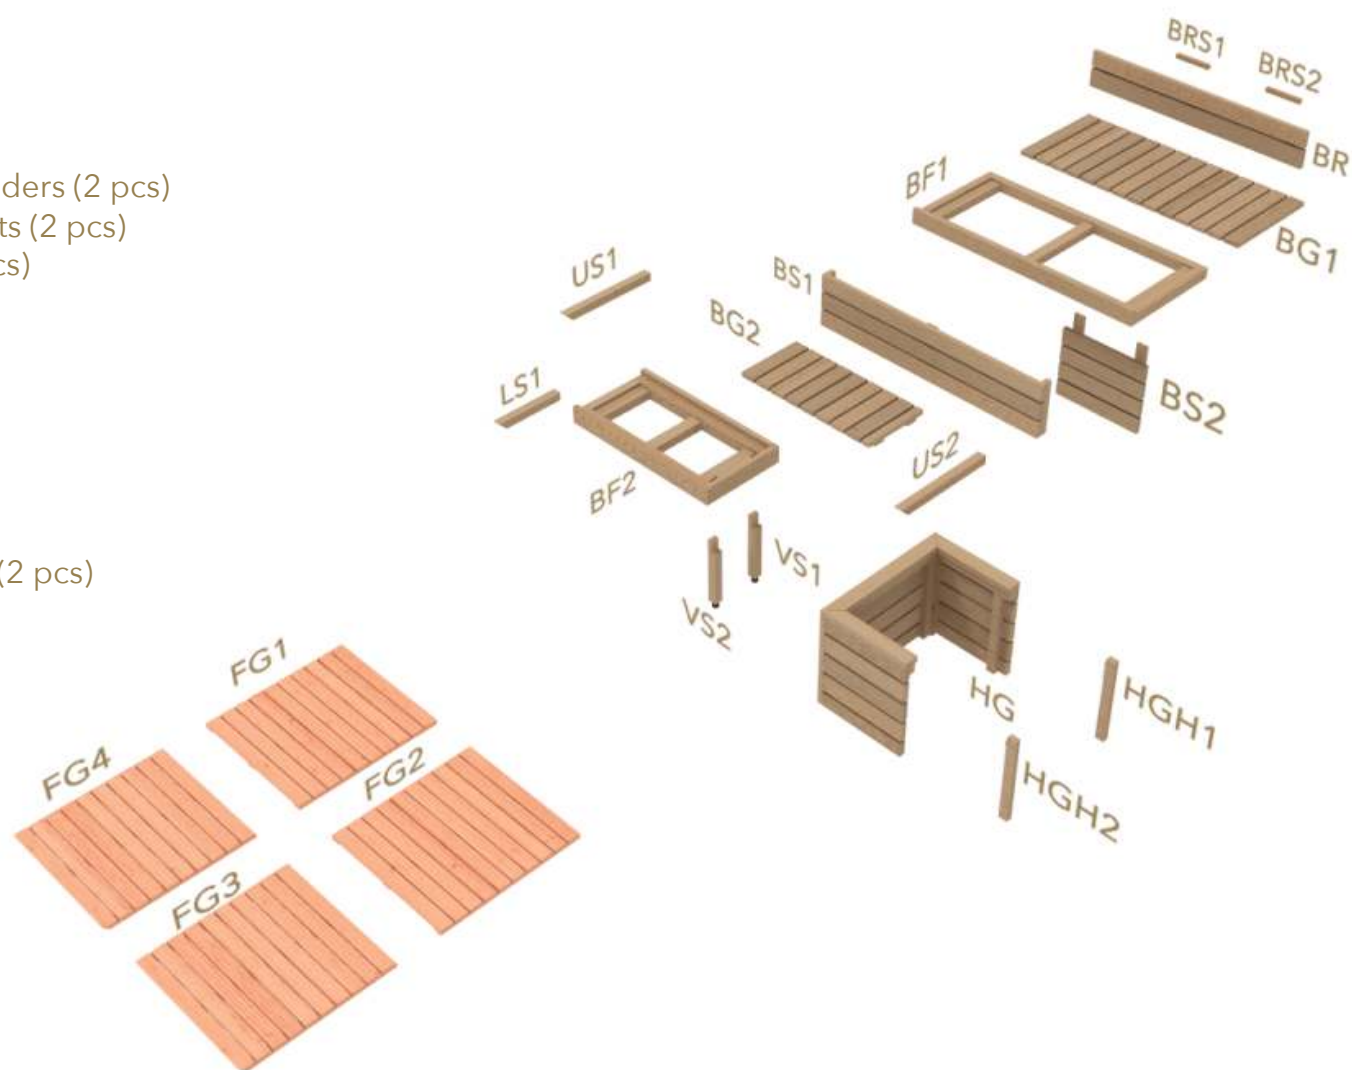

If anything is missing or damaged, please contact your local Auroom reseller.

Front glass

- W1** - Window 1 (1 pc)
- DF** - Door with hinges (1 pc)
- DG** - Door glass (1 pc)
- DW1/DW2** - Door frame details (2 pcs)
- DH** - Door handle (1 pc)
- GDS** - Glass door stopper (1 pc)
- GDH1/GDH2** - Glass door hinges (2 pcs)
- GDG** - Glass door gaskets (2 pcs)



If anything is missing or damaged, please contact your local Auroom reseller.



THE SAUNA PACKAGE INCLUDES:

Firestone EPDM Adhesive

Firestone EPDM QuickPrime

Repair paint

EPDM tape

Tape for wind barrier fabric

EXTRA material and screw set

NOTE: If anything is missing or damaged, please contact your local Auroom reseller.

TOOLS REQUIRED FOR INSTALLING EPDM RUBBER:

Penny roller and rubber roller

Roller for gluing

Sweeping brush

Cutter

TOOLS REQUIRED FOR INSTALLING THE SAUNA:

Cordless drill

TORX driver bit set

Drill bit set

Ladder

Claw lever

Spirit level

Tape measure

Hammer

Hex key

Screwdriver set



STAINLESS STEEL TORX SCREWS:	TORX HEAD REQUIRED:	TOTAL QUANTITY:	REQUIRED FOR:	QUANTITY REQUIRED:
6 x 120 mm: (0.24 x 4.72 in)	T 30	100 pcs	Floor elements (F1 / F2) Wall corners Bench frames (BF1 / BF2) Roof beams (RSB 1 - 4 + REB 1 - 3) Ceiling elements (CL 1 - 2)	13 pcs 34 pcs 14 pcs 22 pcs 10 pcs
5 x 80 mm: (0.20 x 3.15 in)	T 25	35 pcs	Wall middle connection Roof middle connection Roof beams (RSB 1 - 4) Bench supports (US 1 - 2 / LS)	12 pcs 4 pcs 8 pcs 8 pcs
5 x 60 mm: (0.19 x 2.36 in)	T 20	90 pcs	Glasswall (W1/DW1-2/DF) Exterior cladding Heater guard holders US (HGH)	20 pcs 58 pcs 4 pcs
4 x 40 mm: (0.15 x 1.57 in)	T 20	20 pcs	Backrest supports (BRS) Backrest (BR) Bench skirt (BS1) Heater guard holders (HGH) Vertical support (VS)	4 pcs 2 pcs 4 pcs 4 pcs 2 pcs
4 x 30 mm: (0.16 x 1.18 in)	T 20	25 pcs	OSB boards (RO1/2) Bench skirt (BS2) Glass door magnetic stopper (GDS)	16 pcs 2 pcs 2 pcs
3x20 mm: (0.12 x 0.78 in)	T 20	8 pcs	Ventilation grid (VG)	6 pcs
Exterior screws 5 x 75 mm: (0.2 x 2.95 in)	T 20	70 pcs	Corner mouldings (CM 1 - 4) Exterior cladding (*BB/*TB/*SB)	32 pcs 32 pcs
Brown screws 5 x 60 mm: (0.19 x 2.36 in)	T 20	15 pcs	Loose cladding (BSB)	12 pcs
Flat stain screws:	T 20	8 pcs	Raindrop stain (RDE)	6 pcs
Black stain screws:	T 20	15 pcs	Roof stains (RF)	12 pcs
Flat wooden covers:	T 20	20 pcs	Glasswall (W1/DW1-2)	16 pcs

NOTE: The package contains extra screws and nails.

Mira S with CLT | Installation team & Reminders



Professional carpenters required: 2-4



Professional electricians required: 1



Handle the wood panels with care



Maintain cleanliness




Take safety precautions

Phase 2:


Foundation



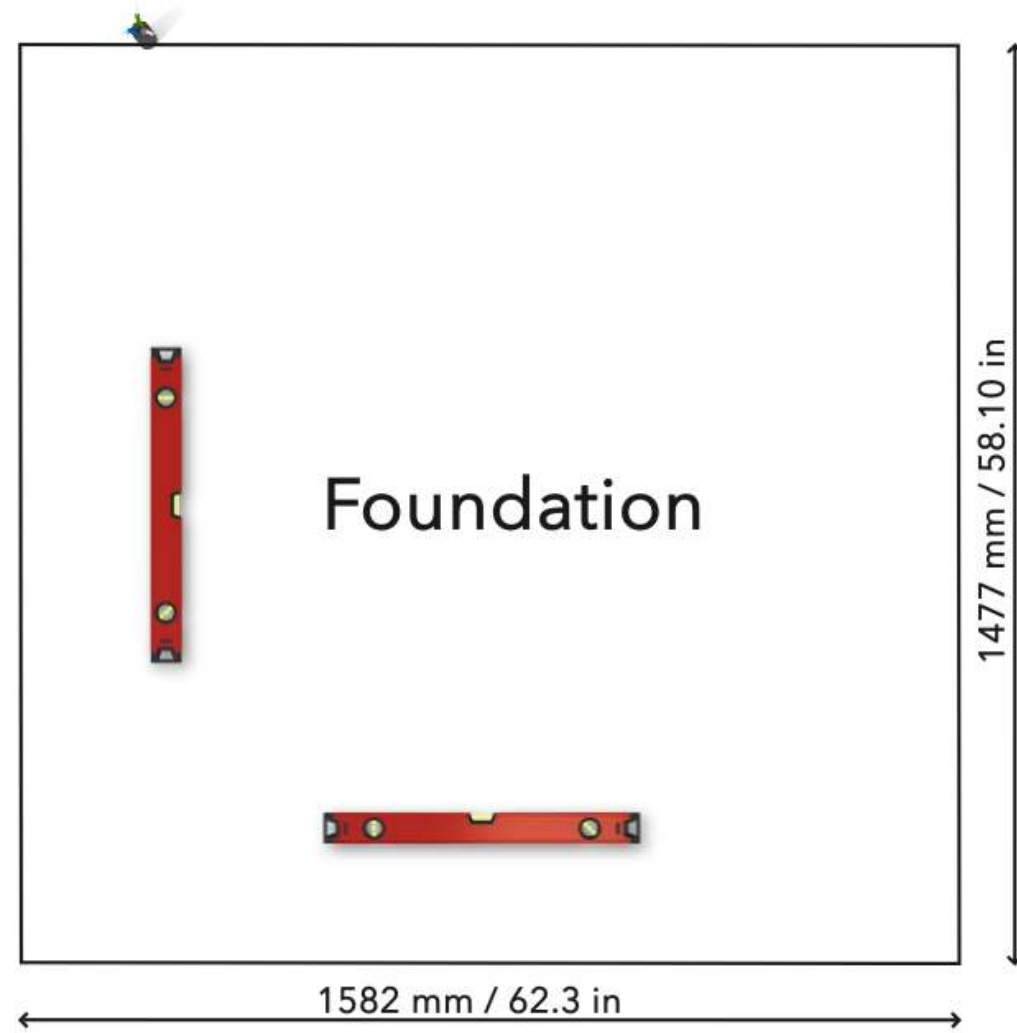



Front side

Installation location of the electric shield
200 mm

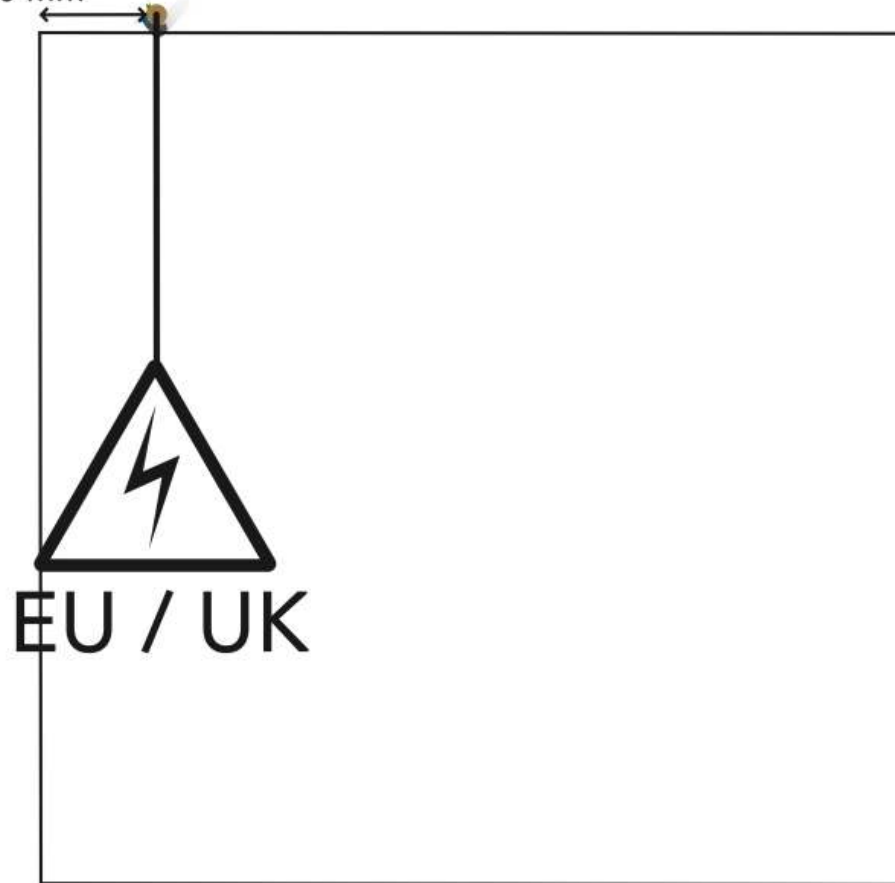


Front side

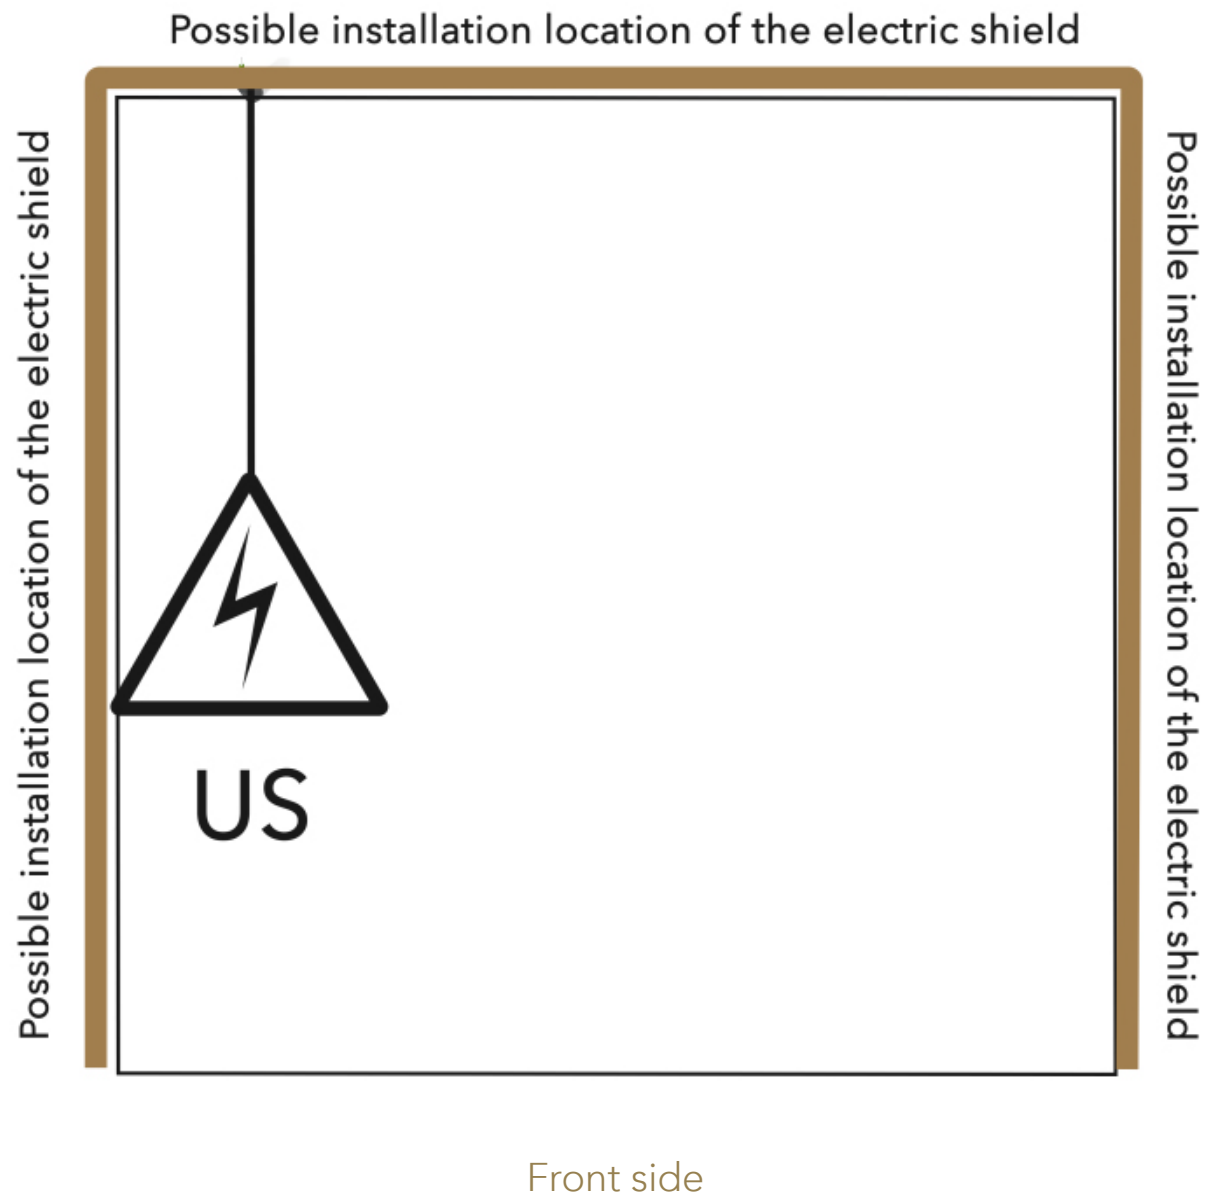

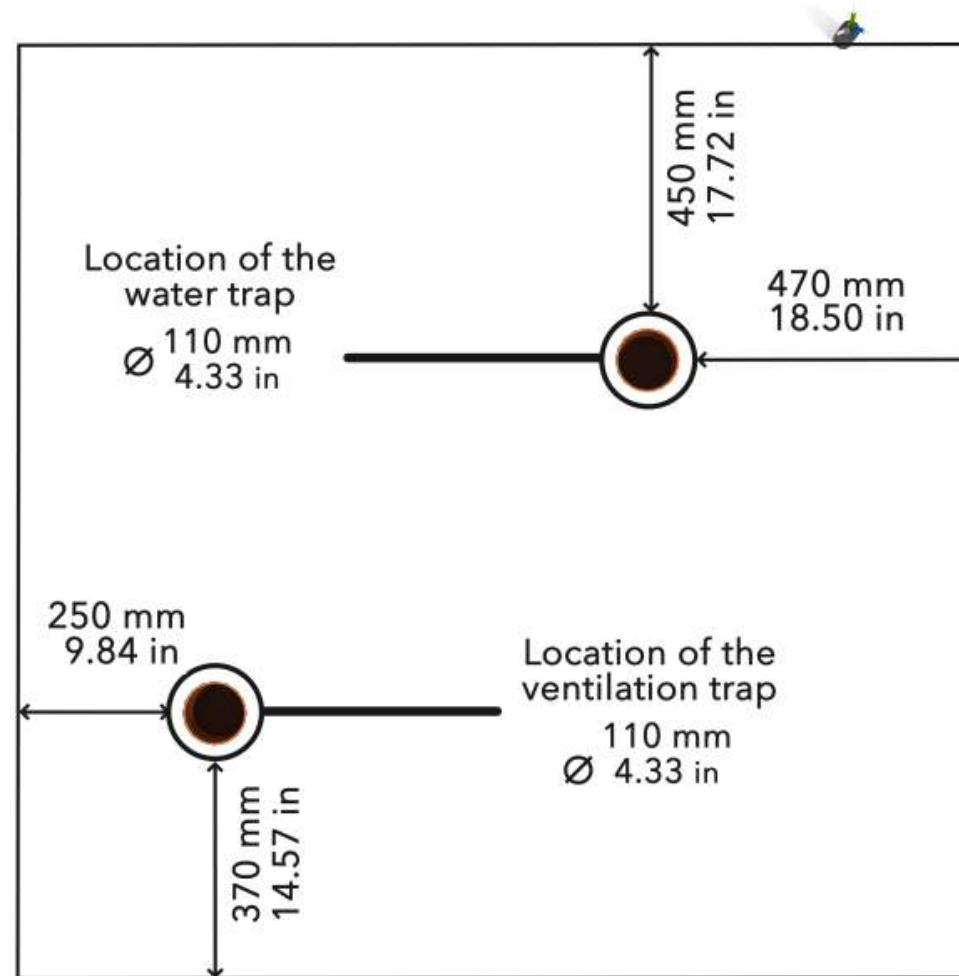


Front side


Phase 3: **Flooring**

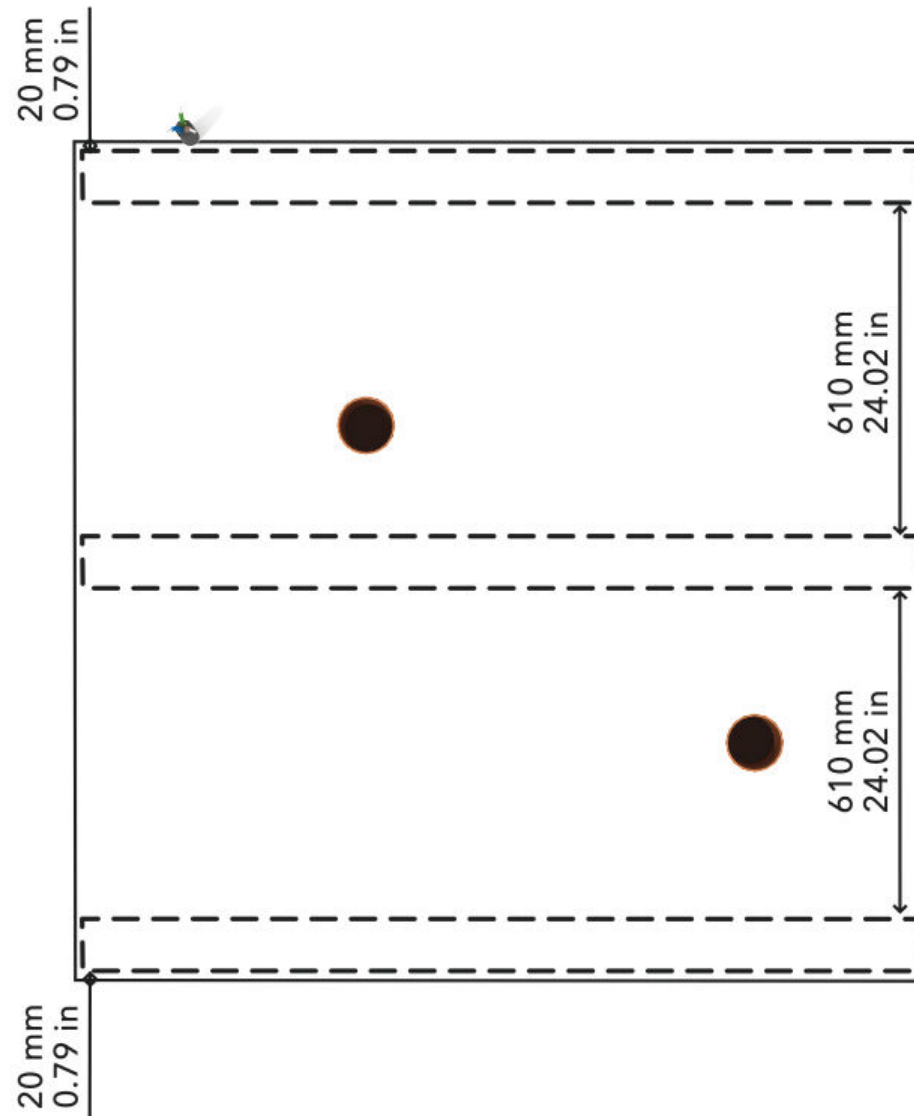

Front side

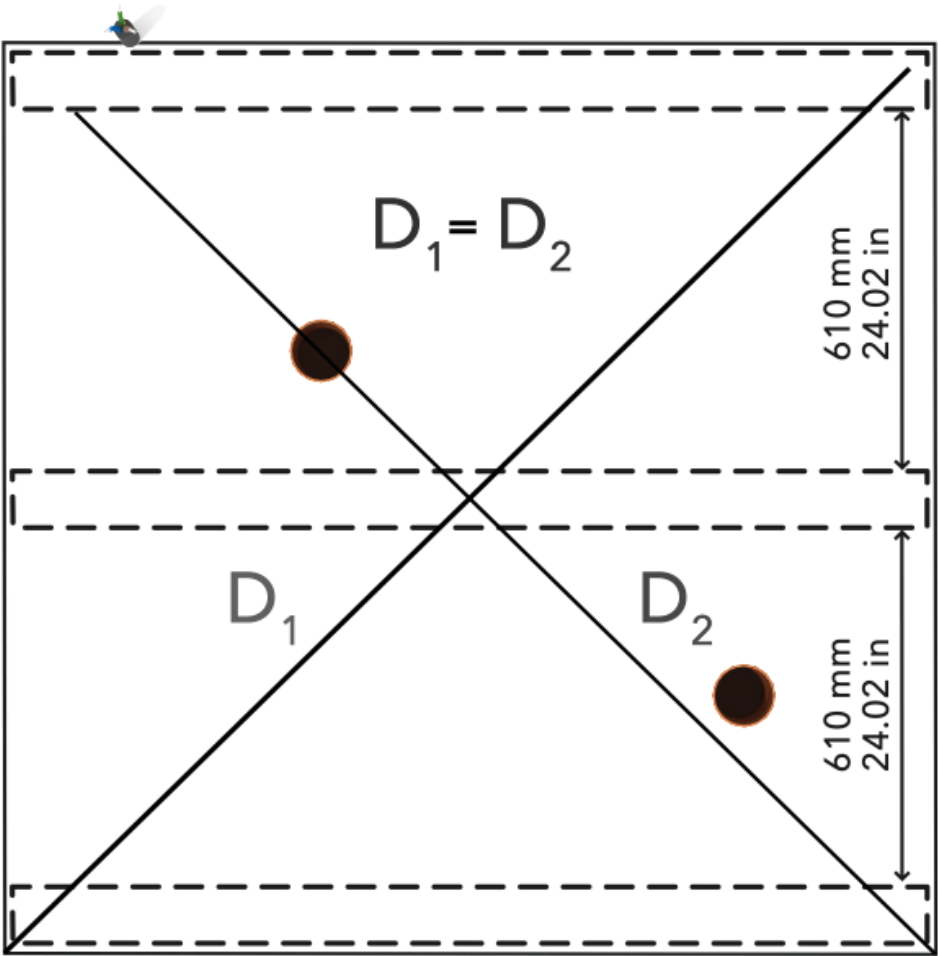


Front side

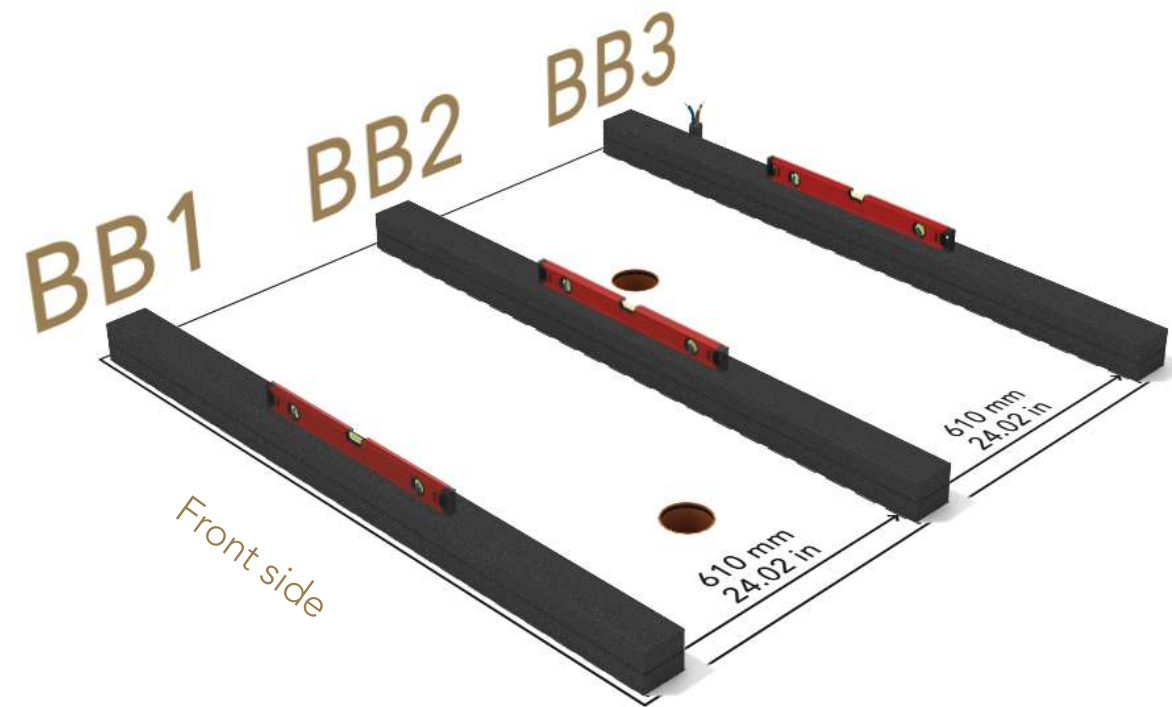

Checklist

- ✓ BB1
- ✓ BB2
- ✓ BB3
- F1
- F2
- F-EPDM
- DTC

Mira S with CLT | Flooring

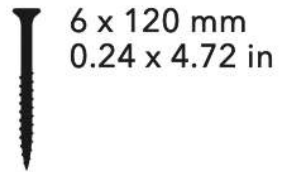

Checklist

- ✓ BB1
- ✓ BB2
- ✓ BB3
- ✓ F1
- ✓ F2
- F-EPDM
- DTC

After the EPDM adhesive is applied, a drying period of 15 - 20 minutes is required. Ensure the surfaces are dry to the touch before bonding.



Please follow safety precautions for EPDM rubber installation.

Mira S with CLT | Flooring



Apply EPDM to one half at a time



Checklist

- ✓ BB1
- ✓ BB2
- ✓ BB3
- ✓ F1
- ✓ F2

F-EPDM
DTC

The EPDM rubber flooring installation is carried out in two stages, covering the first half of the floor and then the second half.

Before applying adhesive, ensure that both the EPDM rubber and the floor surfaces are clean and free from dust.

- Fold half of the EPDM back on itself. Apply a thin layer of adhesive to both the EPDM rubber and the floor by using the mini roller.
- Once the adhesive no longer feels tacky, roll and smooth the EPDM rubber onto the floor. Using a broom smooths out creases or bubbles.
- Repeat the process on the other half.
- Trim off any excess rubber if necessary

AURROOM

Mira S with CLT | Flooring

After the EPDM adhesive is applied, a drying period of 15 - 20 minutes is required. Ensure the surfaces are dry to the touch before bonding.



Please follow safety precautions for EPDM rubber installation.




Checklist

- ✓ BB1
- ✓ BB2
- ✓ BB3
- ✓ F1
- ✓ F2
- ✓ F-EPDM
- ✓ DTC

Phase 4:
Walls


Mira S with CLT | Walls

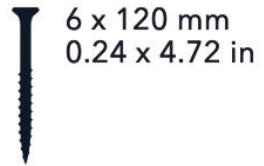

Checklist

- ✓ BIW1
- AIW1
- CIW1
- BIW2
- CIW2
- AIW2
- CP1
- CP2
- CL1
- CL2



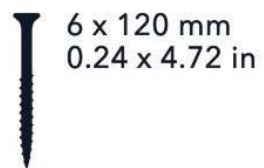


Checklist

- ✓ BIW1
- ✓ AIW1
- CIW1
- BIW2
- CIW2
- AIW2
- CP1
- CP2
- CL1
- CL2




Mira S with CLT | Walls

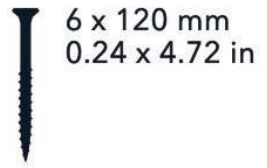

Checklist

- ✓ BIW1
- ✓ AIW1
- ✓ CIW1
- BIW2
- CIW2
- AIW2
- CP1
- CP2
- CL1
- CL2



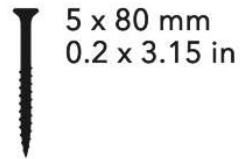


Checklist

- ✓ BIW1
- ✓ AIW1
- ✓ CIW1
- ✓ BIW2
- CIW2
- AIW2
- CP1
- CP2
- CL1
- CL2



Mira S with CLT | Walls

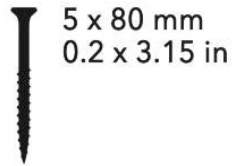

Checklist

- ✓ BIW1
- ✓ AIW1
- ✓ CIW1
- ✓ BIW2
- ✓ CIW2
- AIW2
- CP1
- CP2
- CL1
- CL2



After installation, apply tape to seal the joints between the elements.


Mira S with CLT | Walls

Checklist

- ✓ BIW1
- ✓ AIW1
- ✓ CIW1
- ✓ BIW2
- ✓ CIW2
- AIW2
- CP1
- CP2
- CL1
- CL2




Mira S with CLT | Walls

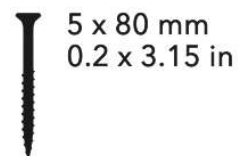

Checklist


- ✓ BIW1
- ✓ AIW1
- ✓ CIW1
- ✓ BIW2
- ✓ CIW2
- ✓ AIW2
- CP1
- CP2
- CL1
- CL2



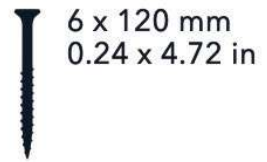

Checklist

- ✓ BIW1
- ✓ AIW1
- ✓ CIW1
- ✓ BIW2
- ✓ CIW2
- ✓ AIW2
- CP1
- CP2
- CL1
- CL2

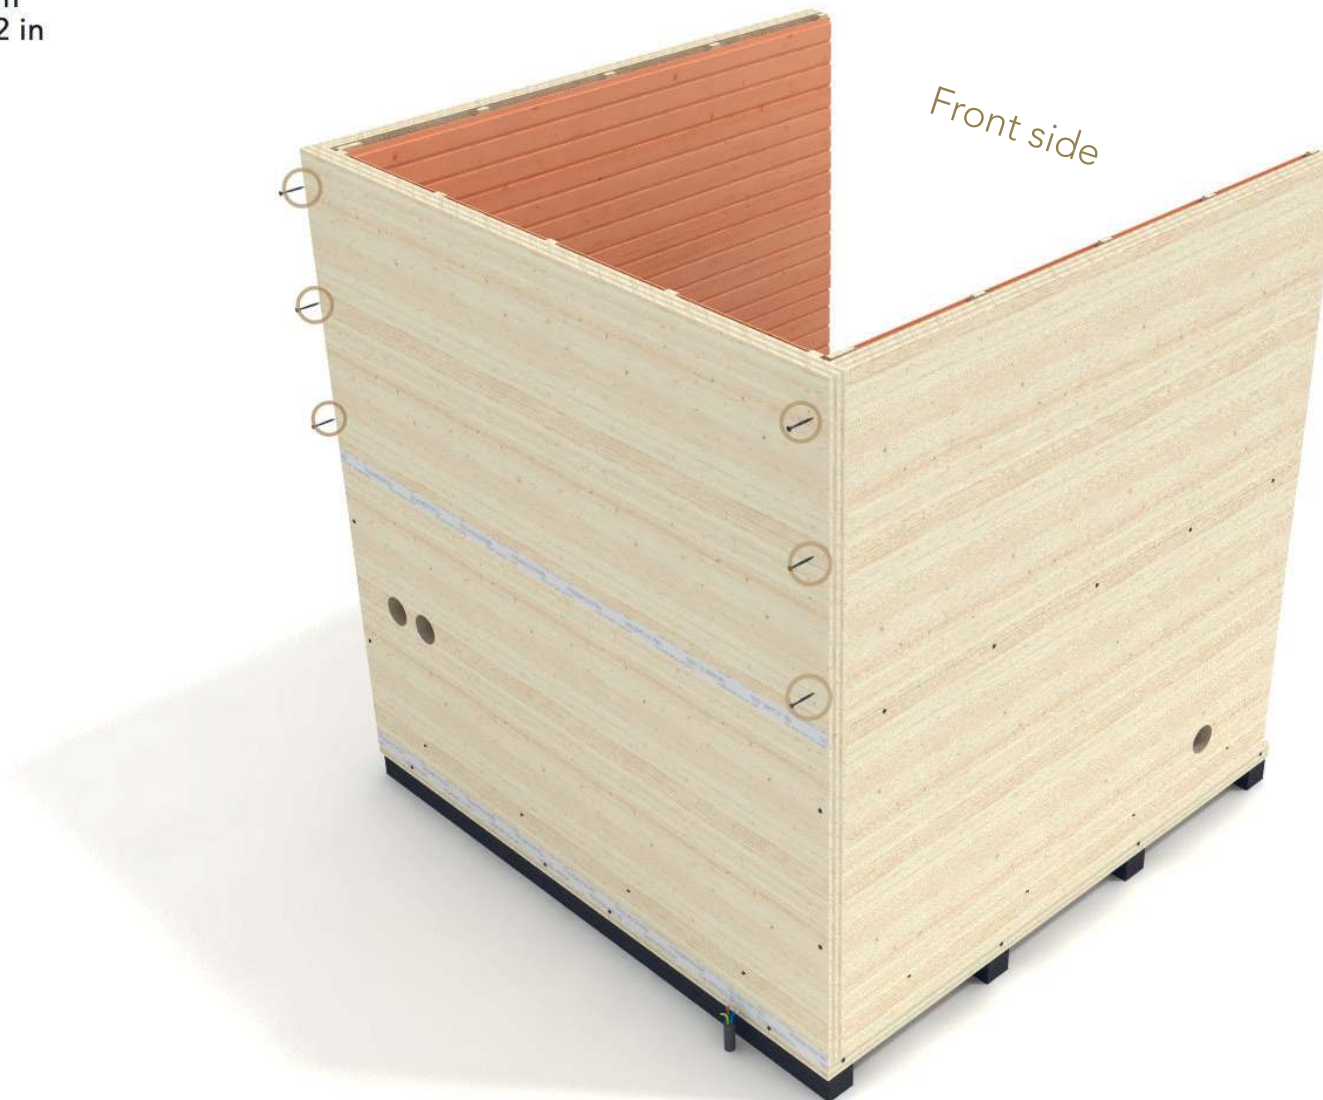



After installation, apply tape to seal the joints between the elements.

Front side

Checklist


- ✓ BIW1
- ✓ AIW1
- ✓ CIW1
- ✓ BIW2
- ✓ CIW2
- ✓ AIW2
- CP1
- CP2
- CL1
- CL2

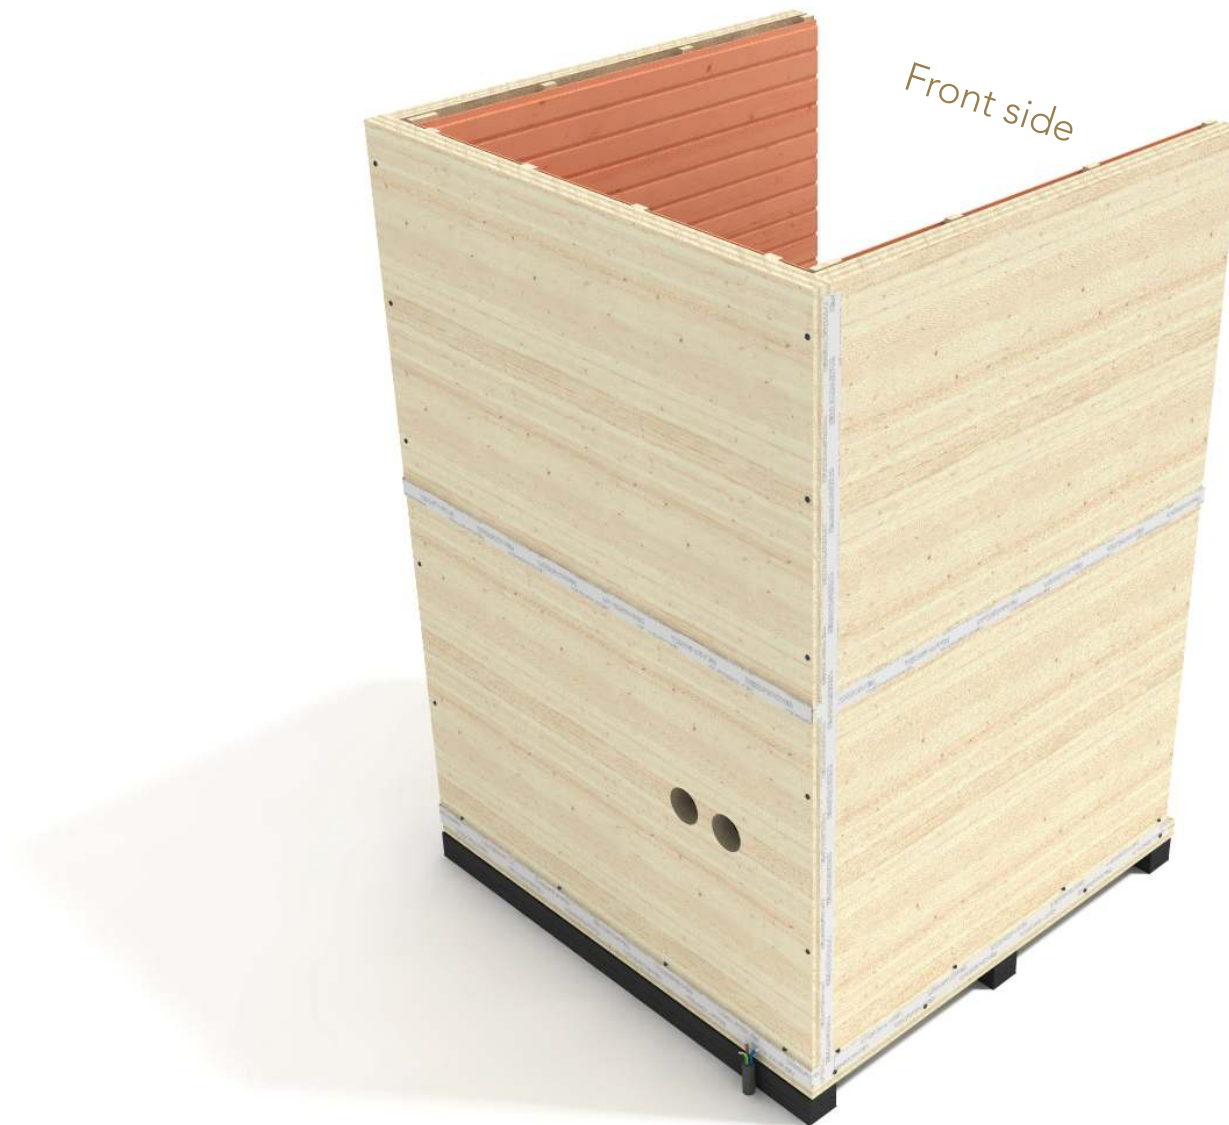

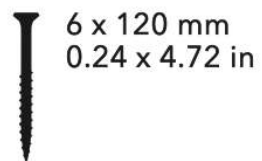

Checklist

- ✓ BIW1
- ✓ AIW1
- ✓ CIW1
- ✓ BIW2
- ✓ CIW2
- ✓ AIW2
- ✓ CP1
- ✓ CP2
- CL1
- CL2

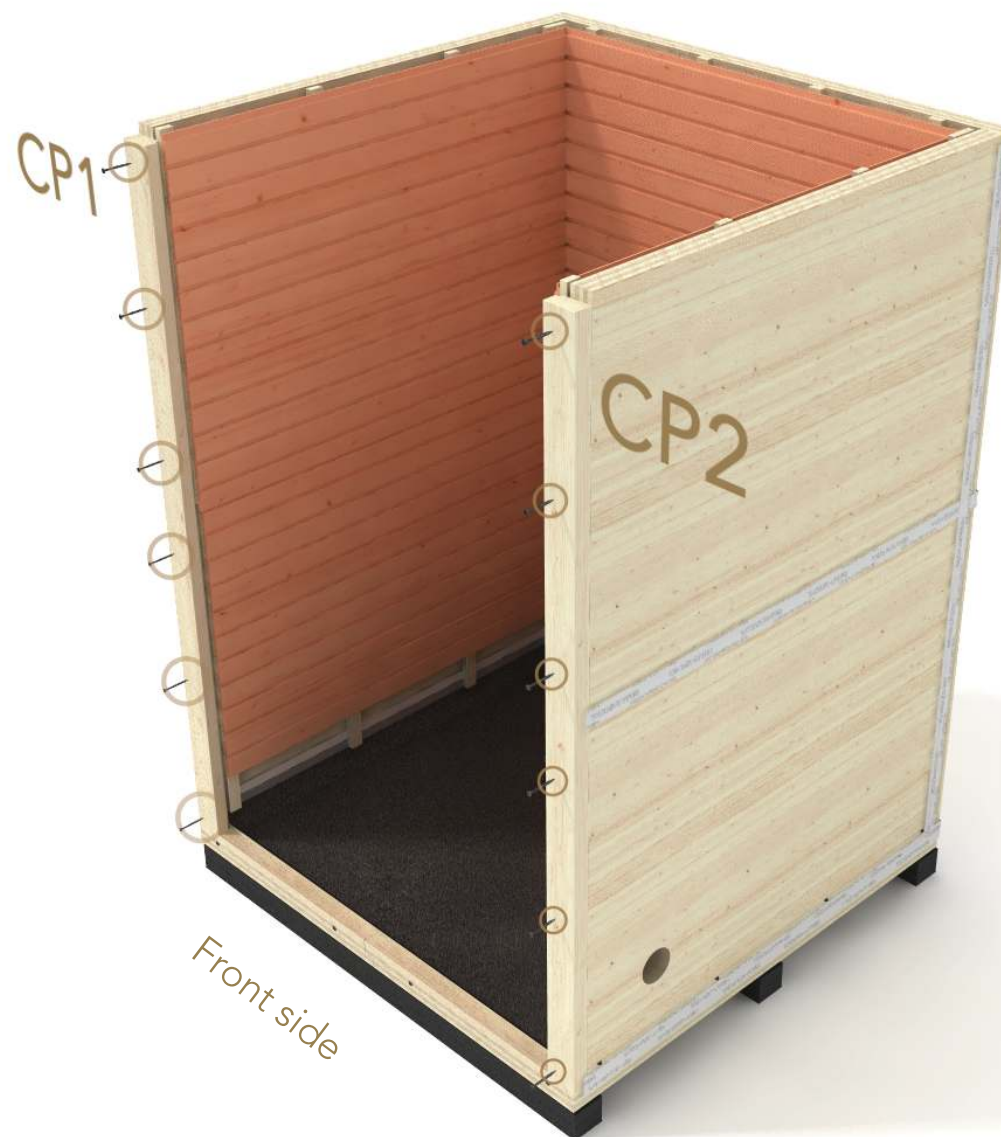


Mira S with CLT | Walls

After installation, apply tape to seal the joints between the elements.

Checklist

- ✓ BIW1
- ✓ AIW1
- ✓ CIW1
- ✓ BIW2
- ✓ CIW2
- ✓ AIW2
- ✓ CP1
- ✓ CP2
- CL1
- CL2



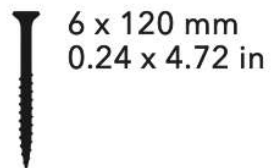


Checklist

- ✓ BIW1
- ✓ AIW1
- ✓ CIW1
- ✓ BIW2
- ✓ CIW2
- ✓ AIW2
- ✓ CP1
- ✓ CP2
- ✓ CL1
- ✓ CL2



Mira S with CLT | Walls

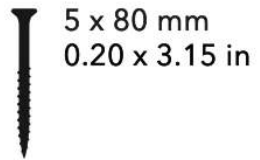

Checklist


- ✓ BIW1
- ✓ AIW1
- ✓ CIW1
- ✓ BIW2
- ✓ CIW2
- ✓ AIW2
- ✓ CP1
- ✓ CP2
- ✓ CL1
- ✓ CL2




Phase 5:

Roofing

Mira S with CLT | Roofing

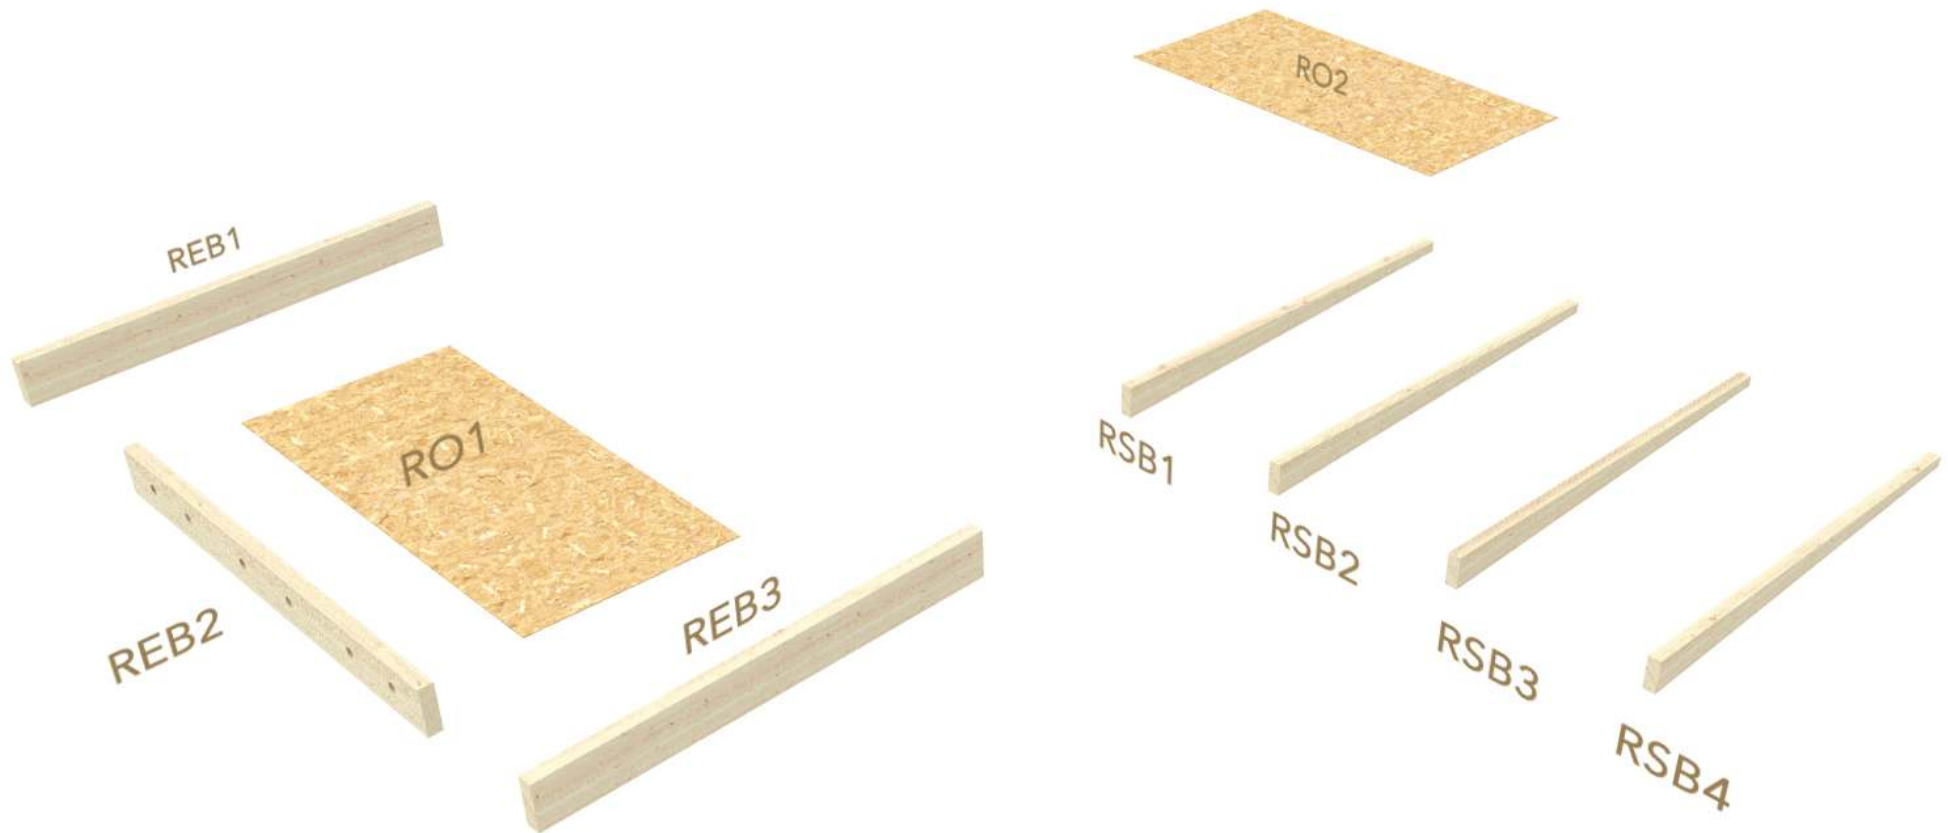

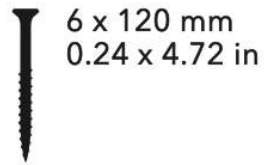

Checklist

- ✓ REB1
- ✓ REB2
- ✓ REB3
- ✓ RSB1
- ✓ RSB2
- ✓ RSB3
- ✓ RSB4
- RO1
- RO2

Mira S with CLT | Roofing




6 x 120 mm
0.24 x 4.72 in

Checklist

- ✓ REB1
- ✓ REB2
- ✓ REB3
- ✓ RSB1
- ✓ RSB2
- ✓ RSB3
- ✓ RSB4
- RO1
- RO2



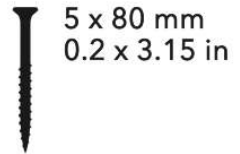

Checklist

- ✓ REB1
- ✓ REB2
- ✓ REB3
- ✓ RSB1
- ✓ RSB2
- ✓ RSB3
- ✓ RSB4
- RO1
- RO2



Mira S with CLT | Roofing



5 x 80 mm
0.2 x 3.15 in

Checklist

- ✓ REB1
- ✓ REB2
- ✓ REB3
- ✓ RSB1
- ✓ RSB2
- ✓ RSB3
- ✓ RSB4
- RO1
- RO2



Checklist

- ✓ REB1
- ✓ REB2
- ✓ REB3
- ✓ RSB1
- ✓ RSB2
- ✓ RSB3
- ✓ RSB4
- RO1
- RO2



Mira S with CLT | Roofing



4 x 30 mm
0.16 x 1.18 in


Checklist

- ✓ REB1
- ✓ REB2
- ✓ REB3
- ✓ RSB1
- ✓ RSB2
- ✓ RSB3
- ✓ RSB4
- ✓ RO1
- ✓ RO2




Phase 6:

Exterior walls

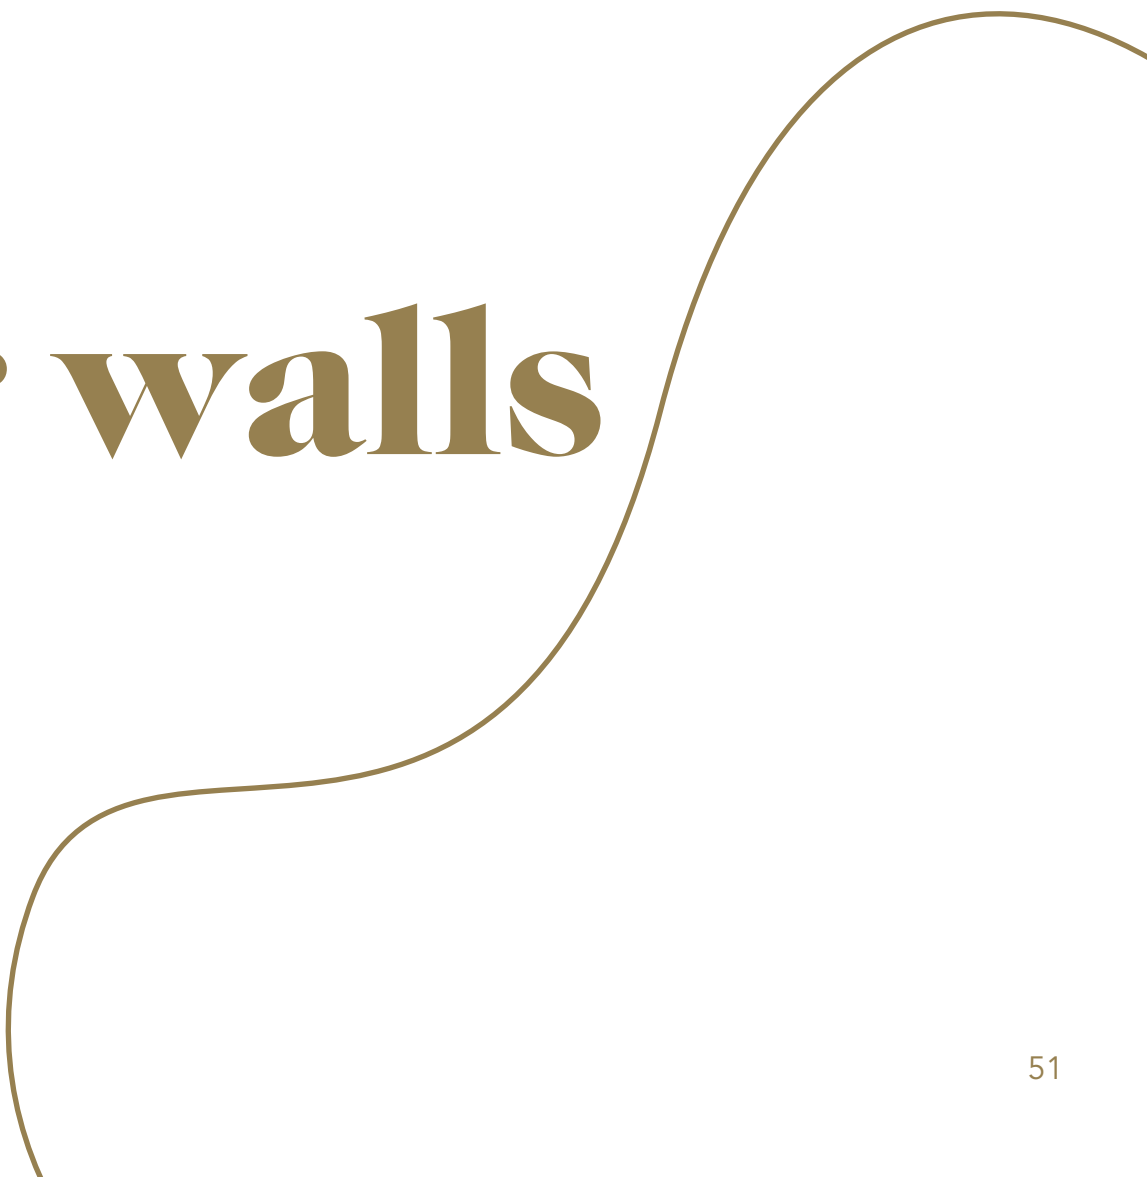



Mira S with CLT | Exterior walls

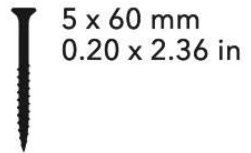

Checklist

- ✓ CEW1
- ✓ CEW2
- CEW3
- SBB2
- STB2
- BEW1
- BEW2
- BEW3
- RBB
- RTB
- AEW1
- AEW2
- AEW3
- SBB1
- STB1

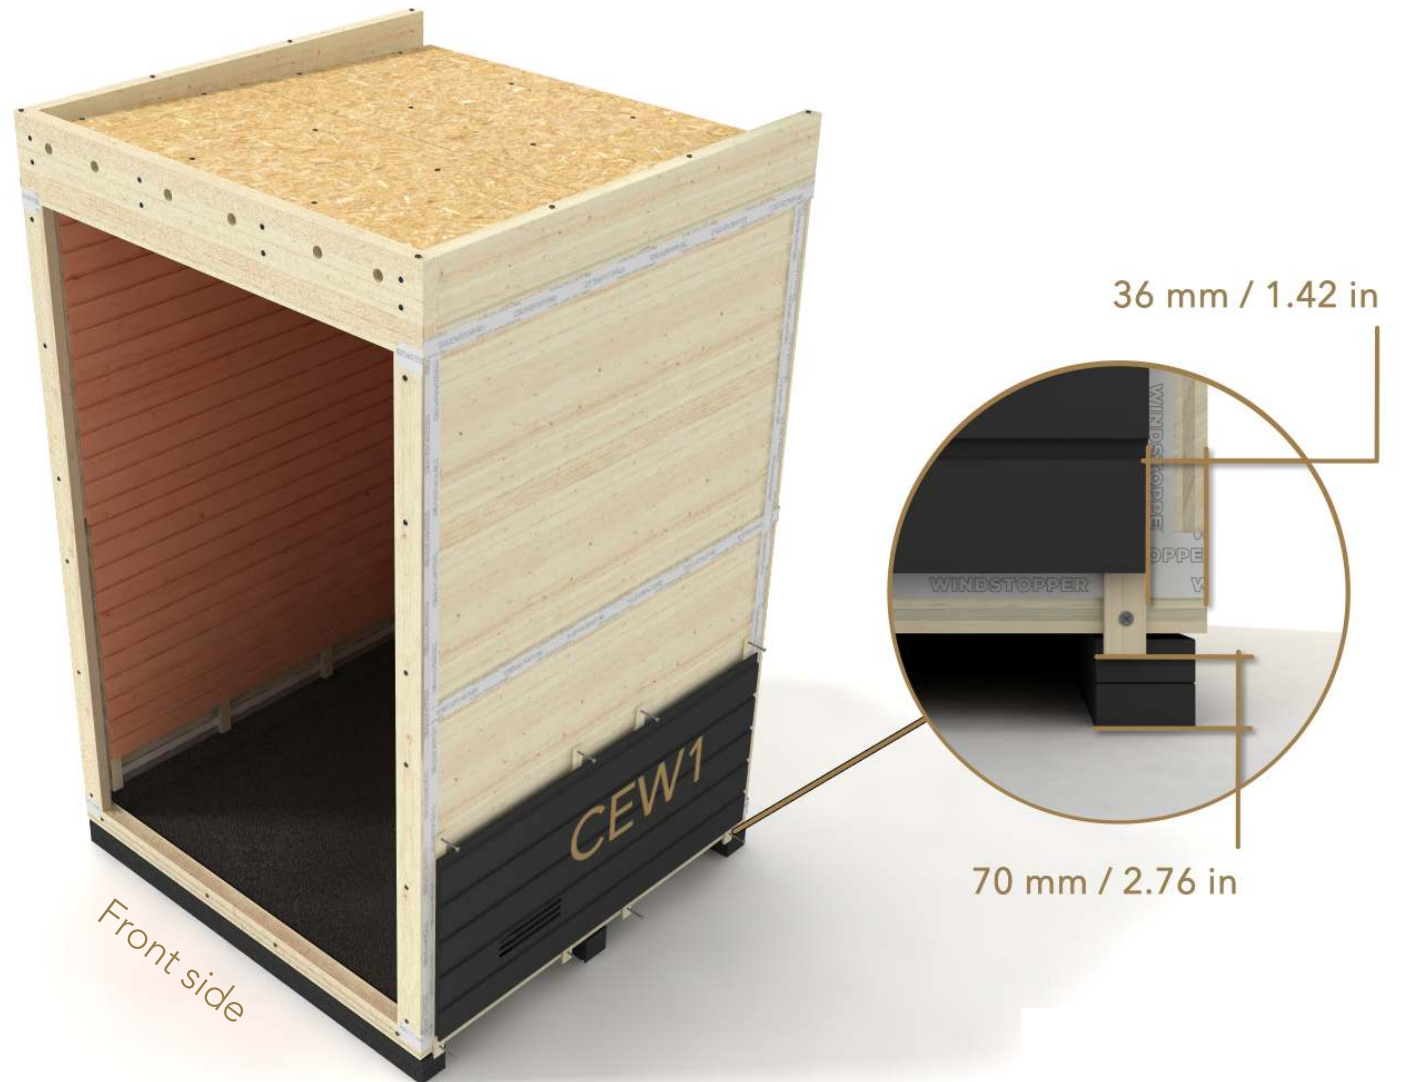

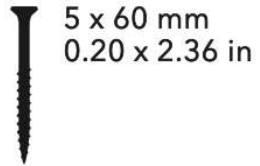


Checklist

- ✓ CEW1
- ✓ CEW2
- CEW3
- SBB2
- STB2
- BEW1
- BEW2
- BEW3
- RBB
- RTB
- AEW1
- AEW2
- AEW3
- SBB1
- STB1




Mira S with CLT | Exterior walls

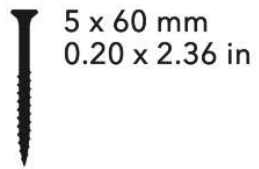

Checklist

- ✓ CEW1
- ✓ CEW2
- CEW3
- SBB2
- STB2
- BEW1
- BEW2
- BEW3
- RBB
- RTB
- AEW1
- AEW2
- AEW3
- SBB1
- STB1



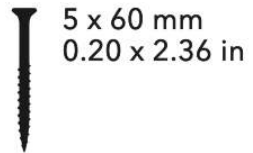

Checklist

- ✓ CEW1
- ✓ CEW2
- ✓ CEW3
- SBB2
- STB2
- BEW1
- BEW2
- BEW3
- RBB
- RTB
- AEW1
- AEW2
- AEW3
- SBB1
- STB1



Mira S with CLT | Exterior walls




Exterior screws

Checklist


- ✓ CEW1
- ✓ CEW2
- ✓ CEW3
- ✓ SBB2
- ✓ STB2
- BEW1
- BEW2
- BEW3
- RBB
- RTB
- AEW1
- AEW2
- AEW3
- SBB1
- STB1



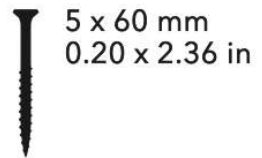


Checklist

- ✓ CEW1
- ✓ CEW2
- ✓ CEW3
- ✓ SBB2
- ✓ STB2
- ✓ BEW1
- BEW2
- BEW3
- RBB
- RTB
- AEW1
- AEW2
- AEW3
- SBB1
- STB1

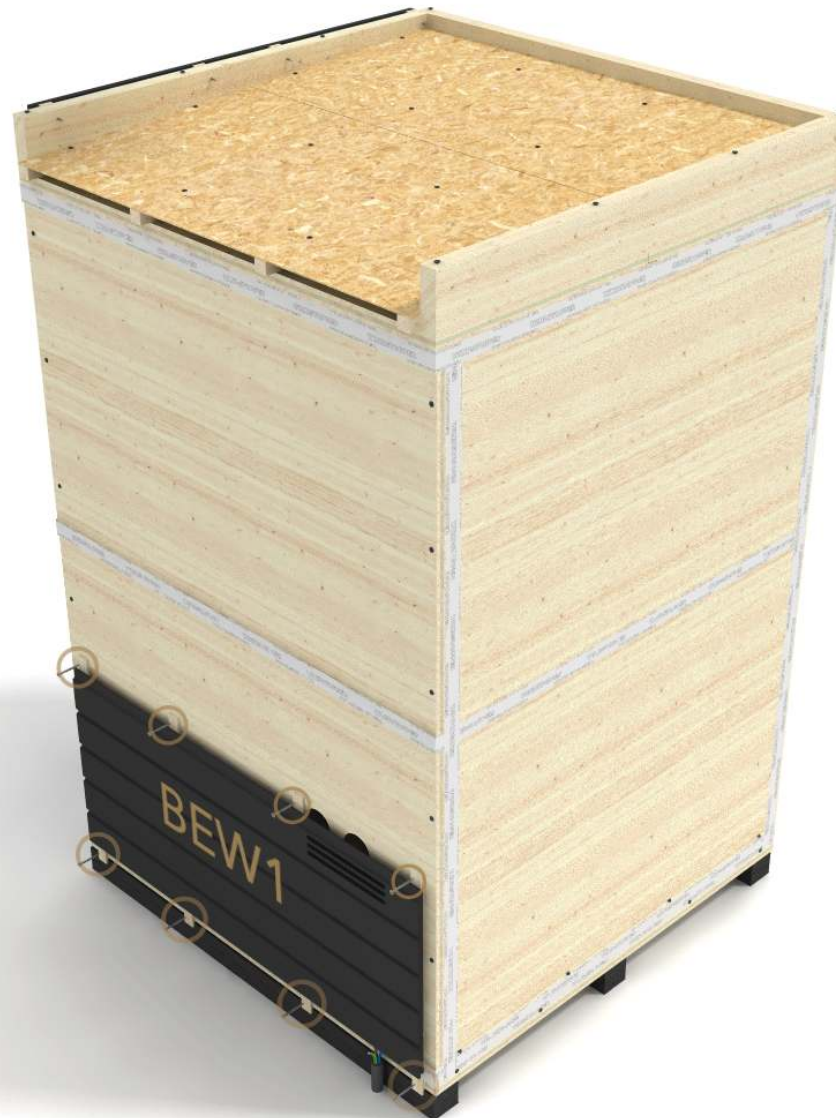


Mira S with CLT | Exterior walls

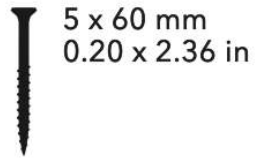

Checklist

- ✓ CEW1
- ✓ CEW2
- ✓ CEW3
- ✓ SBB2
- ✓ STB2
- ✓ BEW1
- ✓ BEW2
- BEW3
- RBB
- RTB
- AEW1
- AEW2
- AEW3
- SBB1
- STB1



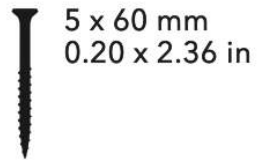


Checklist

- ✓ CEW1
- ✓ CEW2
- ✓ CEW3
- ✓ SBB2
- ✓ STB2
- ✓ BEW1
- ✓ BEW2
- ✓ BEW3
- RBB
- RTB
- AEW1
- AEW2
- AEW3
- SBB1
- STB1




Mira S with CLT | Exterior walls

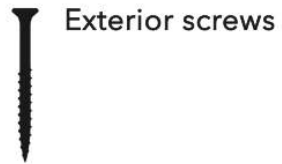

Checklist


- ✓ CEW1
- ✓ CEW2
- ✓ CEW3
- ✓ SBB2
- ✓ STB2
- ✓ BEW1
- ✓ BEW2
- ✓ BEW3
- ✓ RBB
- ✓ RTB
- AEW1
- AEW2
- AEW3
- SBB1
- STB1



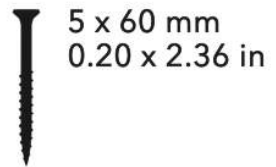


Checklist

- ✓ CEW1
- ✓ CEW2
- ✓ CEW3
- ✓ SBB2
- ✓ STB2
- ✓ BEW1
- ✓ BEW2
- ✓ BEW3
- ✓ RBB
- ✓ RTB
- ✓ AEW1
- AEW2
- AEW3
- SBB1
- STB1

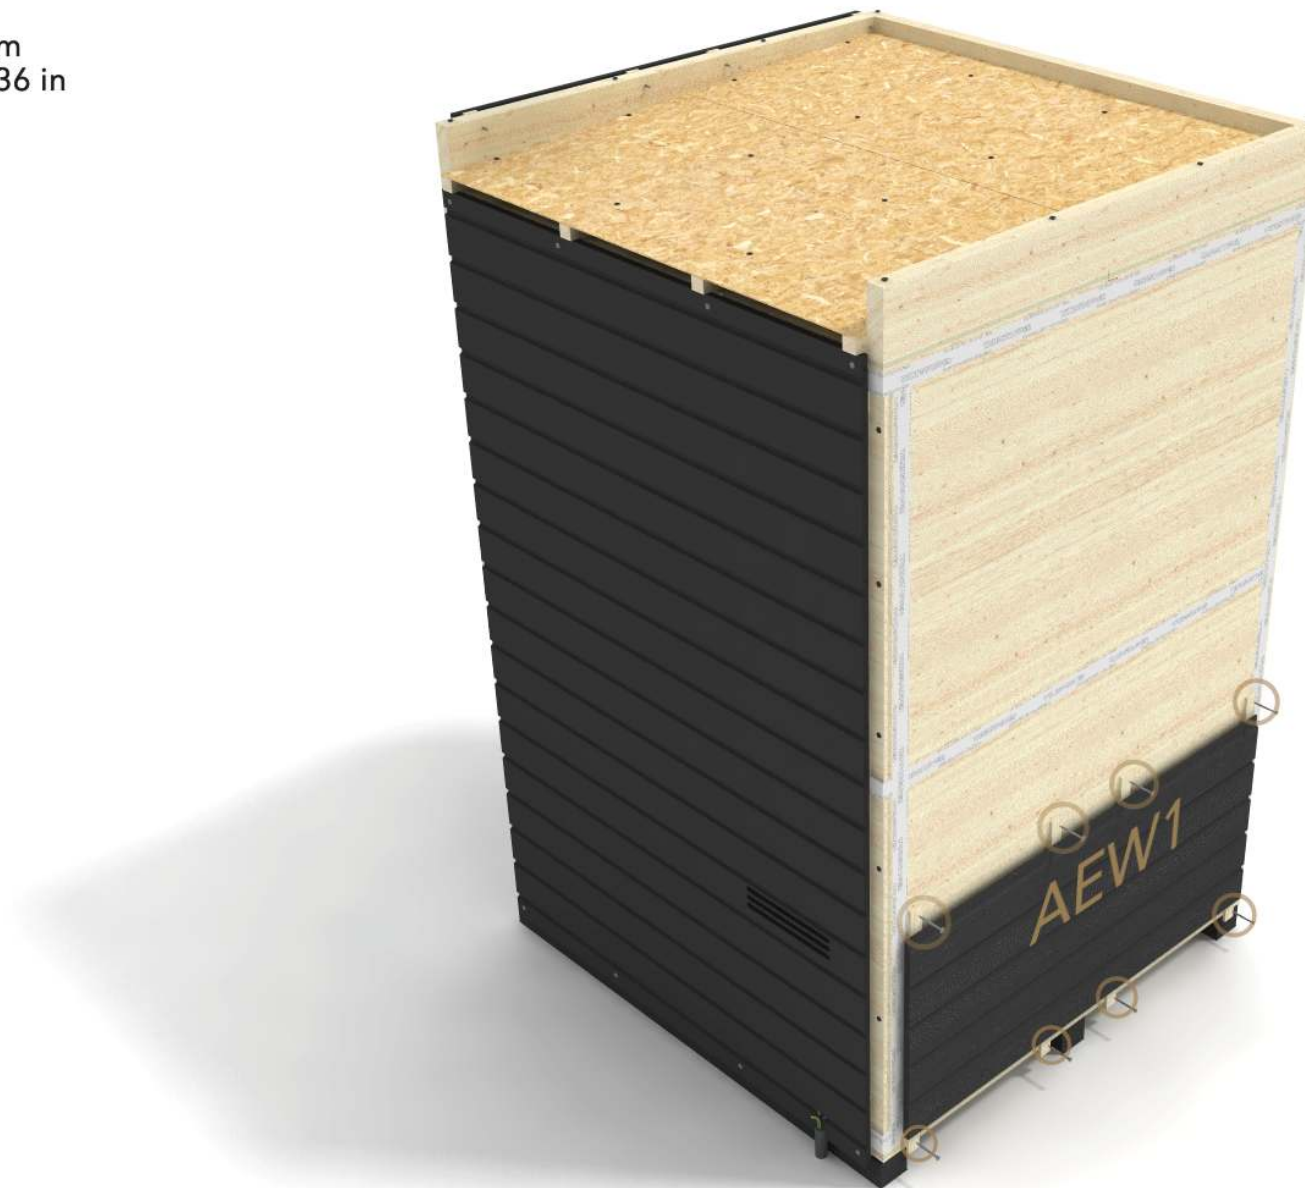



Mira S with CLT | Exterior walls

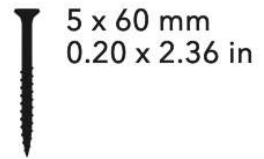

Checklist


- ✓ CEW1
- ✓ CEW2
- ✓ CEW3
- ✓ SBB2
- ✓ STB2
- ✓ BEW1
- ✓ BEW2
- ✓ BEW3
- ✓ RBB
- ✓ RTB
- ✓ AEW1
- ✓ AEW2
- AEW3
- SBB1
- STB1

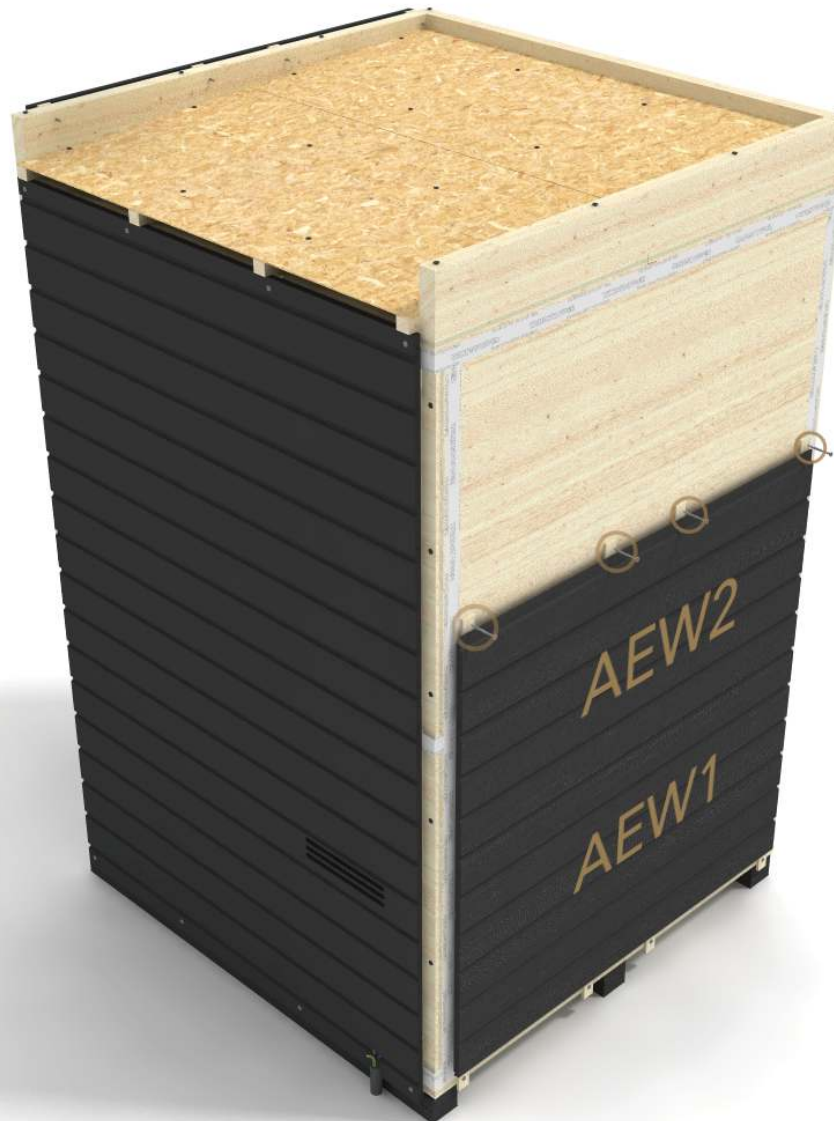

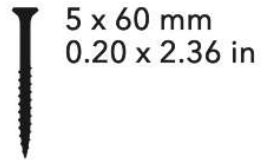

Checklist

- ✓ CEW1
- ✓ CEW2
- ✓ CEW3
- ✓ SBB2
- ✓ STB2
- ✓ BEW1
- ✓ BEW2
- ✓ BEW3
- ✓ RBB
- ✓ RTB
- ✓ AEW1
- ✓ AEW2
- ✓ AEW3
- SBB1
- STB1

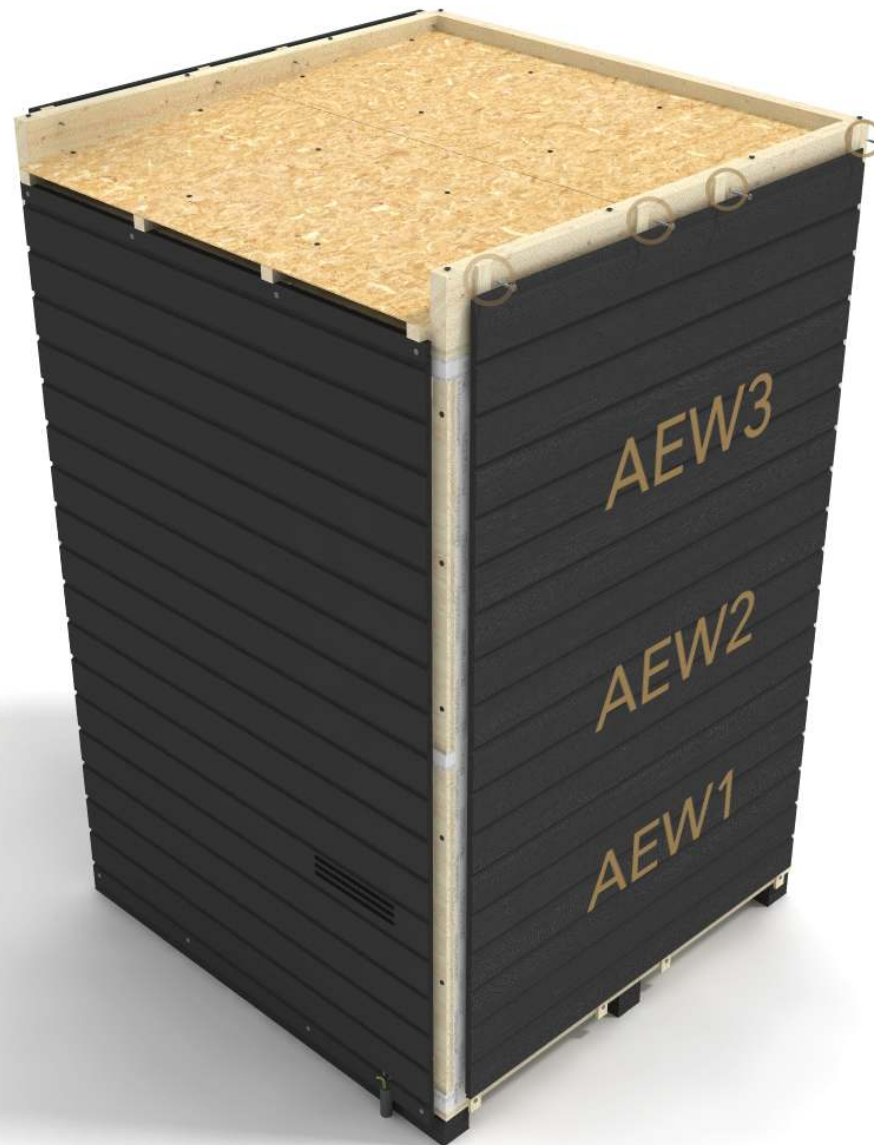

Mira S with CLT | Exterior walls




Exterior screws


Checklist

- ✓ CEW1
- ✓ CEW2
- ✓ CEW3
- ✓ SBB2
- ✓ STB2
- ✓ BEW1
- ✓ BEW2
- ✓ BEW3
- ✓ RBB
- ✓ RTB
- ✓ AEW1
- ✓ AEW2
- ✓ AEW3
- ✓ SBB1
- ✓ STB1



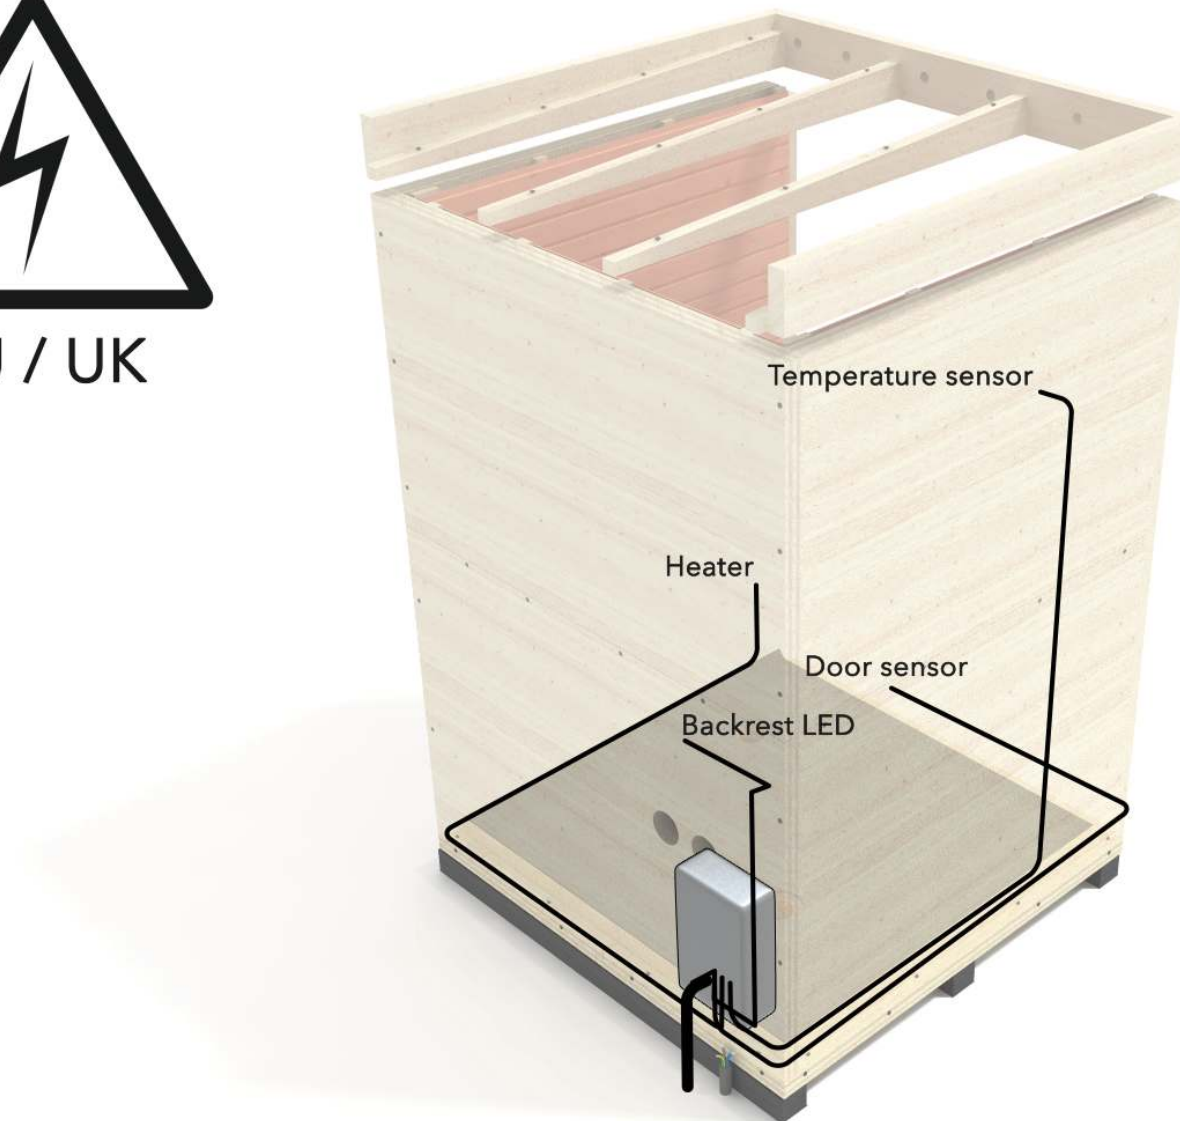


Mira S with CLT | Exterior walls

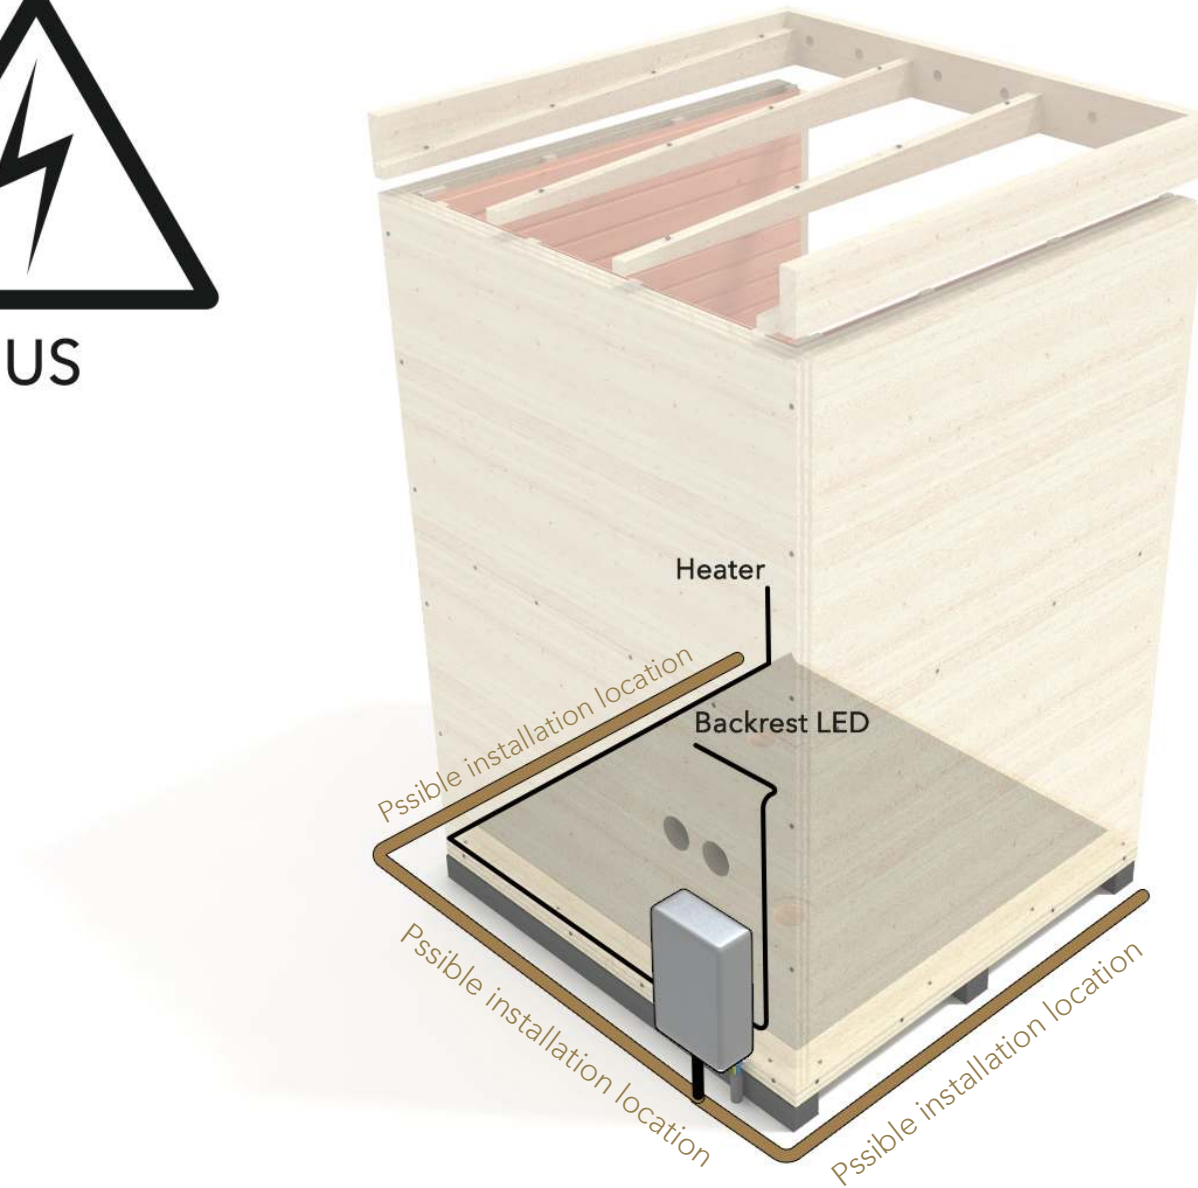


Phase 7:

Finishing the interior walls

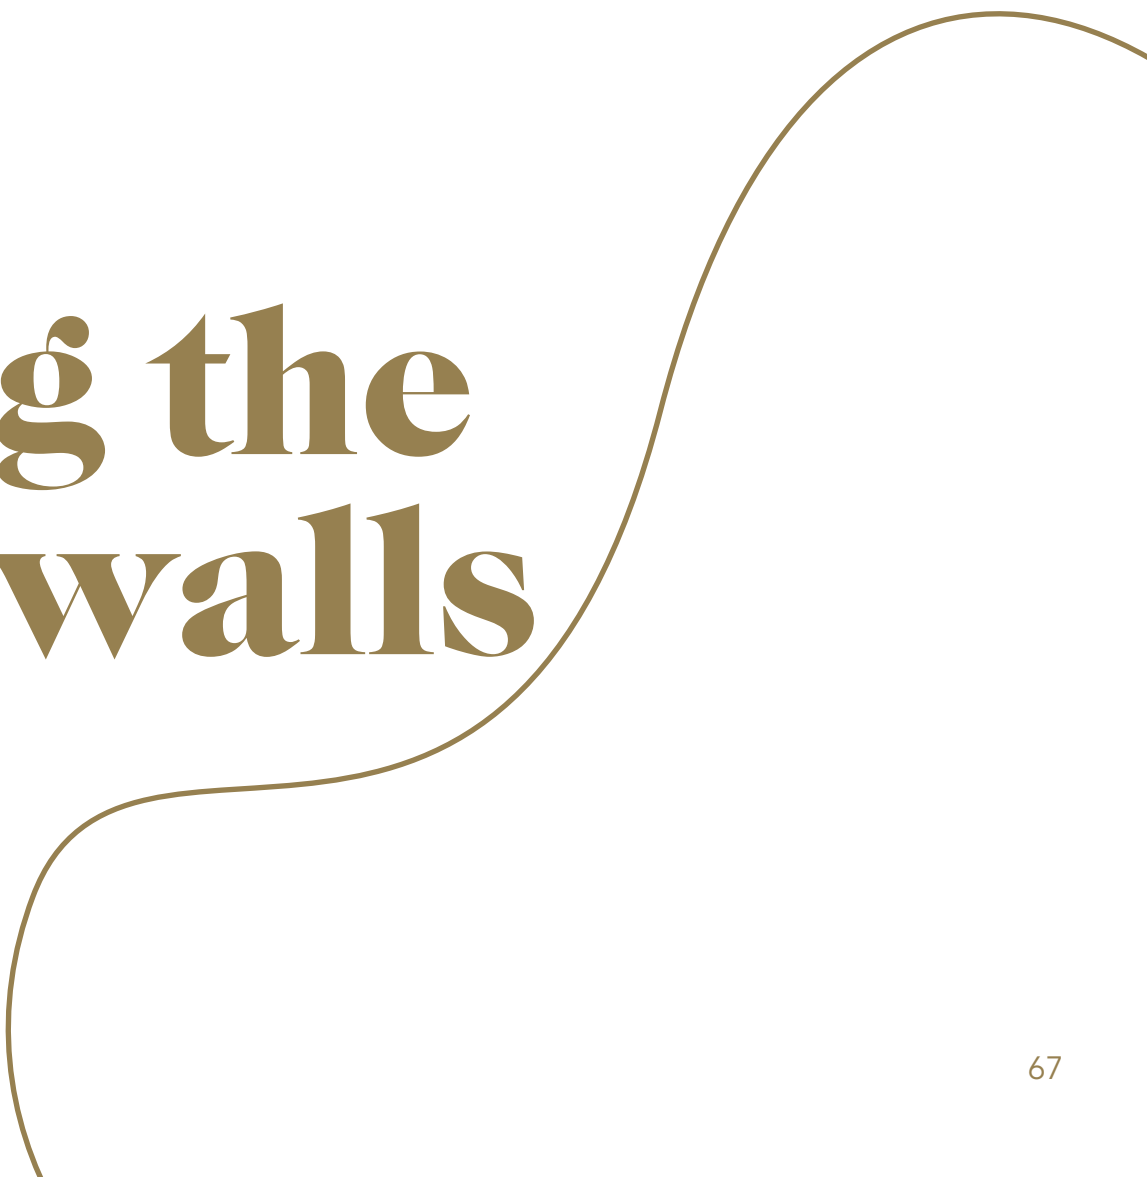

Mira S with CLT | Interior walls

Ensure that all electrical cables are installed before attaching or securing the loose boards.

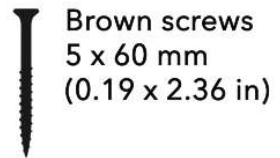


Checklist

- ✓ BSB2
- ✓ BSB1
- ✓ BSB3

Phase 8:

Interior

Mira S with CLT | Interior

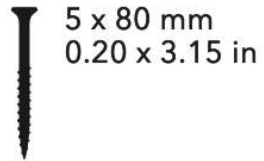

The height of the bench supports is given from the bottom edge of the interior cladding to the bottom edge of the bench support.

Checklist

- ✓ US1
- ✓ US2
- ✓ LS1
- FG1 - FG4
- BF1
- BS
- BF2
- BRS1
- BRS2
- BR
- BG1
- BG2
- HGH1
- HGH2
- HG

The height of the bench supports is given from the bottom edge of the interior cladding to the bottom edge of the bench support.



It is recommended to cover the installed floor grids during installation to prevent scratches and dirt.


Mira S with CLT | Interior

Checklist

- ✓ US1
- ✓ US2
- ✓ LS1
- ✓ FG1 - FG4
- BF1
- BS
- BF2
- BRS1
- BRS2
- BR
- BG1
- BG2
- HGH1
- HGH2
- HG




Mira S with CLT | Interior

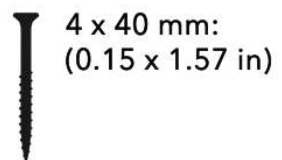

Checklist

- ✓ US1
- ✓ US2
- ✓ LS1
- ✓ FG1 - FG4
- ✓ BF1
- ✓ BS
- BF2
- BRS1
- BRS2
- BR
- BG1
- BG2
- HGH1
- HGH2
- HG



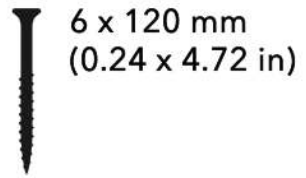


Checklist

- ✓ US1
- ✓ US2
- ✓ LS1
- ✓ FG1 - FG4
- ✓ BF1
- ✓ BS
- ✓ BF2
- BRS1
- BRS2
- BR
- BG1
- BG2
- HGH1
- HGH2
- HG




Mira L with CLT | Interior

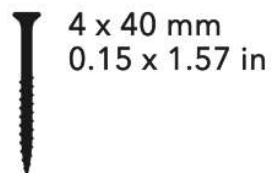

Checklist

- ✓ US1
- ✓ US2
- ✓ LS1
- ✓ FG1 - FG4
- ✓ BF1
- ✓ BS
- ✓ BF2
- ✓ BRS1
- ✓ BRS2
- BR
- BG1
- BG2
- HGH1
- HGH2
- HG



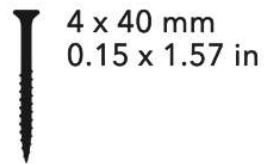

Checklist

- ✓ US1
- ✓ US2
- ✓ LS1
- ✓ FG1 - FG4
- ✓ BF1
- ✓ BS
- ✓ BF2
- ✓ BRS1
- ✓ BRS2
- ✓ BR
- BG1
- BG2
- HGH1
- HGH2
- HG



Mira S with CLT | Interior

Checklist

- ✓ US1
- ✓ US2
- ✓ LS1
- ✓ FG1 - FG4
- ✓ BF1
- ✓ BS
- ✓ BF2
- ✓ BRS1
- ✓ BRS2
- ✓ BR
- ✓ BG1
- ✓ BG2
- HGH1





Do not use the heater guard if it doesn't conform with the safety distances given by the heater manufacturer.



Mira S with CLT | Interior

Checklist

- ✓ US1
- ✓ US2
- ✓ LS1
- ✓ FG1 - FG4
- ✓ BF1
- ✓ BS
- ✓ BF2
- ✓ BRS1
- ✓ BRS2
- ✓ BR
- ✓ BG1
- ✓ BG2
- ✓ HGH1
- ✓ HGH2

HG



4 x 40 mm
0.15 x 1.57 in



Before installing the Sauna Heater Guard

The supplied sauna heater guard will not work with every sauna heater. It is important to observe the following warning:

WARNING!

When installing the Auroom heater guard, it is important to follow the sauna heater manufacturer's safety distance guidelines. The Auroom-supplied sauna heater guard is compatible with most wall-mounted, solid-casing heaters. Due to safety distance requirements, this sauna heater guard may not be compatible with open-basket (exposed stone) heaters and should not be used if the heater manufacturer's safety distance requirements are not met. **Failure to do so may result in damage to the heater guard, risk of fire, tripping of safety limit, or may cause injury.** Most sauna heaters have custom-designed optional heater guards specifically designed for the unit. Consult your retailer to purchase a heater guard uniquely designed for your sauna heater.

Checklist

- ✓ US1
- ✓ US2
- ✓ LS1
- ✓ FG1 - FG4
- ✓ BF1
- ✓ BS
- ✓ BF2
- ✓ BRS1
- ✓ BRS2
- ✓ BR
- ✓ BG1
- ✓ BG2
- ✓ HGH1
- ✓ HGH2
- ✓ HG



Before installing the Sauna Heater Guard

The supplied sauna heater guard will not work with every sauna heater. It is important to observe the following warning:

WARNING!

When installing the Auroom heater guard, it is important to follow the sauna heater manufacturer's safety distance guidelines. The Auroom-supplied sauna heater guard is compatible with most wall-mounted, solid-casing heaters. Due to safety distance requirements, this sauna heater guard may not be compatible with open-basket (exposed stone) heaters and should not be used if the heater manufacturer's safety distance requirements are not met. **Failure to do so may result in damage to the heater guard, risk of fire, tripping of safety limit, or may cause injury.** Most sauna heaters have custom-designed optional heater guards specifically designed for the unit. Consult your retailer to purchase a heater guard uniquely designed for your sauna heater.

Phase 9:

Front glass




Checklist



W1
DF
DW1
DW2
GDH1
GDH2
DG
DH
GDS
GDG



Mira S with CLT | Front glass

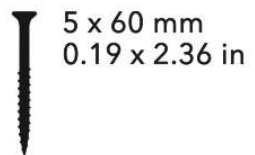

Checklist



- ✓ W1
- ✓ DF
- ✓ DW1
- ✓ DW2

GDH1

GDH2

DG

DH

GDS

GDG



Checklist

- ✓
- ✓ W1
- ✓ DF
- ✓ DW1
- ✓ DW2
- GDH1
- GDH2
- DG
- DH
- GDS
- GDG



Mira S with CLT | Front glass


Glass Wall Installation Guide

Install the glass wall in the center of the opening. Ensure there is an equal gap between the frame and the wall on both sides of the glass wall.



Checklist

- ✓
- ✓ W1
- ✓ DF
- ✓ DW1
- ✓ DW2
- GDH1
- GDH2
- DG
- DH
- GDS
- GDG

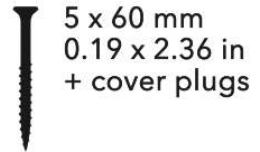

Checklist

- ✓
- ✓ W1
- ✓ DF
- ✓ DW1
- ✓ DW2
- GDH1
- GDH2
- DG
- DH
- GDS
- GDG



Checklist

- ✓
- ✓ W1
- ✓ DF
- ✓ DW1
- ✓ DW2
- ✓ GDH1
- ✓ GDH2
- ✓ DG
 - DH
 - GDS
 - GDG




Checklist

- ✓
- ✓ W1
- ✓ DF
- ✓ DW1
- ✓ DW2
- ✓ GDH1
- ✓ GDH2
- ✓ DG
- ✓ DH
- GDS
- GDG



Mira S with CLT | Front glass

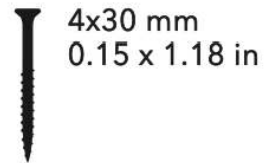

Checklist

- ✓
- ✓ W1
- ✓ DF
- ✓ DW1
- ✓ DW2
- ✓ GDH1
- ✓ GDH2
- ✓ DG
- ✓ DH
- ✓ GDS
- GDG



Checklist

- ✓
- ✓ W1
- ✓ DF
- ✓ DW1
- ✓ DW2
- ✓ GDH1
- ✓ GDH2
- ✓ DG
- ✓ DH
- ✓ GDS
- GDG




Mira S with CLT | Front glass


Checklist

- ✓
- ✓ W1
- ✓ DF
- ✓ DW1
- ✓ DW2
- ✓ GDH1
- ✓ GDH2
- ✓ DG
- ✓ DH
- ✓ GDS
- ✓ GDG



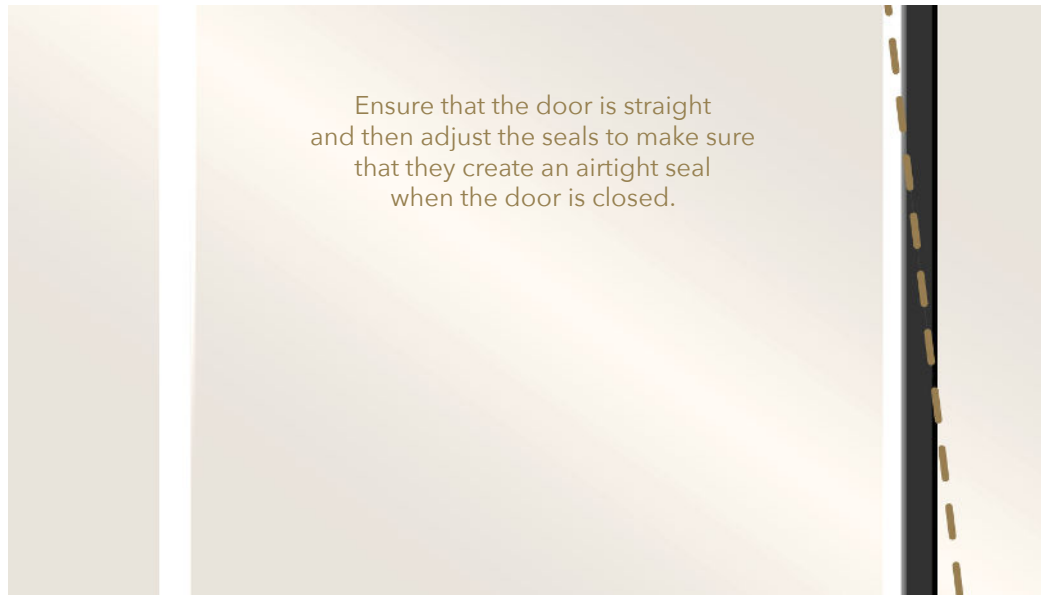


Mira S with CLT | **Front glass**

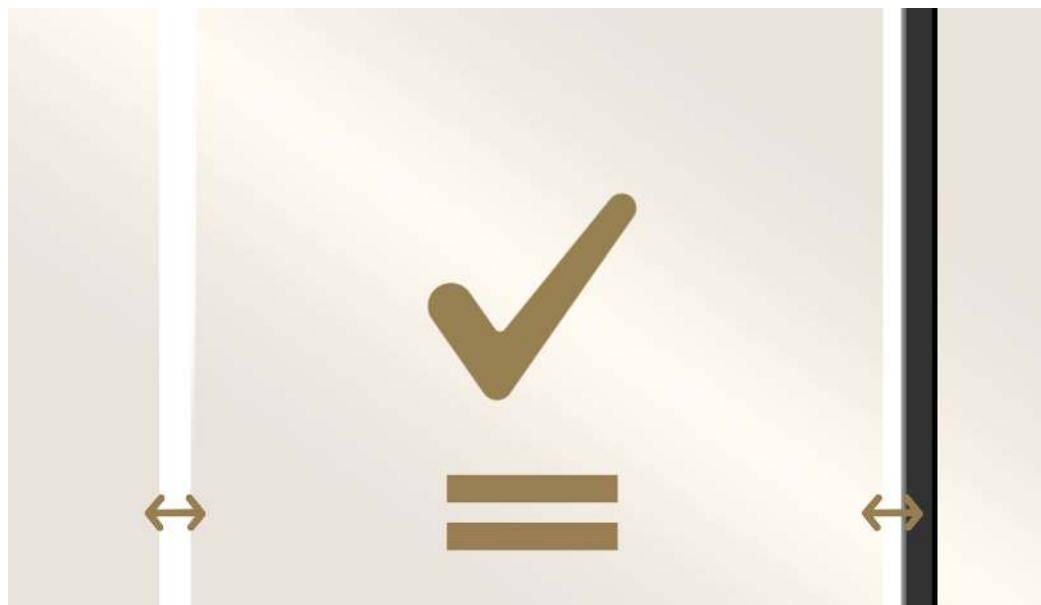

Mira S with CLT | Front glass

Adjust the door glass before gluing the seal.
The soft lip of the seal can be shortened by tearing off part of it.
Adjust the height of the seal to match the gap between the glass and the doorframe.

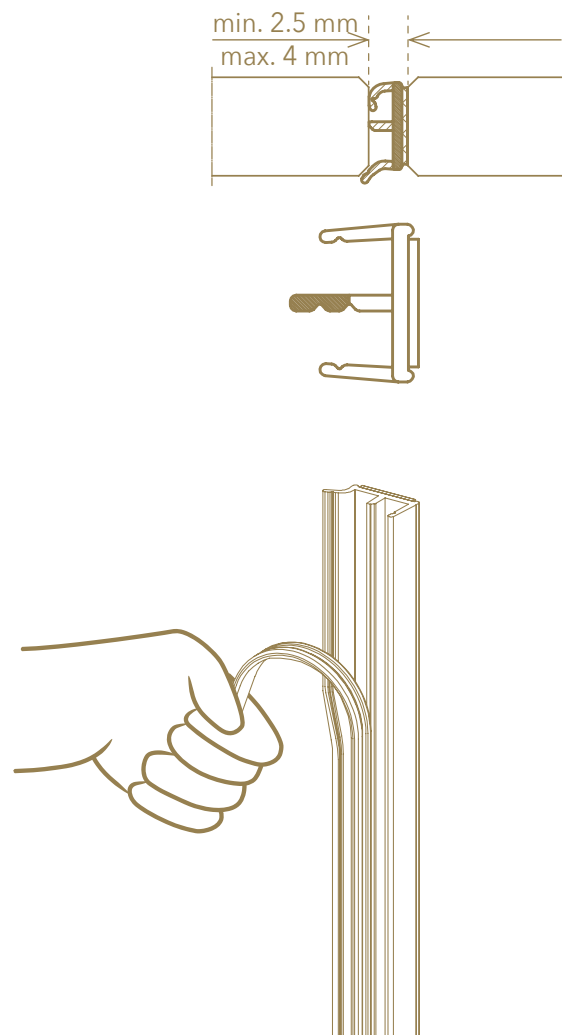


Tape Installation Guide

Positioning the Tape: Ensure there is a 20 mm (0.8 inch) gap between the tape and the edge of the glass wall frame. This ensures the tape remains hidden after installing the external cladding panels.

Mira S with CLT | Front glass


Right Side View

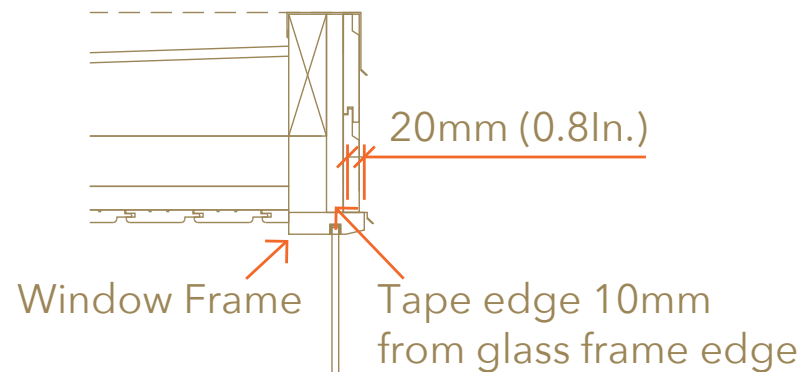

Phase 10:

Finishing the exterior walls



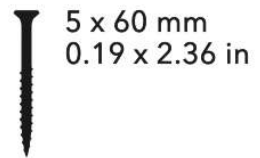

Checklist

✓ DLWS

DRP
DLP
DUWS
FSB1
FSB2
FSB3
FSB4
FSB5
FSB6
CM1
CM2
CM3
CM4



Mira S with CLT | Exterior walls




Exterior screws

Checklist

- ✓ DLWS
- DRP
- DLP
- DUWS
- FSB1
- FSB2
- FSB3
- FSB4
- FSB5
- FSB6
- CM1
- CM2
- CM3
- CM4



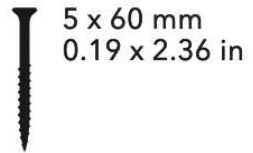

Checklist

- ✓ DLWS
- ✓ DRP
- ✓ DLP

DUWS

FSB1

FSB2

FSB3

FSB4

FSB5

FSB6

CM1


CM2

CM3

CM4



Mira S with CLT | Exterior walls

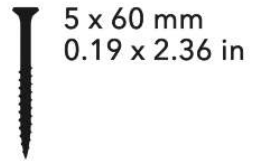

Checklist

- ✓ DLWS
- ✓ DRP
- ✓ DLP
- ✓ DUWS
- FSB1
- FSB2
- FSB3
- FSB4
- FSB5
- FSB6
- CM1
- CM2
- CM3
- CM4





Exterior screws

Checklist

- ✓ DLWS
- ✓ DRP
- ✓ DLP
- ✓ DUWS


FSB1
FSB2
FSB3
FSB4
FSB5
FSB6
CM1
CM2
CM3
CM4




Mira S with CLT | Exterior walls

Checklist


- ✓ DLWS
- ✓ DRP
- ✓ DLP
- ✓ DUWS
- ✓ FSB1
- ✓ FSB2
- ✓ FSB3
- ✓ FSB4
- FSB5
- FSB6
- CM1
- CM2
- CM3
- CM4

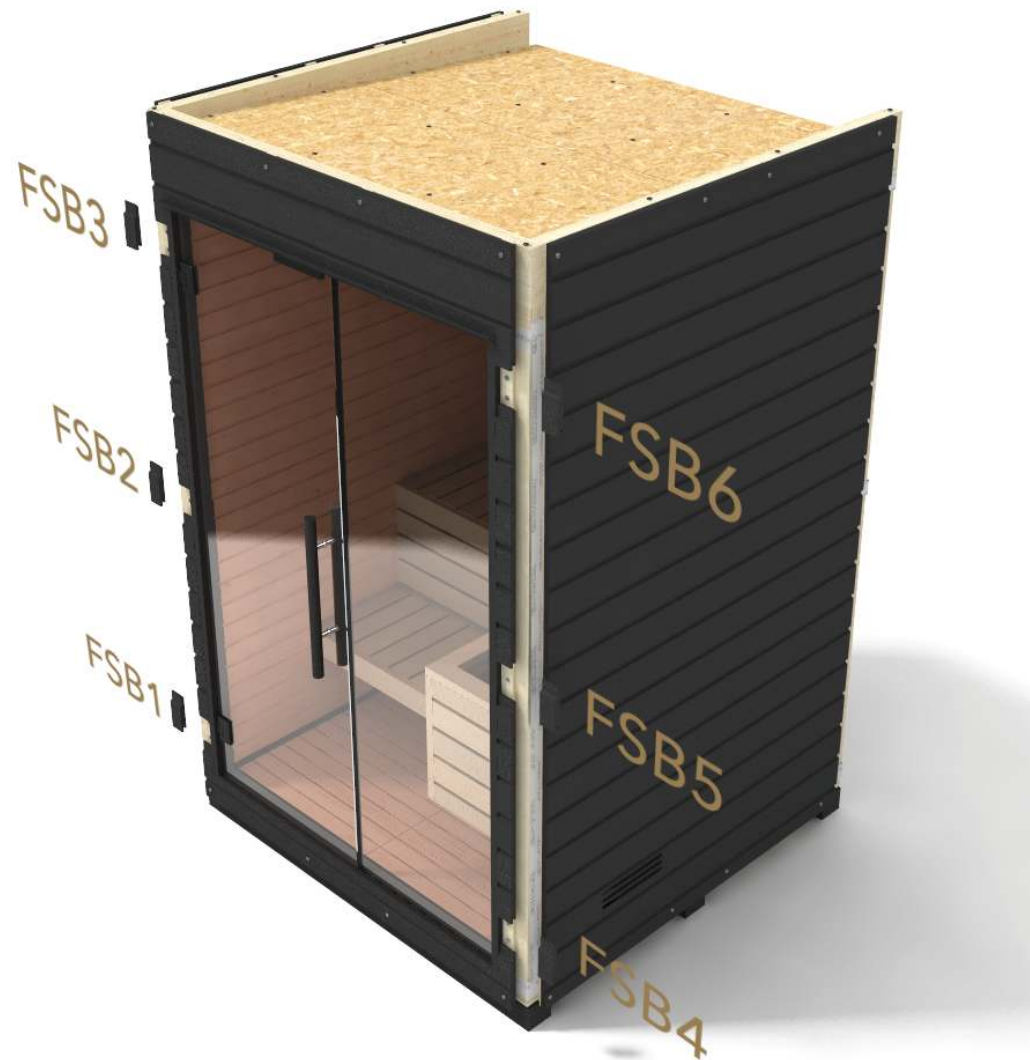

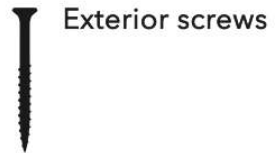

Checklist


- ✓ DLWS
- ✓ DRP
- ✓ DLP
- ✓ DUWS
- ✓ FSB1
- ✓ FSB2
- ✓ FSB3
- ✓ FSB4
- ✓ FSB5
- ✓ FSB6
- ✓ CM1
- ✓ CM2
- ✓ CM3
- ✓ CM4

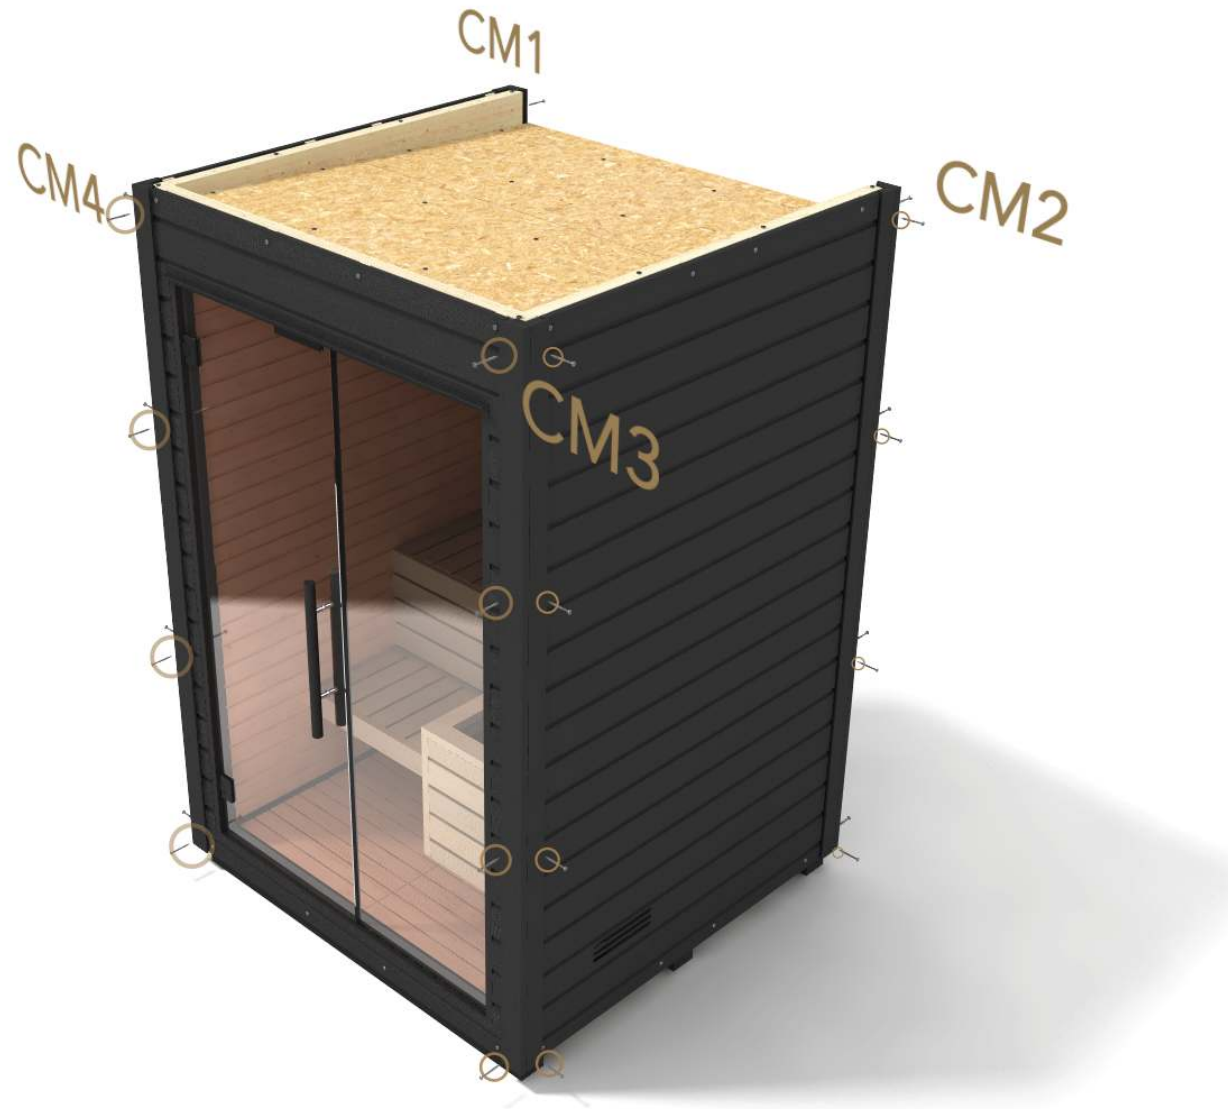

Phase 11:

Finishing the roof



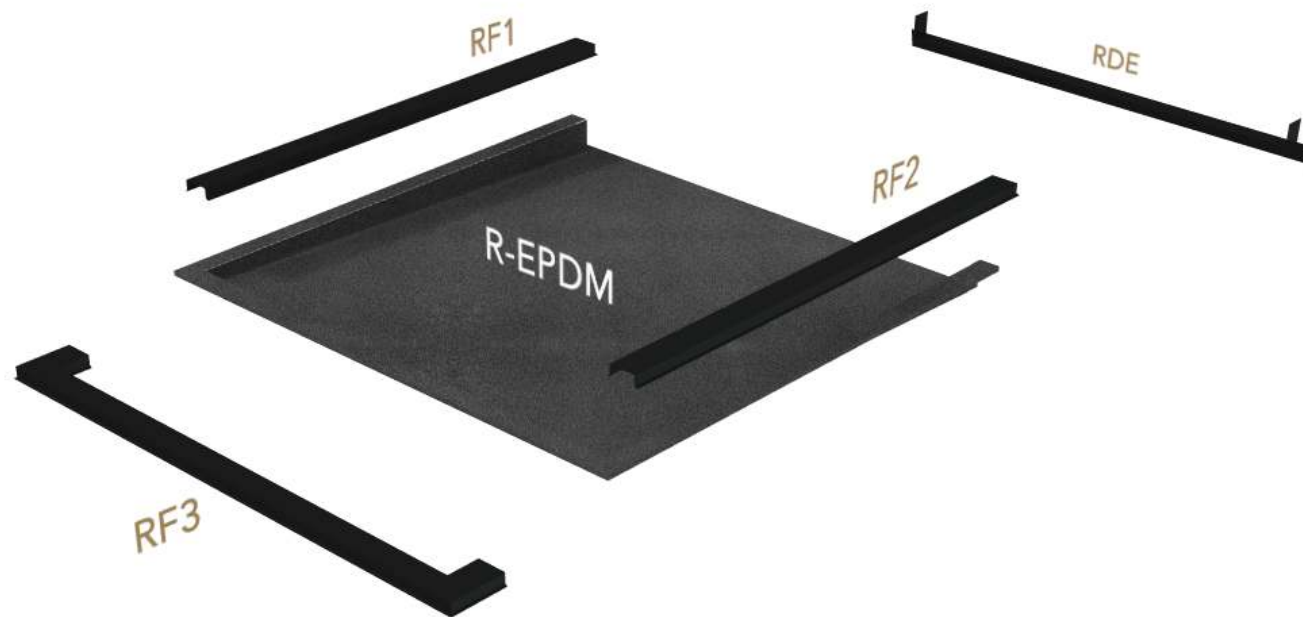



Checklist

- ✓ RDE
- R-EPDM
- RF1
- RF2
- RF3

Mira L with CLT | Roofing

The EPDM rubber is installed on the roof in two stages (first half of the roof and second half of the roof).

Before gluing, clean the surfaces from dust (EPDM rubber and roof osb).

- Apply adhesive to both the EPDM rubber and the roof in a thin layer.
- Initially, glue the center of the EPDM, leaving the edges unglued.
- Once the adhesive no longer feels tacky, roll and smooth the EPDM rubber onto the roof.
- Repeat the same process for the other half of the roof.

After the EPDM adhesive is applied, a drying period of 15 - 20 minutes is required. Ensure the surfaces are dry to the touch before bonding.



Please follow safety precautions for EPDM rubber installation.

Checklist

- ✓ RDE
- R-EPDM
- RF1
- RF2

Apply EPDM to one half at a time

Do not apply EPDM to sides



Mira S with CLT | Roofing

For the raindrop flashing and the edge of the EPDM, use Firestone QuickPrime.



Checklist

- ✓ RDE
- R-EPDM
- RF1
- RF2
- RF3

Mira S with CLT | Roofing

EPDM tape



Checklist

- ✓ RDE
- R-EPDM
- RF1
- RF2

Mira S with CLT | Roofing



Checklist

- ✓ RDE
- R-EPDM
- RF1
- RF2
- RF3

- Attach EPDM rubber with adhesive overlay to the edge.
- Connect the EPDM rubber at the corner by folding and gluing it without the need for cutting. This method ensures the corner joint achieves maximum waterproofing.

After the EPDM adhesive is applied, a drying period of 15 - 20 minutes is required. Ensure the surfaces are dry to the touch before bonding.




Please follow safety precautions for EPDM rubber installation.

Checklist

- ✓ RDE
- ✓ R-EPDM
- RF1
- RF2
- RF3




Mira S with CLT | Roofing

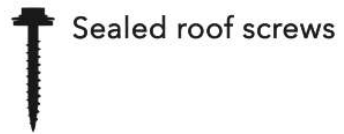

Checklist

- ✓ RDE
- ✓ R-EPDM
- ✓ RF1
- ✓ RF2
- RF3

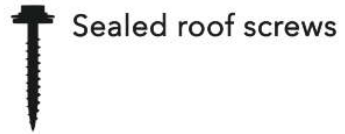

Checklist

- ✓ RDE
- ✓ R-EPDM
- ✓ RF1
- ✓ RF2
- ✓ RF3

Mira S with CLT | Roofing



AUROOM

Moments of wellbeing



auroomwellness.com

Saunas carefully crafted by Auroom OÜ.
Location: Vana-Kastre 62313, Estonia