

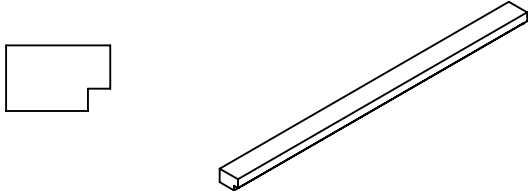
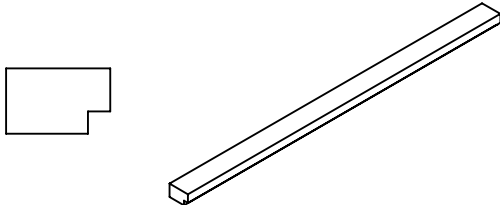
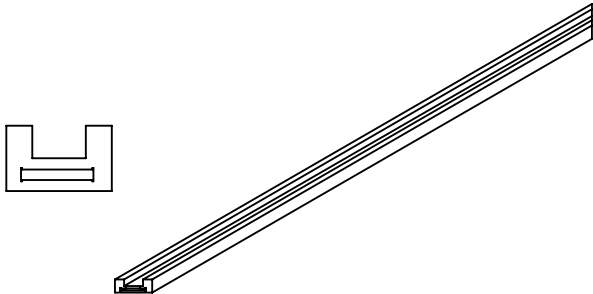
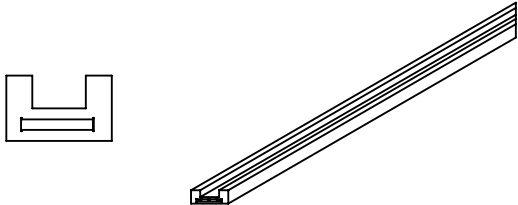
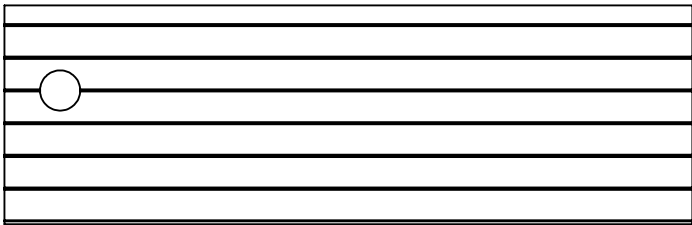

FINSAUNA®




Therma 46 2-Person Indoor Sauna 53"D x 77"W x 79"H














Note: Please read manual before construction






Rev: 2.0_09/2025





X6FR1		Floor raiser 1	1.7x2.8x44.1	2
X6FR2		Floor raiser 2	1.7x2.8x70.4	2
X6SR1		Support rail 1	1.7x2.8x71.4	4
X6SR2		Support rail 2	1.7x2.8x48.6	4
X6BW1		Back wall 1	22.9x72.8	1
X6BW2		Back wall 2	24.2x72.8	1

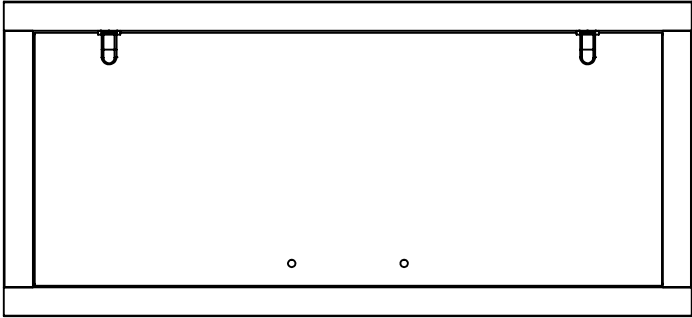
X6BW3		Back wall 3	22.9x72.8	1
X6SW1		Side wall 1	13.3x72.8	2
X6SW2		Side wall 2	31.2x72.8	1
X6SW3		Side wall 3	31.2x72.8	1
X6WE		Window element	18.3x72.8	2
X6DE		Door element	33.3x72.8	1

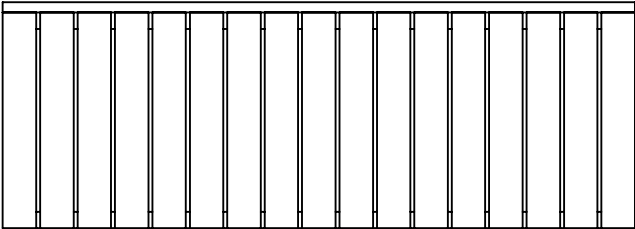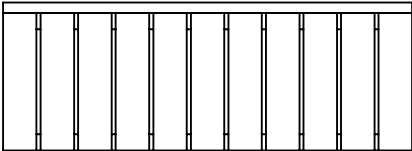X6R1		Roof 1	27.7x50.6	1
X6R2		Roof 2	23.8x50.6	1
X6R3		Roof 3	23.8x50.6	1
X6B1		Bench 1	24x67	1
X6B2		Bench 2	15.6x42.9	1
X6B3		Bench 3	8.6x51.6	1

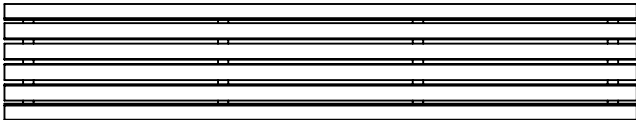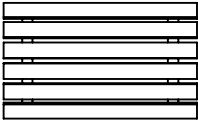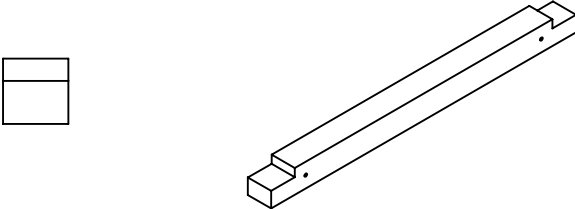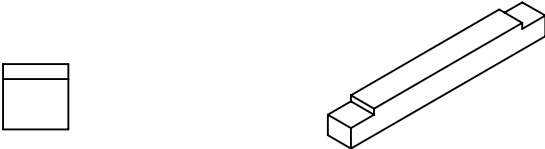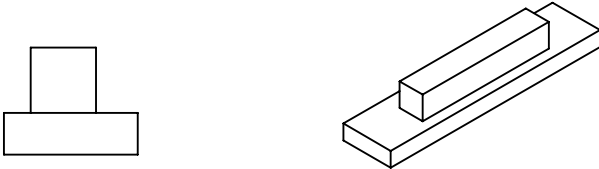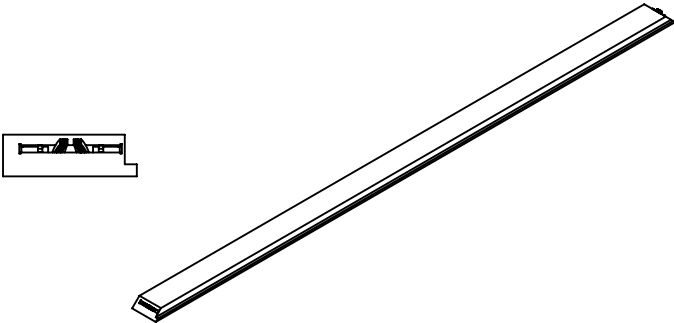X6BR1		Backrest 1	12.2x67	1
X6BR2		Backrest 2	12.2x20.5	1
X6BS1		Bench support 1	1.7x1.7x22.8	2
X6BS2		Bench support 2	1.7x1.7x14.6	1
X6BS3		Bench support 3	2.8x3.5x15.5	1
X6CB1		Cornice board 1	1.1x3.5x77.9	2

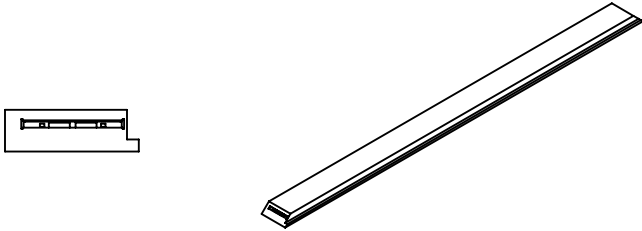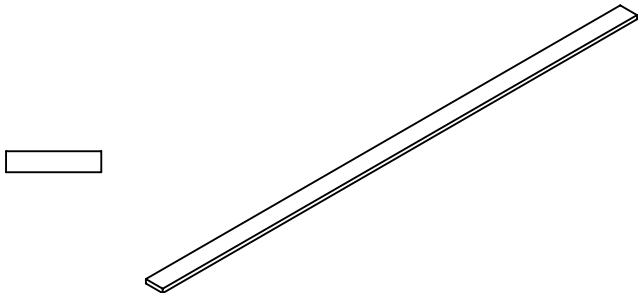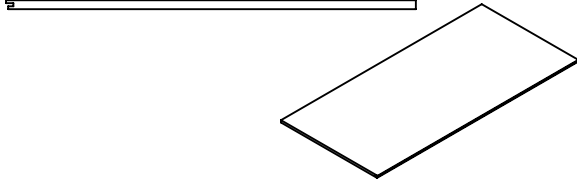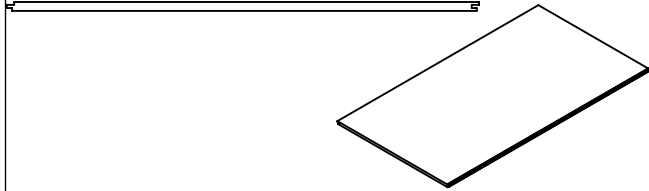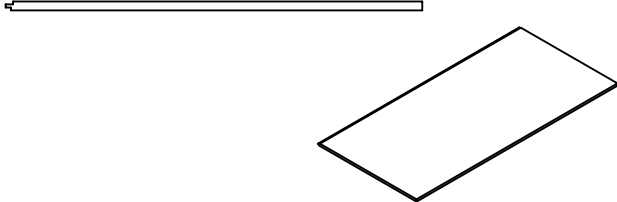X6CB2		Cornice board 2	1.1x3.5x53.5	2
X6FWC		Front wall cover slat	0.5x1.6x71.1	4
RCB1		Roof connection bar (plywood)	0.3x1.9x3.6	10
RCB2		Roof connection bar (corner)	0.3x1.9x6.7	4
X6OSB1		OSB sheet	21.7x45.1	1
X6OSB2		OSB sheet	24.6x45.1	1
X6OSB3		OSB sheet	21.7x45.1	1

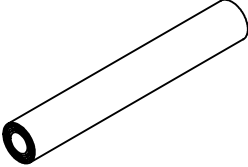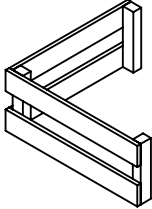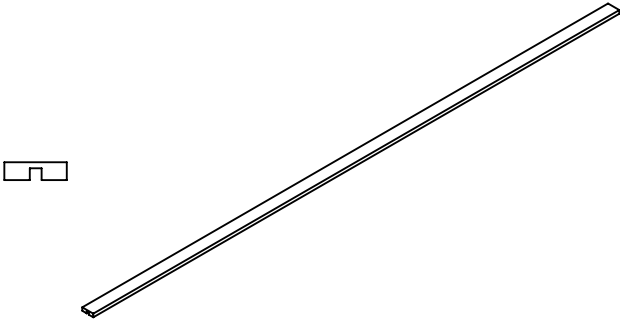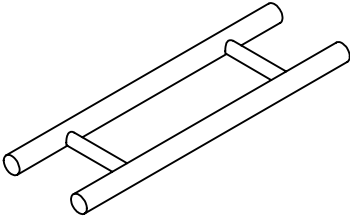X6 PVC		PVC flooring	45.1x68	1
X6HC		Heater cover		1
CCS		CAT cable cover slat	0.5x1.6x78.7	1
VC		Vent cover		1
DH		Door handle		1



3.15" screws

8



2.7" screws

31



2.4" screws

36



2" screws

28



1.2" screws

60




1.6" nails

30




Lamello 1

8



Lamello 2

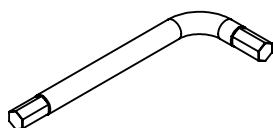
8




Hex key

1

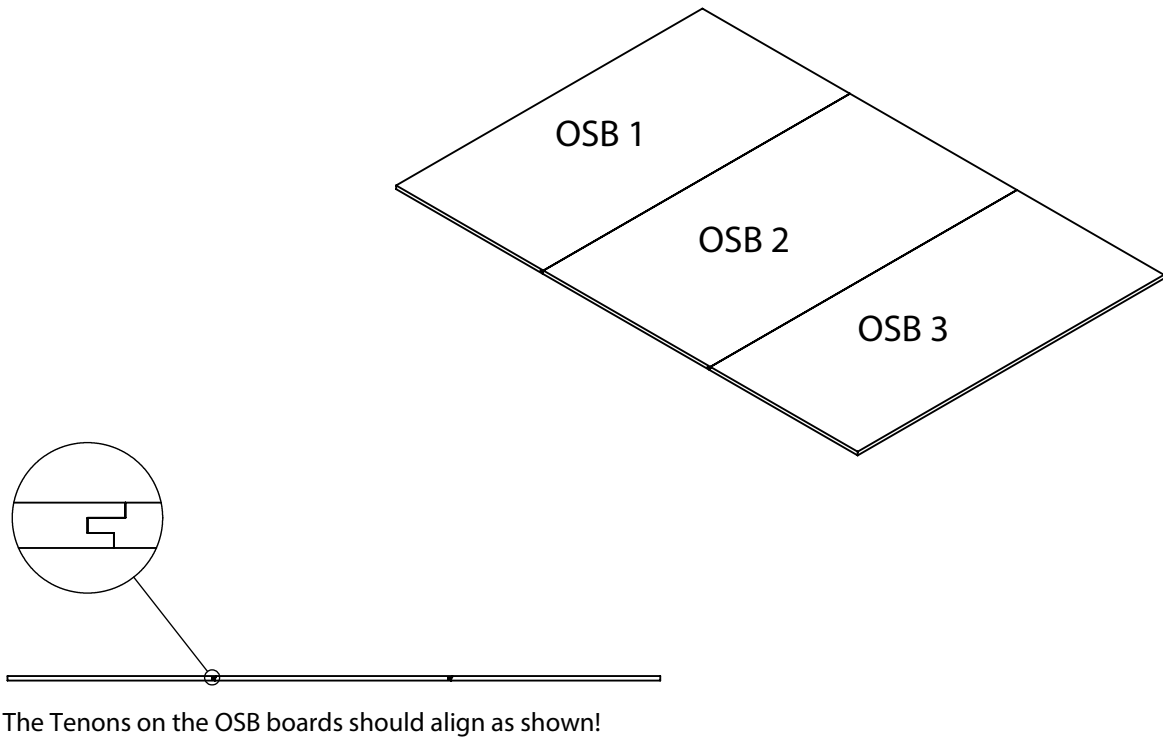Step 1. Assemble OSB sheets



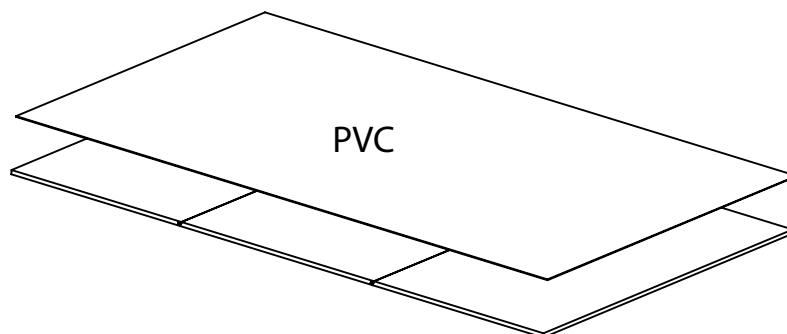Step 2. Install PVC Flooring




Step 3. Connect the Four Floor Risers

Fasten the four floor risers together using 3.15" screws, being sure the two shorter boards are located on the sides and the two longer boards are on the front and back. Use a framing square to ensure the assembly is square.



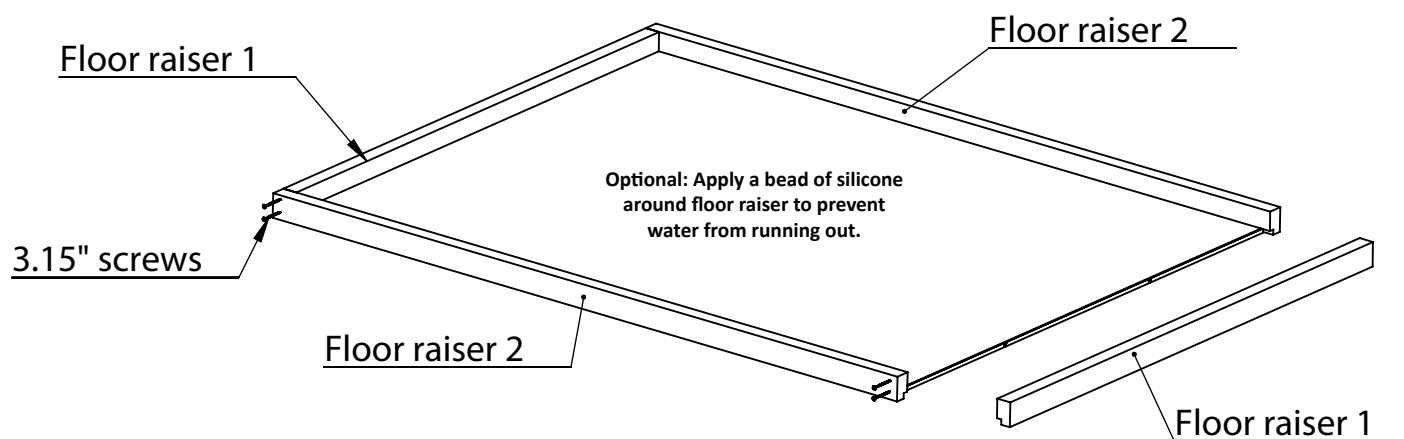Drill the pilot holes for the screws




Step 4. Connect Wall Support Rails

Each wall support has a predrilled hole for lamello. Insert the lamellos in the support rail holes as shown in the drawings.


Fasten the wall support rails together, connection them at the corners using hex key.

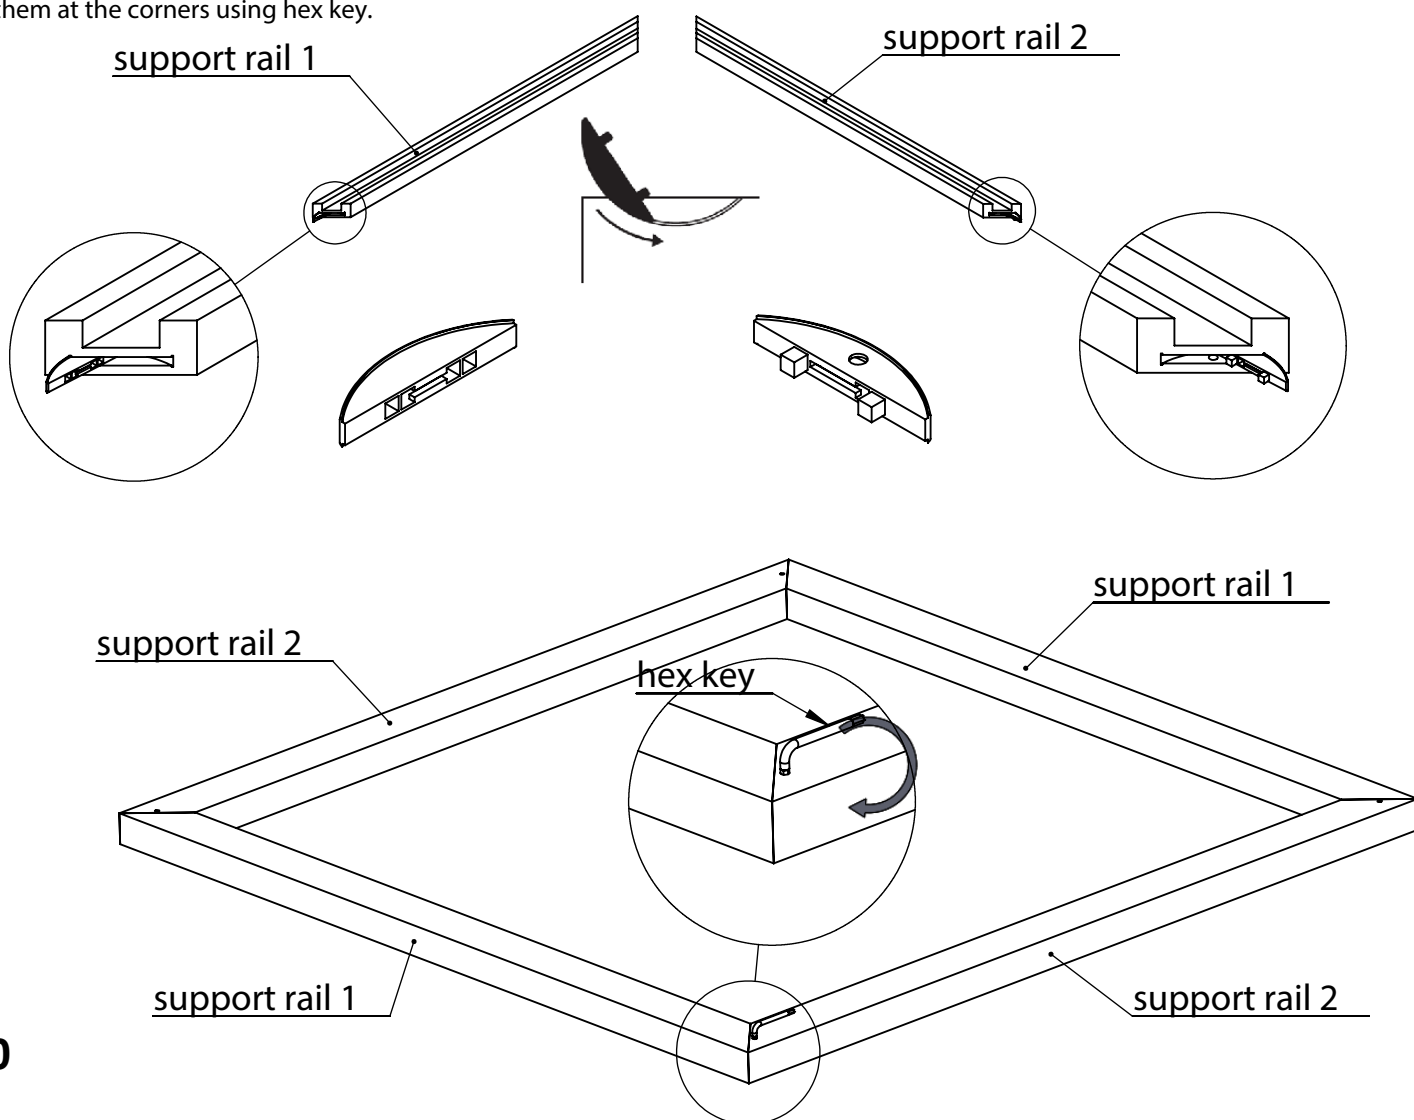Support rail 2 has two predrilled holes for the hex key!



Step 5. Position Wall Support Rails

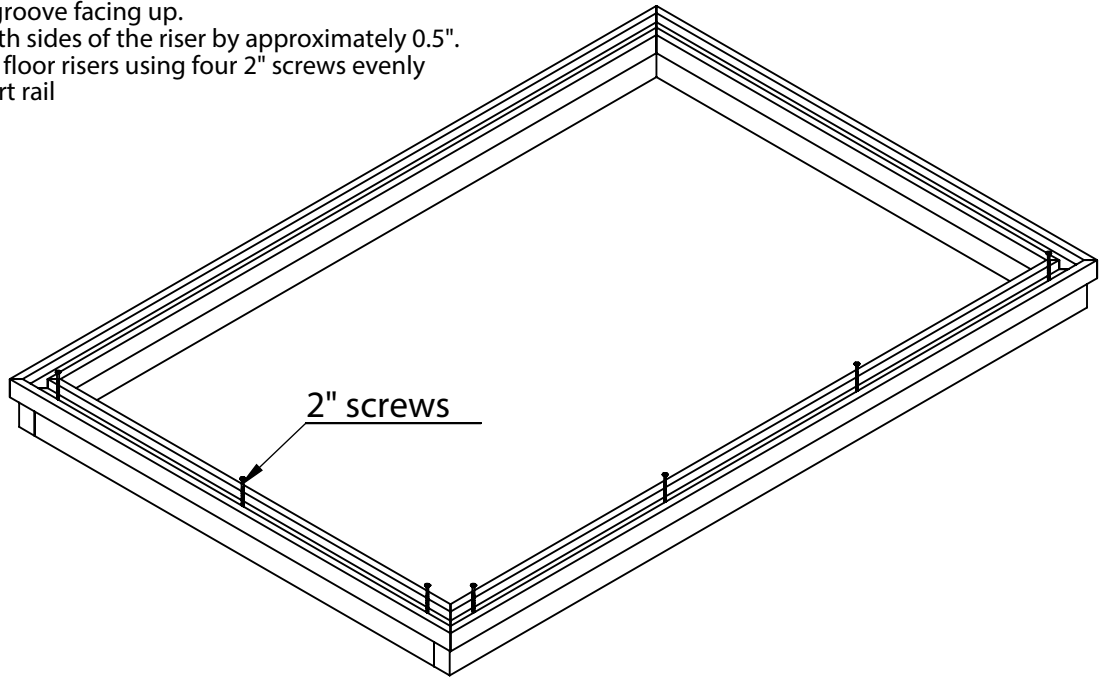Lay the wall support rail assembly squarely on top of the floor risers with the groove facing up. The rails should overlap both sides of the riser by approximately 0.5". Secure the assembly to the floor risers using four 2" screws evenly spaced on each wall support rail




Step 6. Position Wall Sections (back wall 1 & side wall 1)

Position backwall section 1 in the groove of the back rail and push it flush against the left rail. With a helper holding back wall section, orient side wall section 1 and place it in the groove of the left rail. Push the flat edge flush against back wall section. Align the two panels so they are flush and fasten them together using the 2.7" screws. Make sure the markings for the bench supports are inside the sauna.



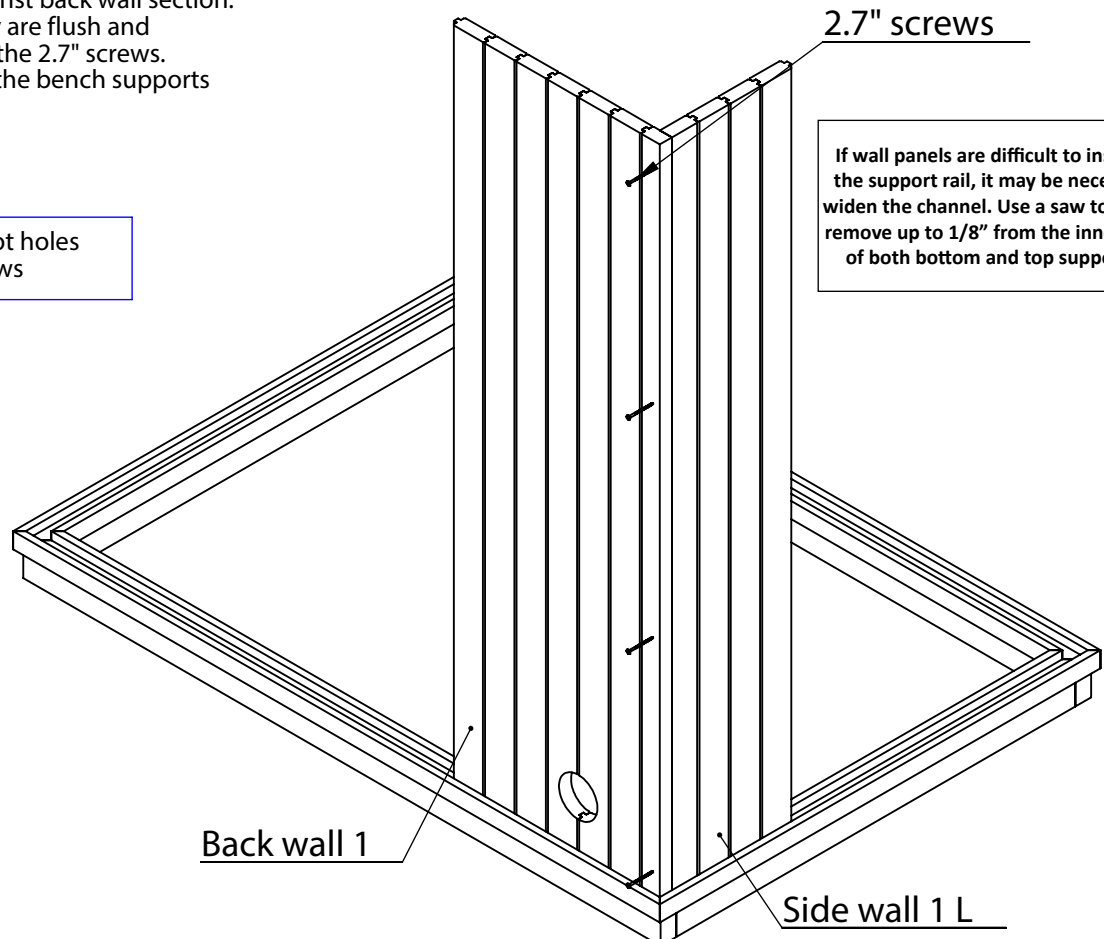Drill the pilot holes for the screws




Step 7. Position back wall sections 2 & 3, and side wall 1

Position back wall 2 section into the groove of the back rail. Attach it to back wall section 1 using tongue and groove fit. Secure it by tapping it into place with a rubber mallet. Repeat this step for wall section 3, again tapping it into place with a rubber mallet. Position side wall section 1 into the groove to the right side rail and push flush against the back wall. Ensure panels are flush with each other and fasten them together using the 2.7" screws.




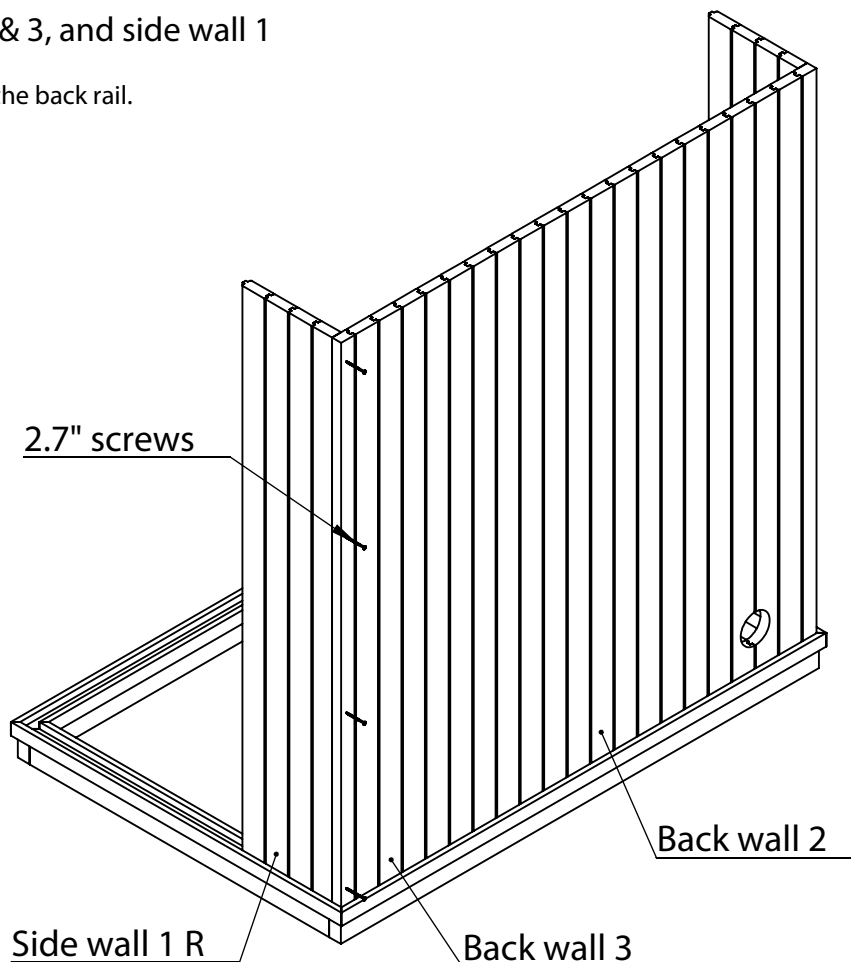Drill the pilot holes for the screws



Step 8. Position side wall section 2, window section and door section

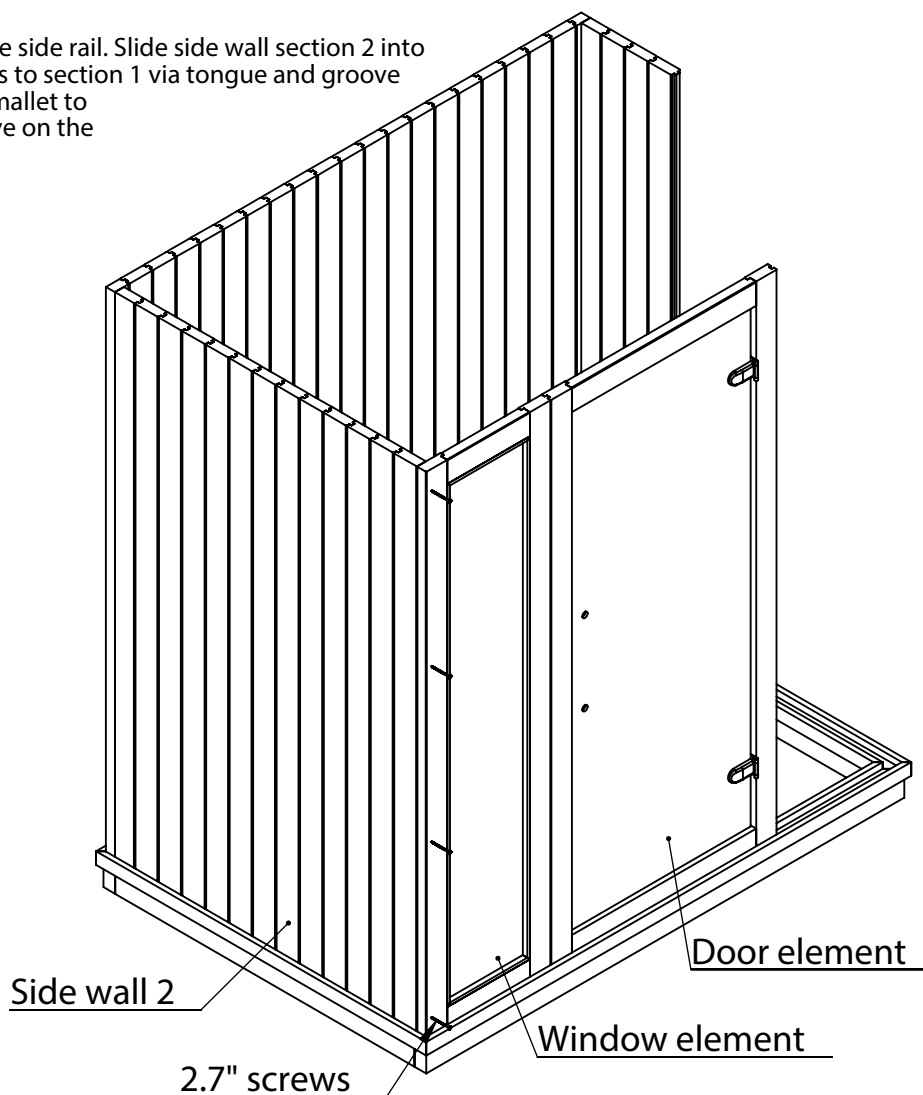Position side wall section 2 into the groove of the side rail. Slide side wall section 2 into place with side wall section 1. Section 2 connects to section 1 via tongue and groove so there is no need to use screws. Use a rubber mallet to secure the fit. Place window section in the groove on the front rail and push it against side rail. Ensure the two sections are flush and fasten them together using 2.7" screws. Place the door section onto the front rail orienting it so that the door opens according to your preference. Door section connects to window section via tongue and groove so there is no need for screws. Gently tap it into place with a rubber mallet to secure the fit.




Step 9. Position Window section and Side Wall section 3

Position side wall section 3 into the groove of the side rail orienting it so that the heater vent holes are located at the bottom. Slide wall section into place with sidewall section 1. Side wall 3 connects to side wall 1 via tongue and groove so there is no need to use screws. Use a rubber mallet to secure the fit. Now place window section into the groove of the front rail and connect it to door section via the tongue and groove fit. Gently tap into place with a rubber mallet to secure the fit. Ensure window section and side wall 3 are flush with each other and secure them together with the 2.7" screws.



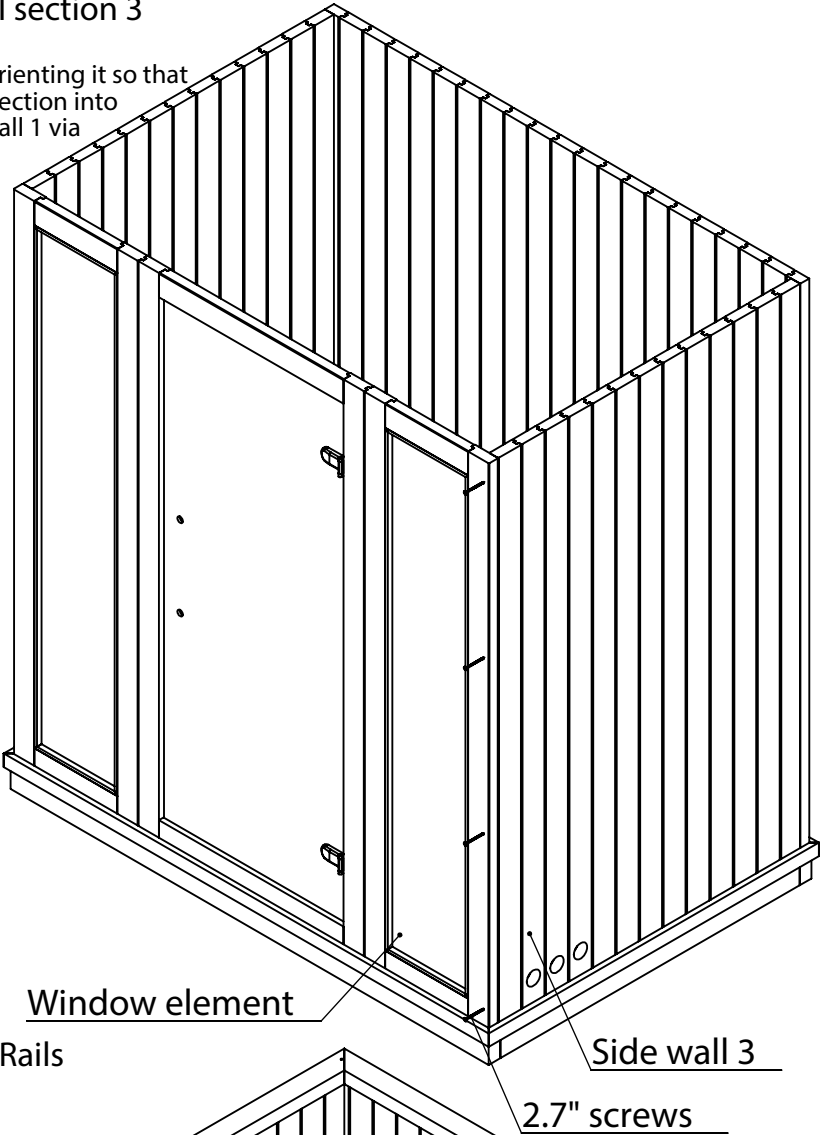Drill the pilot holes for the screws




Step 10. Assemble and Position Roof Support Rails

Connect roof support rails as shown in step 2. Place the assembly on top of the wall sections so that the wall sections fit snugly into the groove. When in place, secure to the assembly to the walls using four 2" screws on each rail.

If wall panels are difficult to insert into the support rail, it may be necessary to widen the channel. Use a saw to carefully remove up to 1/8" from the inner groove of both bottom and top support rail.








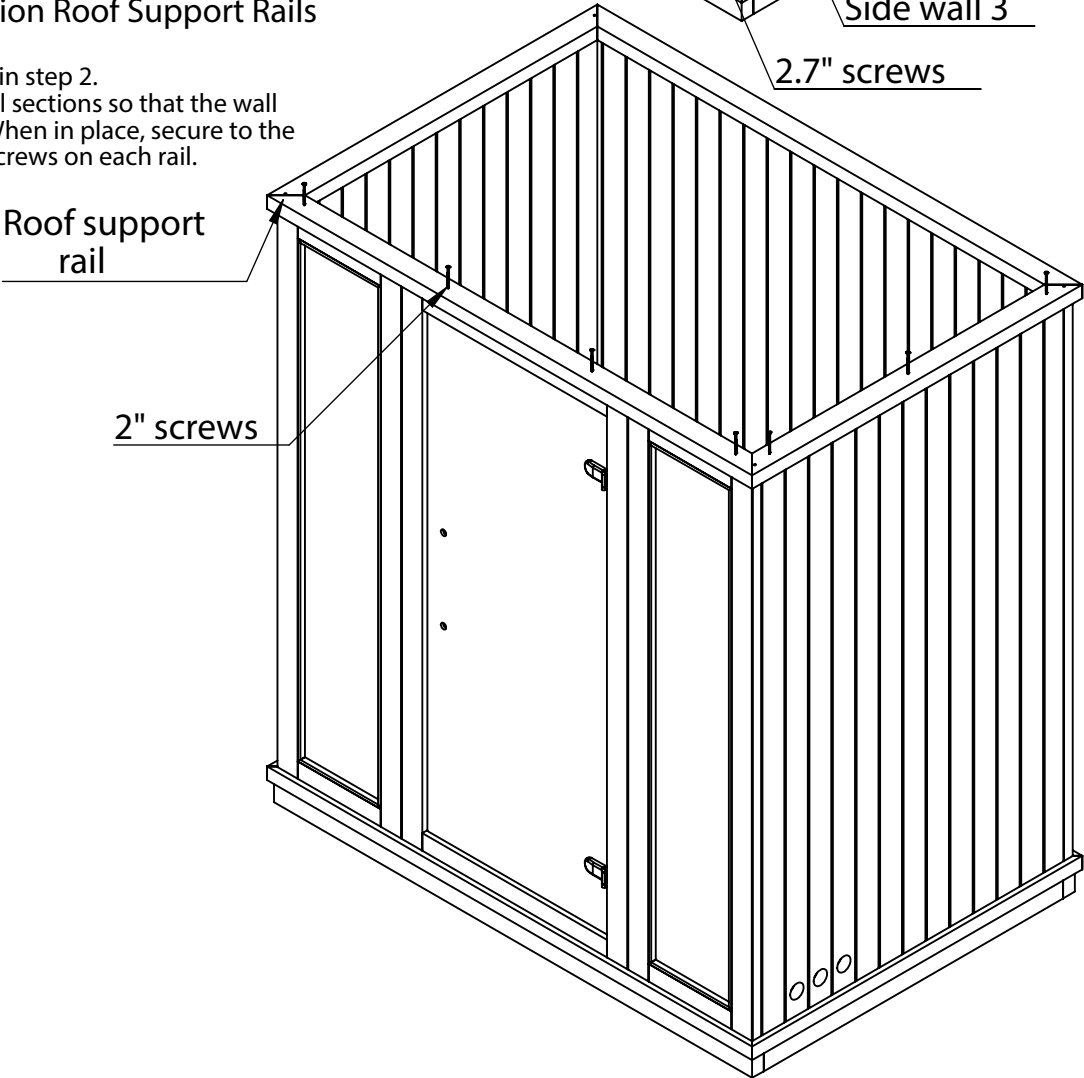
Drill the pilot holes for the screws



Step 11. Bench 1 & Bench 2 installation.

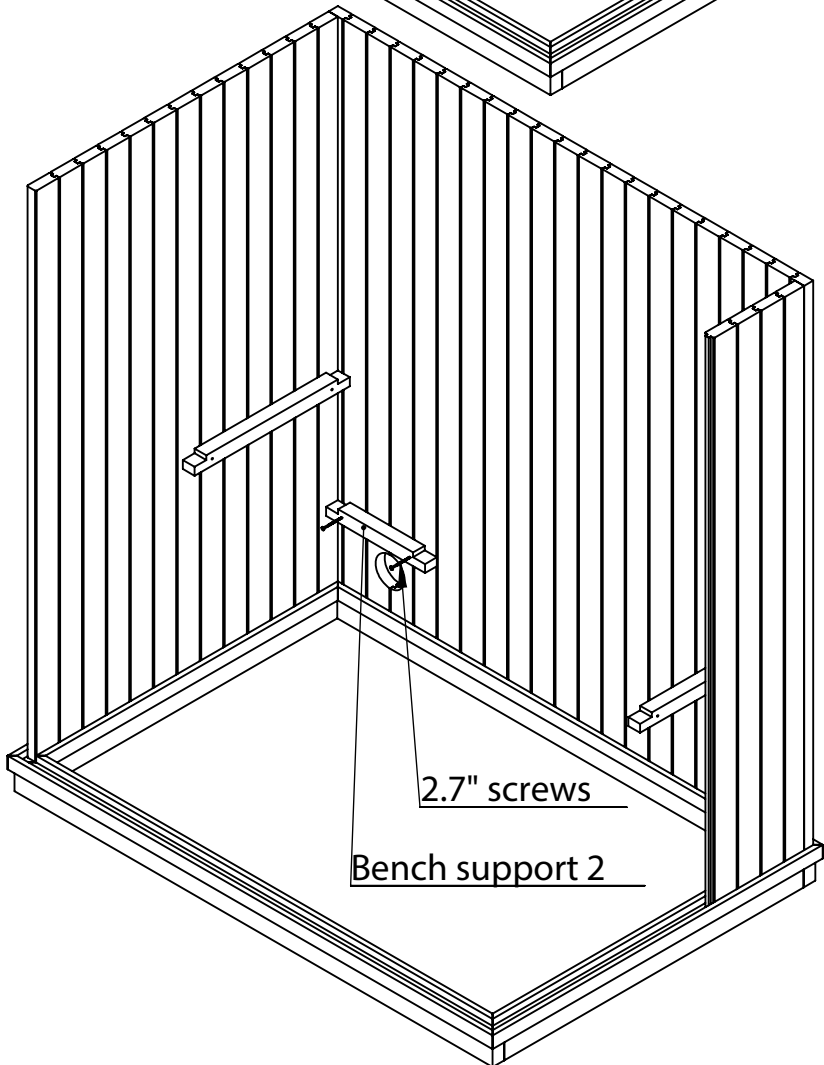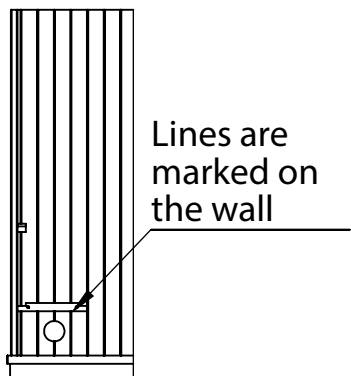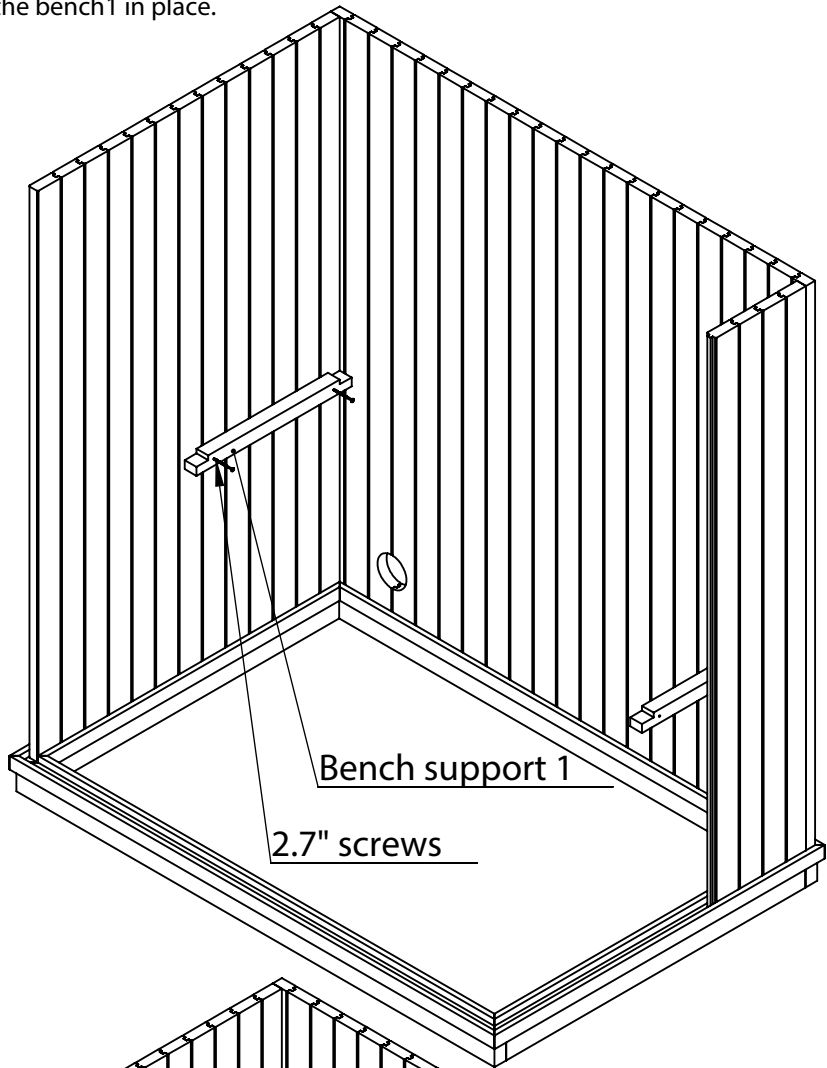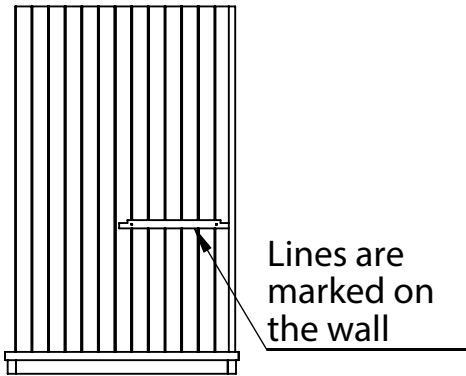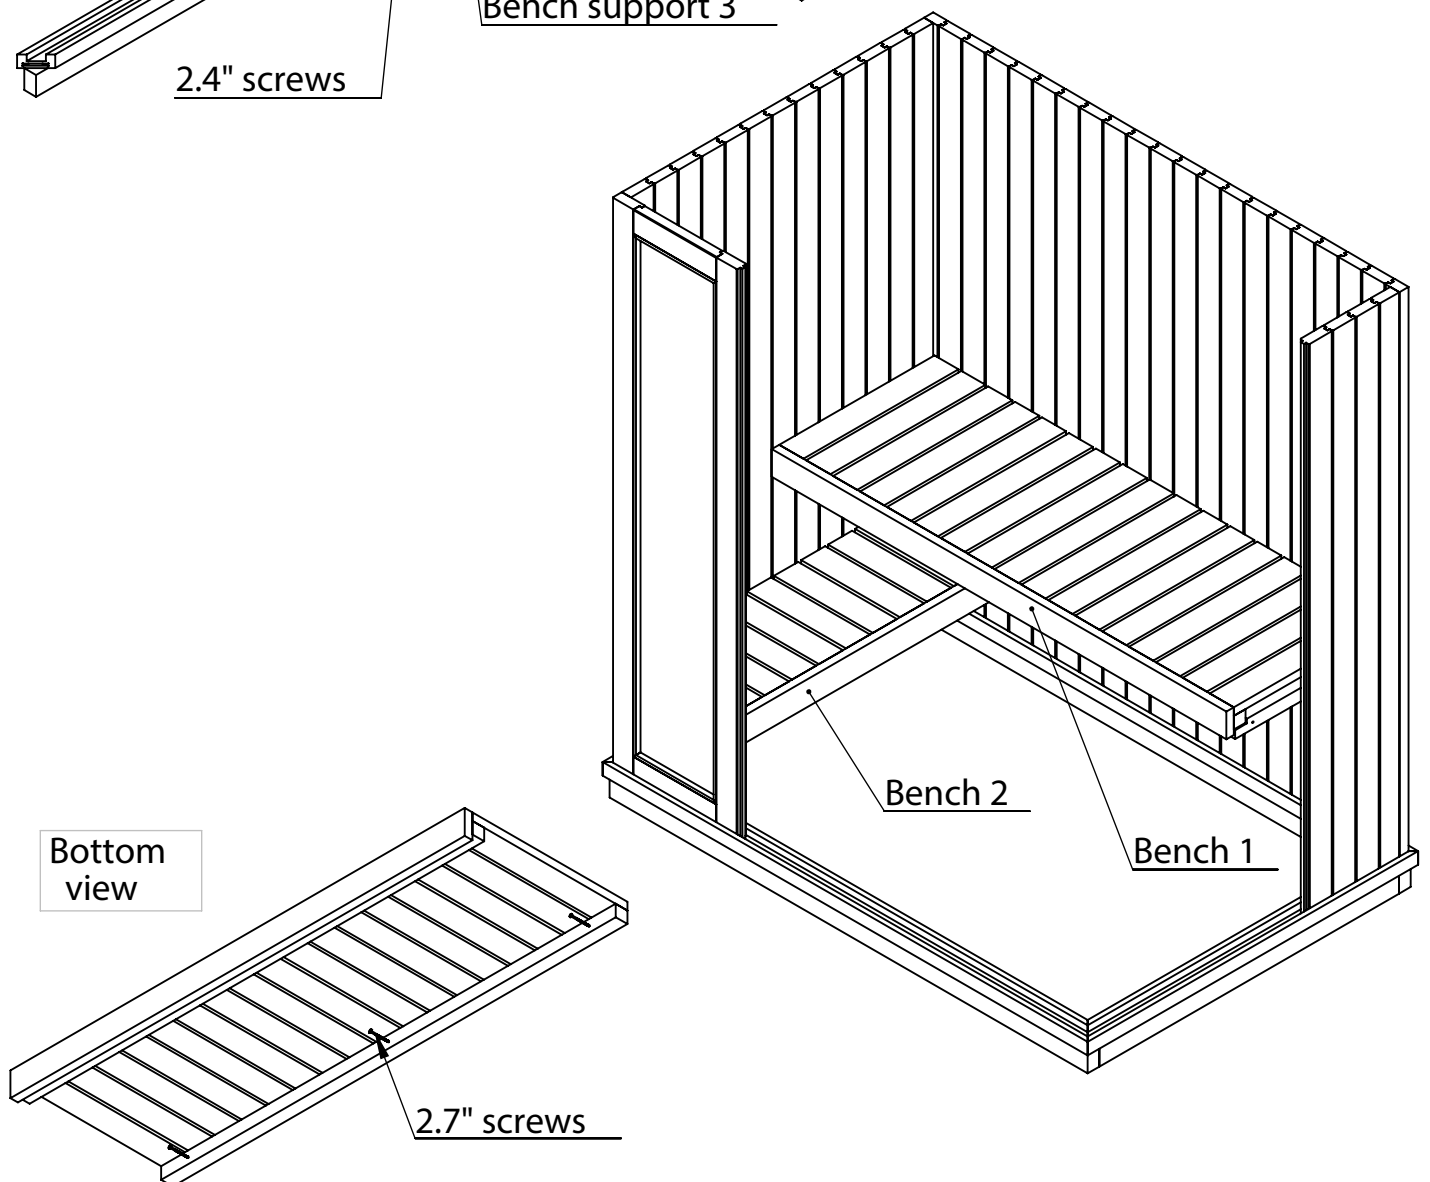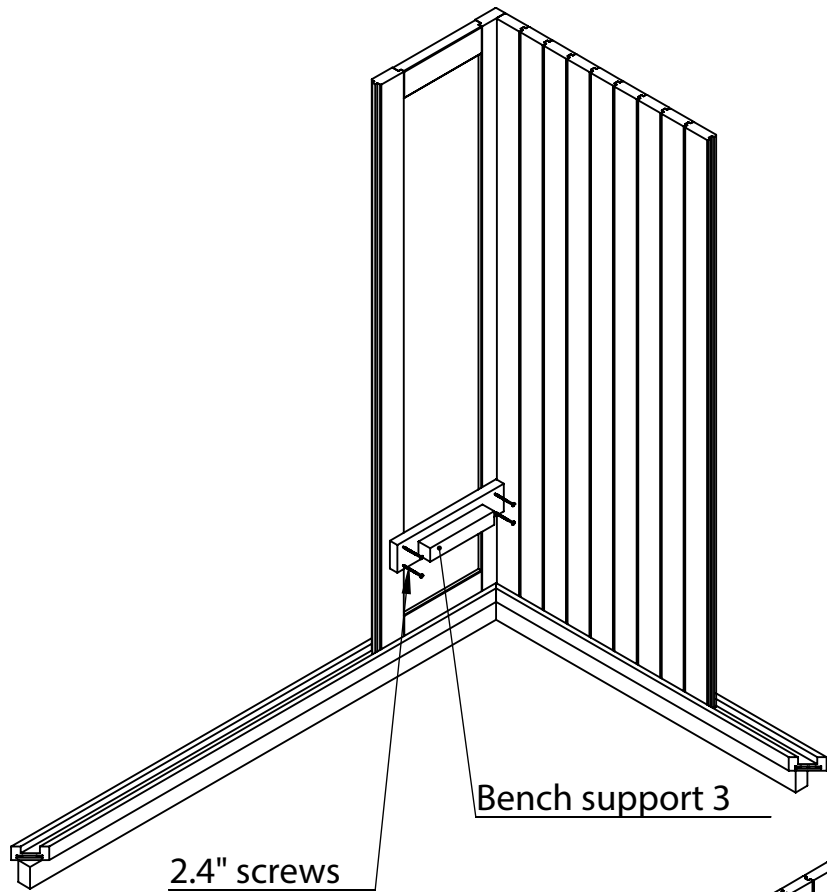Use 2.7" screws to connect the bench supports to the wall. Make sure the supports on both walls are attached at the same height, then put the bench1 in place. Use three 2.7" screws to attach bench 1 to the back wall. Attach the side bench support 1 to the back wall using two 2.7" screws. Side bench support 2 connect to the window section using 2.4" screws. Place the side bench on the supports and fasten






Step 12. Backrest 1 & 2 installation

Center the backrest between the two sides and position it vertically at a height most comfortable for you (typically 8-12" from the bench). Using a level to ensure proper installation, fasten the backrest into place using the 2.4" screws.


Backrest Lighting

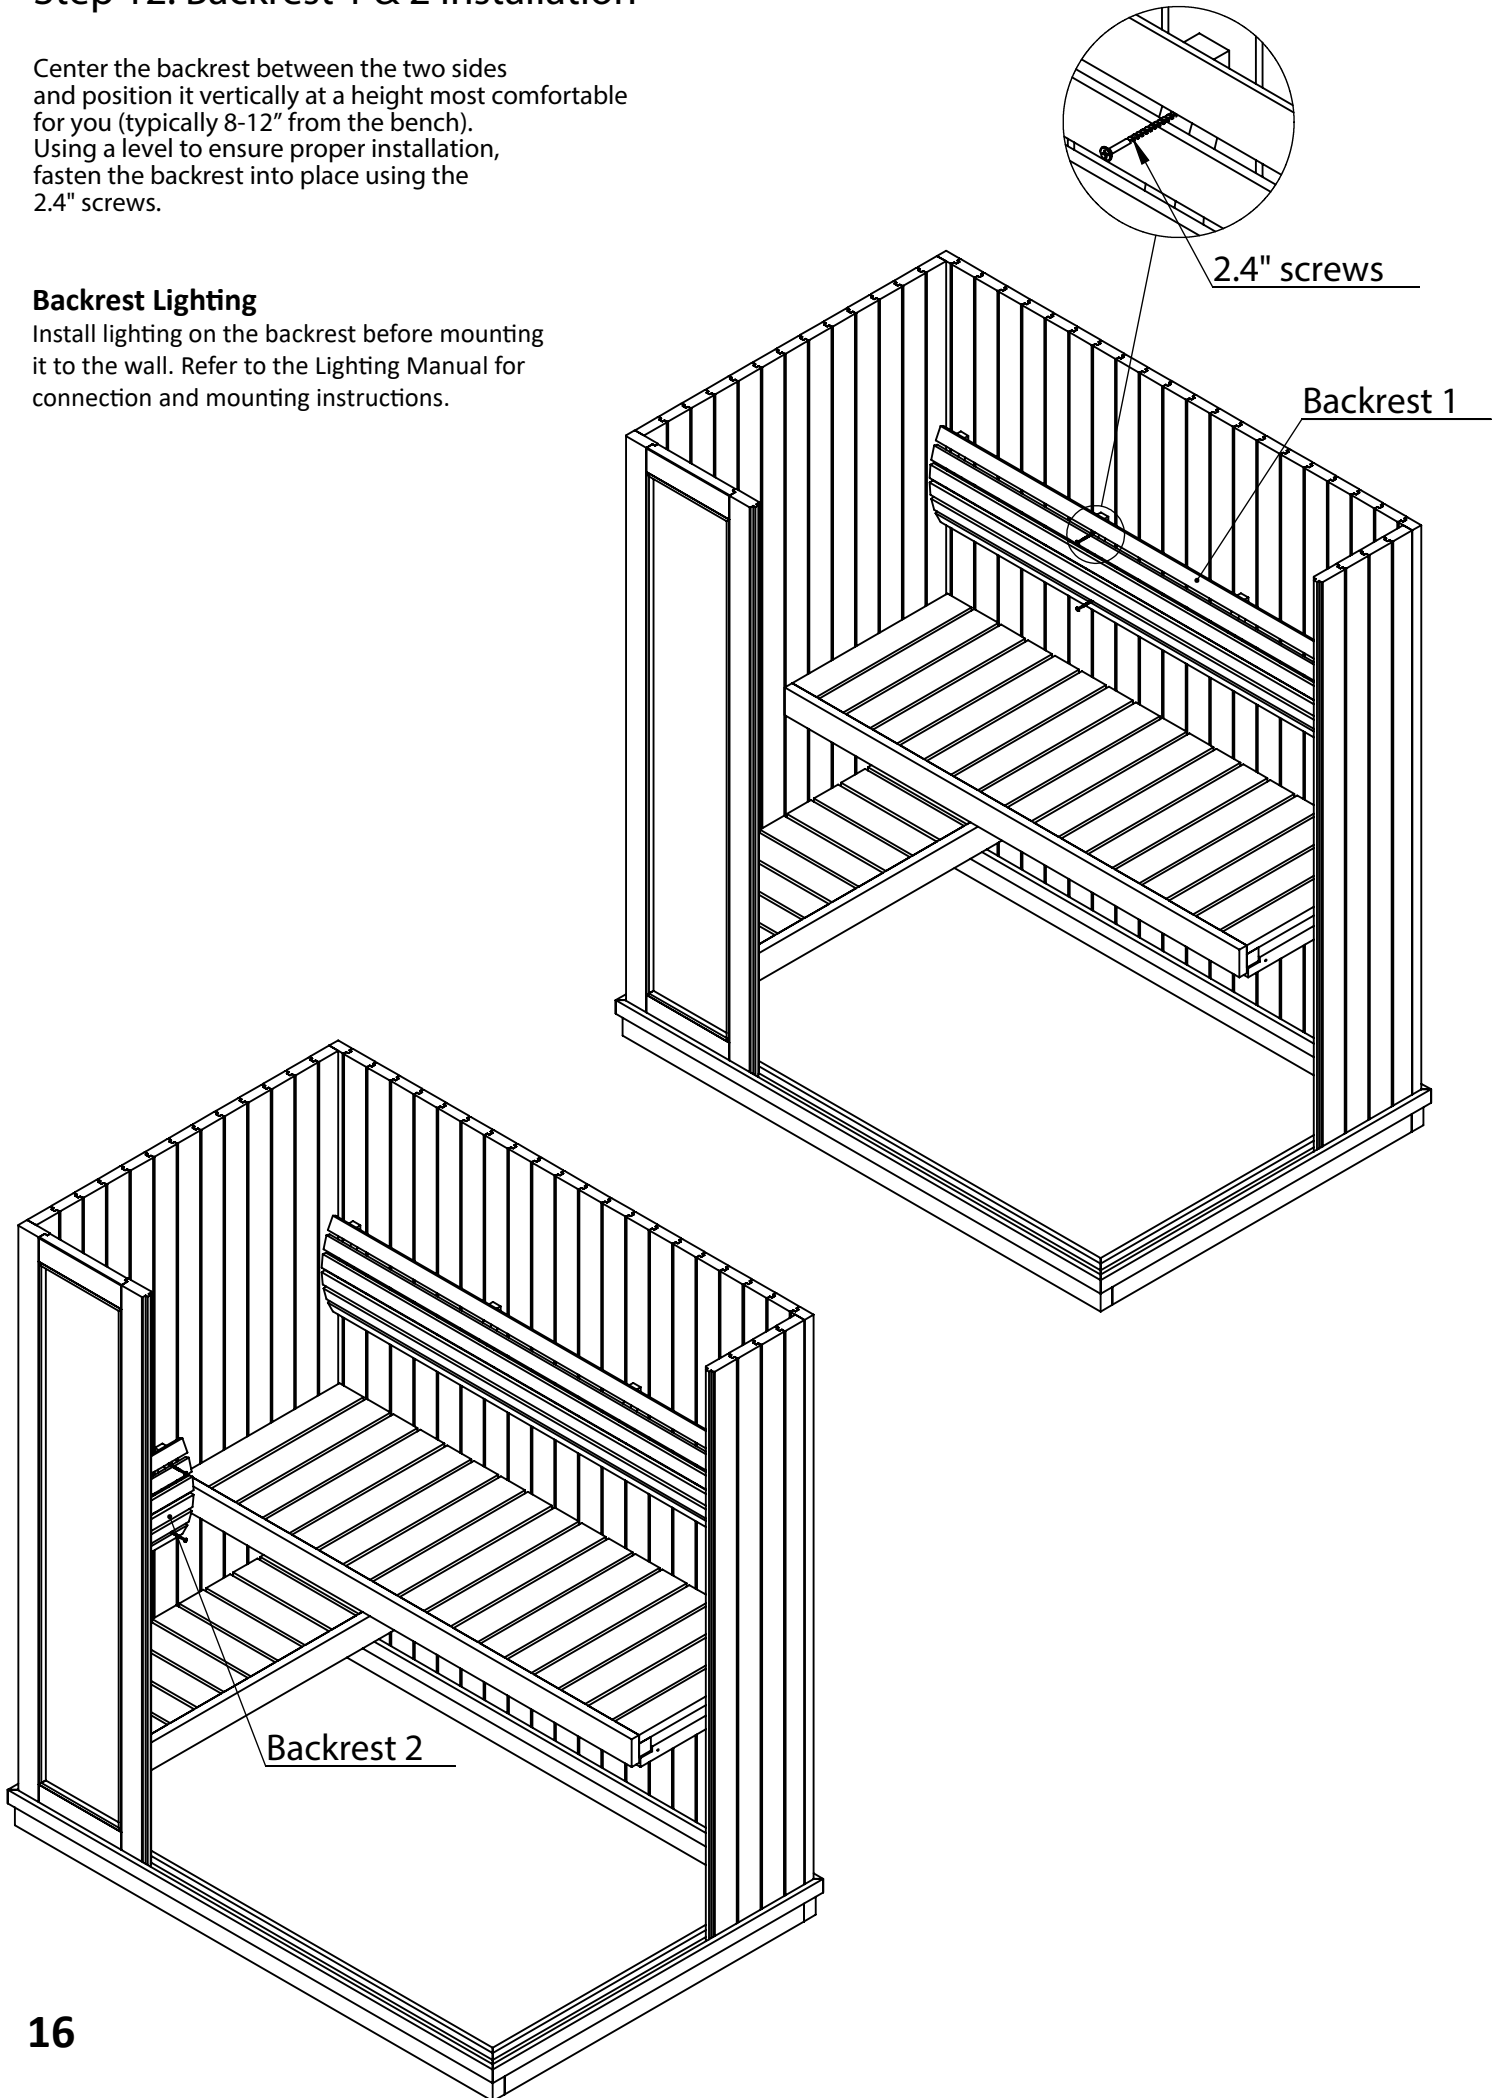Install lighting on the backrest before mounting it to the wall. Refer to the Lighting Manual for connection and mounting instructions.




Step 13. Bench 3 installation

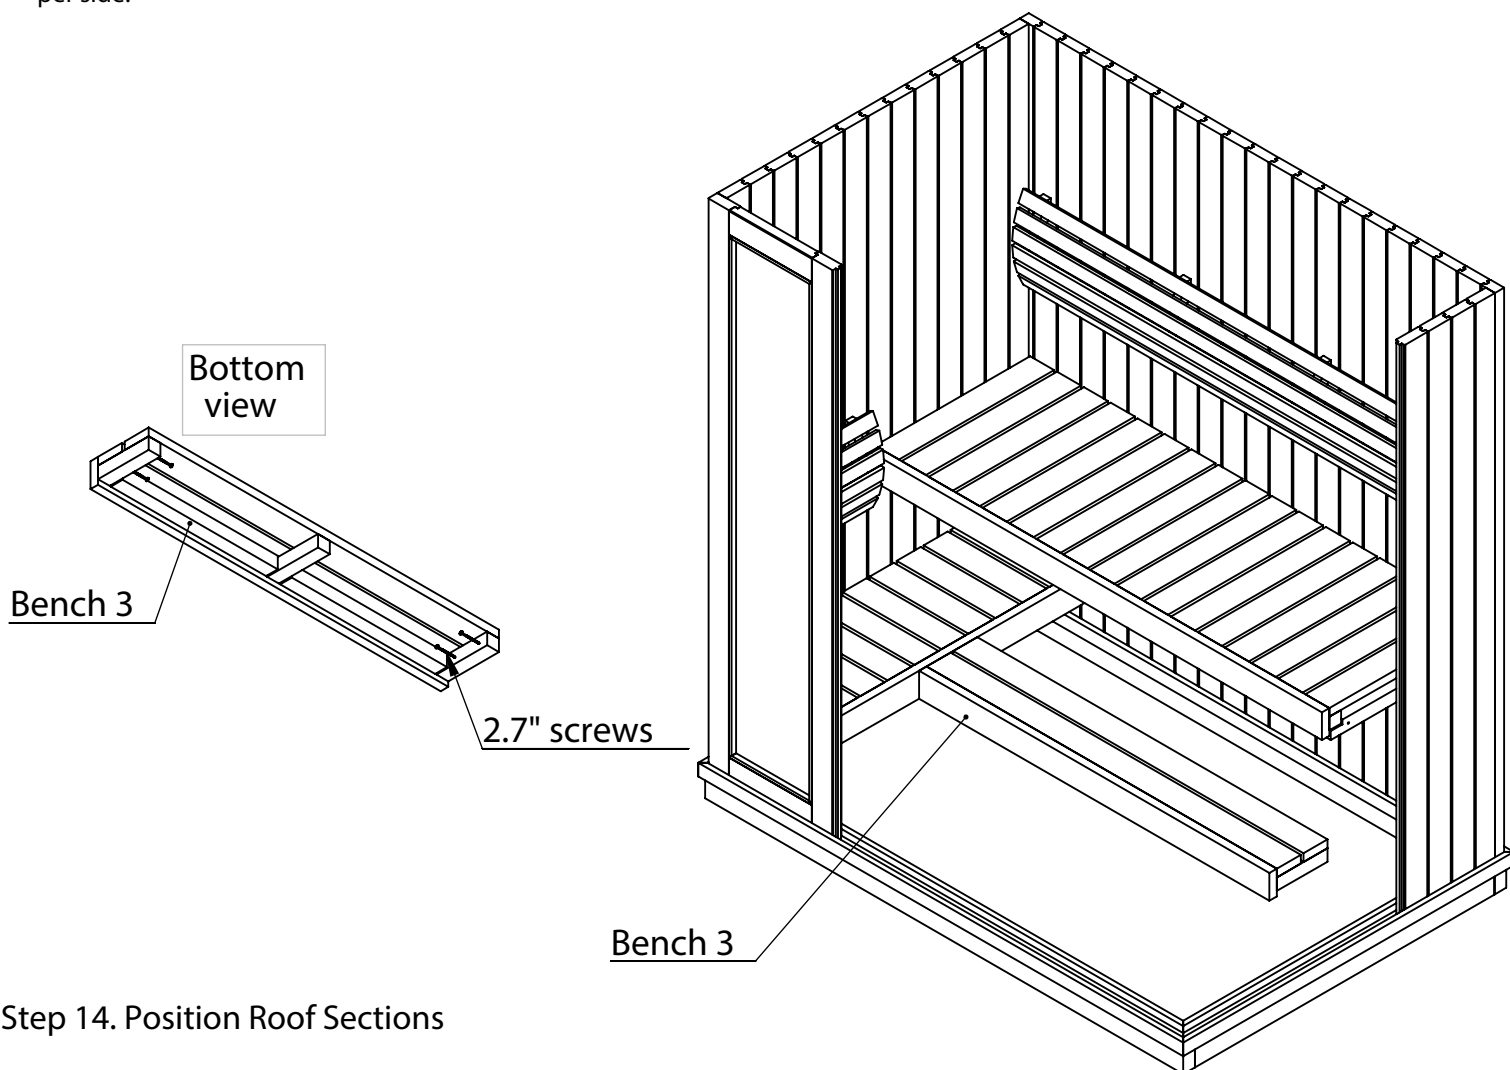Connect bench3 with 2.7" screws from one side to the side bench and from the other side to the side wall. Two screws per side.



Step 14. Position Roof Sections

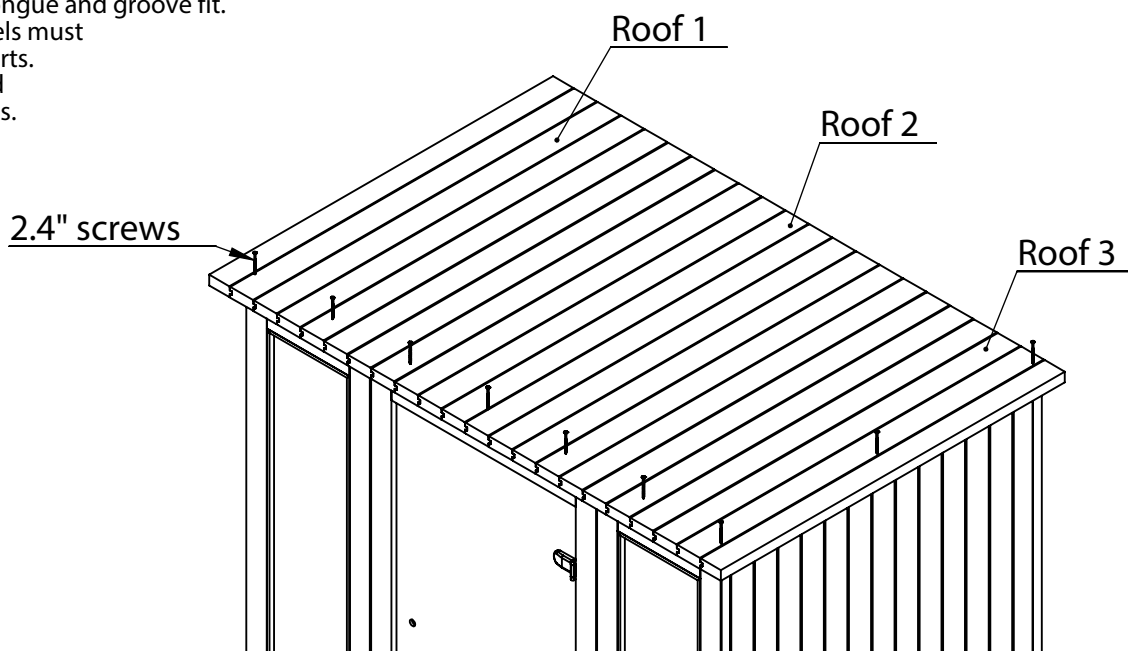Place the roof panels on top of the ceiling supports. Connect the sections via the tongue and groove fit. The back edge of the roof panels must be flush with the ceiling supports. Position both sides equally and connect panels with 2.4" screws.





Step 15. Cornice boards assembly

Each cornice board has a predrilled hole for lamello.

Click lamellos are pre-installed.

Fasten all boards from corners. Allow plenty of space for assembly.

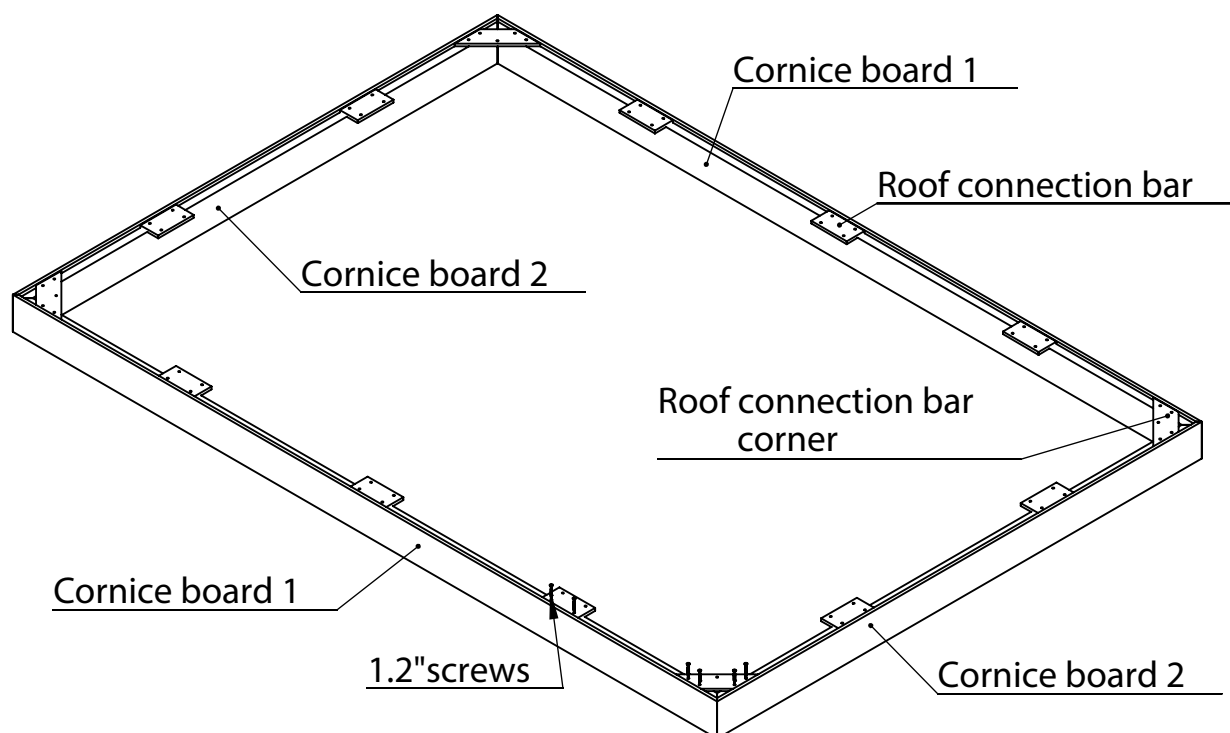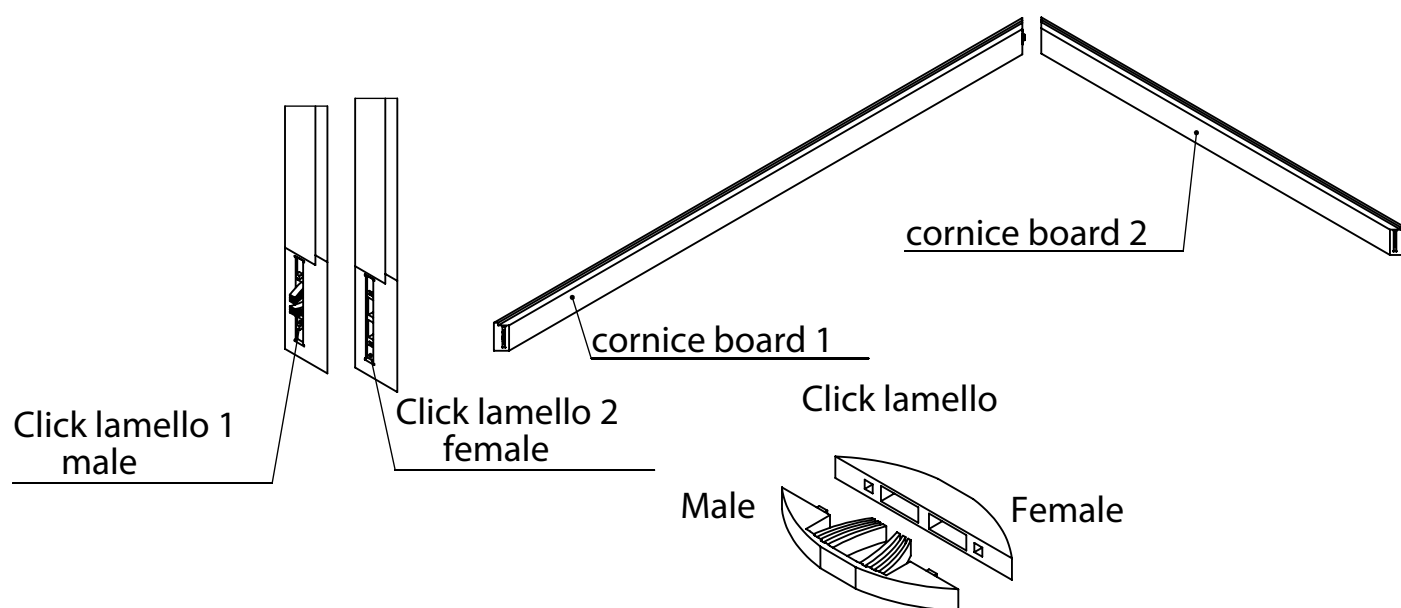Use 1.2" screws to assemble all the connection bars.




Step 16. Cornice boards

Carefully raise the assembly onto the roof.
Connect the cornice boards to the roof, using 1.2" screws.


Cove Lighting

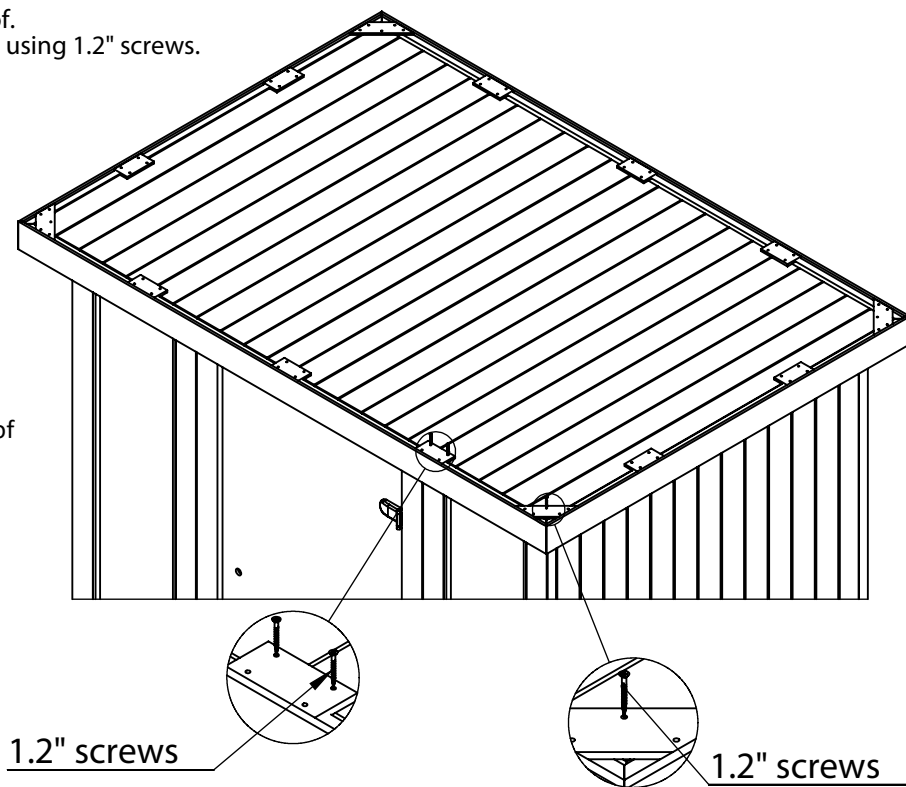Install cove lighting along the underside of the roof around the sauna's exterior perimeter. Refer to the Lighting Manual for connection and mounting details.
Note: The LED strip will run along the front, left, and right sides only.



Step 17. Attach Cover Slats

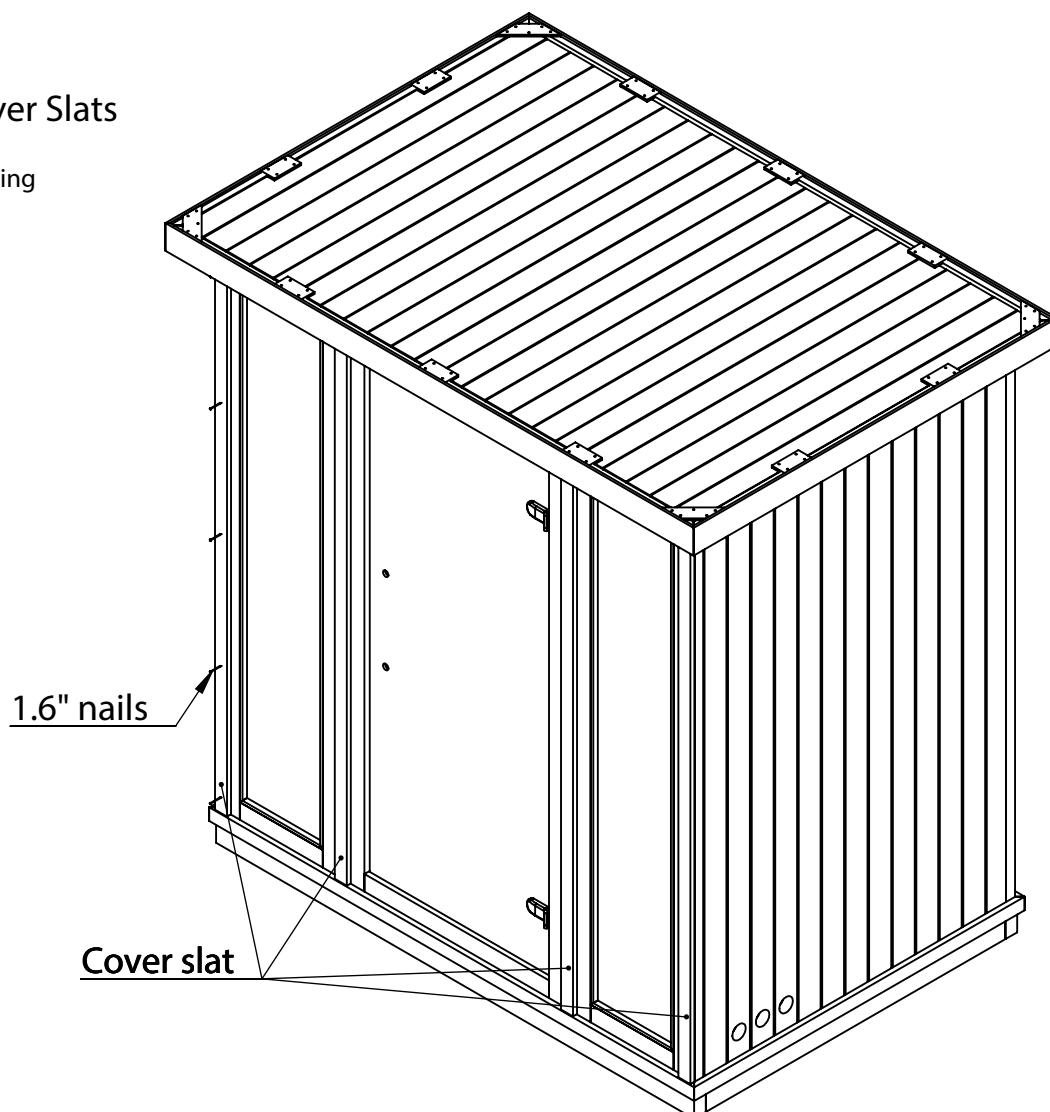Connect the cover slats using 1.6" nails.




Step 18. Attach Heater Cover (After Heater Installation)


Connect the heater cover to the wall with 2.4" screws. Perform this step only after the heater (sold separately) is installed. Follow heater manufacturers safety distances when installing heater guard. Do not use heater guard if safety distances cannot be met.

Heater Installation

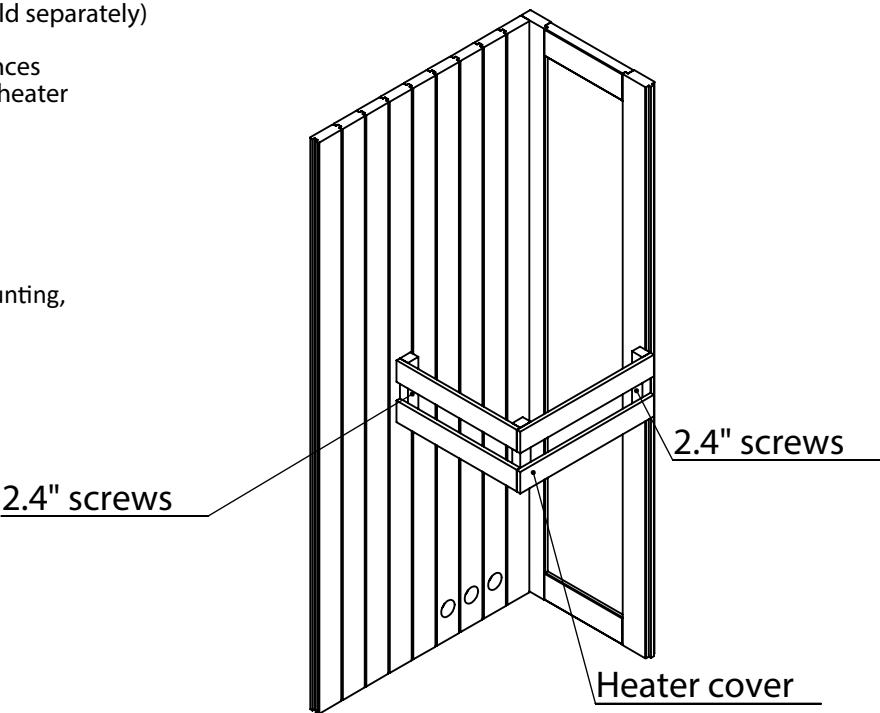Install the sauna heater according to the manufacturer's instructions, including mounting, electrical connections, and required safety clearances.



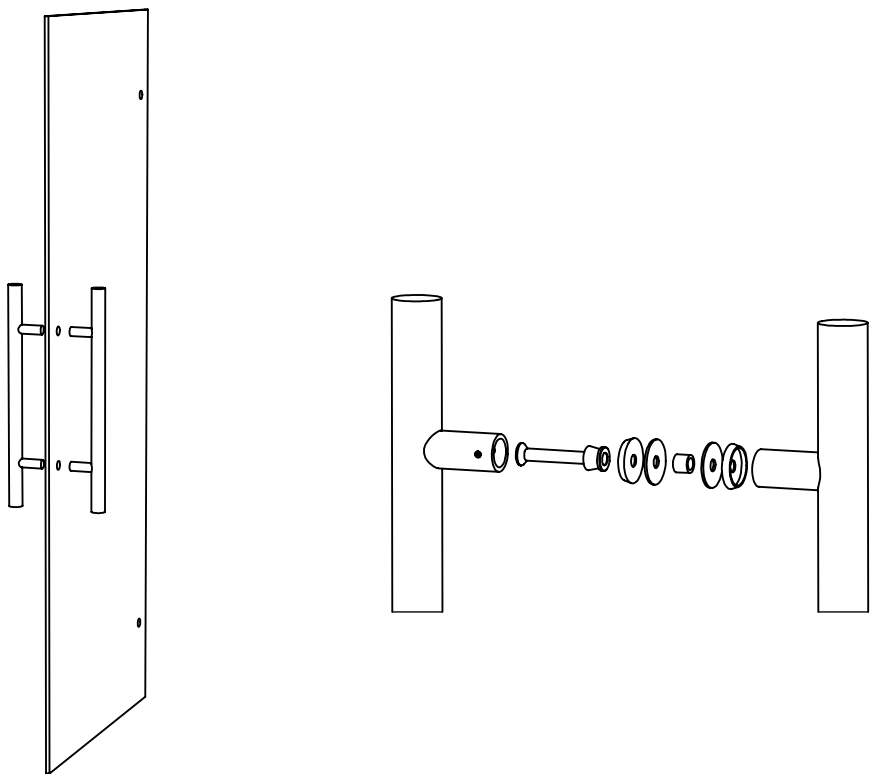Step 19. Attach Door handle



Adjusting hinges

The maximum adjustment range is 5 mm.
You will need 3 mm and 5 mm hexagon keys for
adjusting the hinges (not included).

Step 1: Remove the plastic covers from the hinges

Step 2: Loosen the glass by turning the Bolt.
Attention! Do not remove the glass

Step 3: To move the glass to the left or right,
turn the screws as required. If one screw is turned
counterclockwise, the other must be turned clockwise.
Make sure both screws are tight when you
have completed this step.

Step 4: Tighten the Bolt

